

	FHSS		S-FHSS			T-FHSS		T-FHSS SR	F-4G	FASST C2	FASST C1	Mini-Z T-FHSS	Mini-Z FHSS
	R603GF	R2004GF	R202GF	R203GF	R204GF-E/R214GF-E	R2104GF	R304SB/SBS-E	R324SBS	R334SBS/SBS-E	R404SBS/SBS-E	R604FS/FS-E/ R614FF/R614FS	R603FF/R603FS	RA-42
T3PRKA	x	x	※2	※2	※2	※2							
3GR											x		
3PL	x	x	※2	※2	※2	※2							
3PM/X											x		
3PV	x	x	x	x	x	x	x	x	※3				
4GRS	x	x	x	x	x	x	x	x	※3				
4PK/S/SR										x	x		
4PL	x	x	x	x	x	x							
4PLS	x	x	x	x	x	x	x	x	※3				
4PM			x	x	x	x	x	x	x				
4PM Plus			x	x	x	x	x	x	x		x		※4
4PV			x	x	x	x	x	x	※3				
4PX/R			x	x	x	x	x	x	※3		x		
7PX/R/LE	x	x	x	x	x	x	x	x	x	x	x		
7XC		x	x	x	x	x	x	x	x	x	x		
T10X		x	x	x	x	x	x	x	x	x	x		

※2 S-FHSS receiver is compatible with FHSS and S-FHSS

※3 R334SBS/-E receiver is compatible with T-FHSS and T-FHSS SR

※4 Use FS-RM005

Discontinued

	FHSS	FHSS/S-FHSS	T-FHSS Air	T-FHSS Air Mono	FASST 7ch	FASST Multi	FASST 7ch/Multi	FASSTest18/FASSTest12	T-FHSS Air/FASSTest
4YF	x								
6EX									
6J	x	x	x	x	x	x	x	※1	※1
6K	x	x	x	x	x	x	x		
6L			x	x	x	x	x		
7C					x	x	x	※1	※1
8FG/S					x	x	x	※1	※1
8J	x	x	x	x	x				
10J	x	x	x	x	x	x	x		x
12K	x	x	x	x	x	x	x		x
14SG	x	x	x	x	x	x	x		x
16SZ	x	x	x	x	x	x	x		x
16IZ/16IZS	x	x	x	x	x	x	x		x
18SZ	x	x	x	x	x	x	x		x
18MZ	x	x	x	x	x	x	x		x
18MZ WC	x	x	x	x	x	x	x		x
32MZ	x	x	x	x	x	x	x		x
TM8 Module					x	x	x	※1	※1
TM10 Module					x	x	x	※1	※1
TM14 Module					x	x	x	※1	※1
TMFH Module	x	x	x	x	x	x	x	※1	※1
									CG1760R

*1 FASST mode

 Discontinued