


XERUN USER MANUAL

Brushless Electronic Speed Controller
XERUN XR10 Pro 1S
XERUN XR10 Pro-1S-Heavy Duty

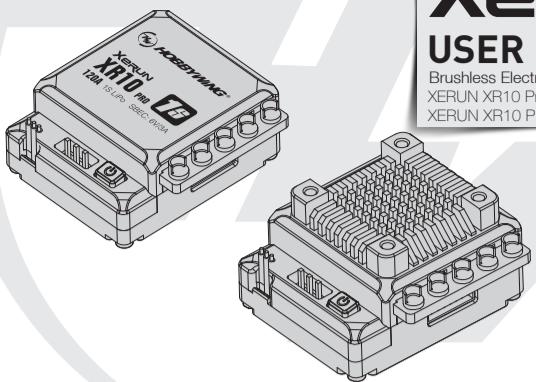

20190311

01 Introduction



Congratulations and thank you for your trust in Hobbywing product. By purchasing the XERUN XR10 Pro 1S, you have chosen a high performance sensorless brushless electronic speed controller! This speed controller is equipped with high-tech features to enhance your experience with Hobbywing brushless power systems. Improper usage and unauthorized modification to our product is extremely dangerous and may damage the product and related devices. Please take your time and read the following instructions carefully before you start using your speed control. We have the right to modify our product design, appearance, features and usage requirements without notification. We, HOBBYWING, are only responsible for our product cost and nothing else as result of using our product.



02 Warnings

- To avoid short circuits, ensure that all wires and connections must be well insulated before connecting the ESC to related devices.
- Ensure all devices are well connected to prevent poor connections and avoid damage to your electronic devices.
- Read through the manuals of all power devices and chassis and ensure the power configuration is rational before using this unit.
- Please use a soldering iron with the power of at least 60W to solder all input/output wires and connectors.
- Do not hold the vehicle in the air and rev it up to full throttle, as rubber tires can "expand" to extreme size or even crack to cause serious injury.
- Stop immediate usage once the casing of the ESC exceeds 90°C/194°F as this may cause damage to both the ESC and motor. Hobbywing recommends setting the "ESC Thermal Protection" to 105°C/221°F (this refers to the internal temperature of the ESC).
- Users must always disconnect the batteries after use as the current on the ESC is consuming continuously if it is connected to the batteries (even if the ESC is turned off). The battery will completely be discharged and may result in damage to the battery or ESC when it is connected for a long period of time. This WILL NOT be covered under warranty.

03 Features


- 5 select-to-use profiles including zero-timing/blinky mode, practice mode, modified mode, stock mode applicable to all 1/12th on-road racing.
- Built-in boost BEC with a maximum output voltage/current of 6V/6A can easily drive various servos without connecting an extra receiver battery.
- Separate PRG/FAN port is able to power an external fan for maximize cooling performance or connect a LCD program box or WiFi module to the ESC.
- With the New WiFi express module from Hobbywing, users are able to program parameters, upgrade firmware and check relevant data during the event using either the iPhone or Android devices.
- New brakes and throttle functions: 100 levels of drag brake, 50 levels of initial brake force, 9 levels of maximum brake force, 20 levels of brake rate, and 30 levels of throttle rate.
- Adjustable brake mode, PWM and brake frequencies for different competitions and control feel.
- Adjustable Turbo Timing & Boost Timing for different applications.
- Softening function (HOBBYWING-initiated) for milder or wilder driving control and better driving efficiency.
- Multiple protections: low-voltage cutoff protection, ESC and motor thermal protection, and fail safe (throttle signal loss protection).
- Data logging for recording the maximum ESC/motor temperature, motor speed/RPM, and others in real time.
- Firmware upgrade via Hobbywing multifunction LCD program box or WiFi Express (item sold separately).

04 Specifications

Model	XERUN XR10 Pro 1S	XERUN XR10 Pro-1S-Heavy Duty
Cont./Peak Current	120A / 830A	
Motor Type	Sensored / Sensorless Brushless Motors	
Applications	1/12 th Top On-road Racing	
Motor Limit (*Note 1)	T>3T (3650-size Motor)	
LiPo/NiMH Cells	15 LiPo/3-4NiMH Only	
BEC Output	6V@3A (Continuous) (Switch-mode)	
Connectors	Input End: No Connectors; Output End: No Connectors	
Size/Weight	37.5x31x15.9mm / 35.6g	37.5x31x31mm / 46.7g
Programming Port	PRG/FAN Port (*The output voltage at this port is the BEC voltage which can be used for powering an external fan.)	

Note 1: The recommended T counts are only applicable with the standard 3650/540 size (3 slot 2 pole) motors when ESCs are in blinky mode.

05 Connections

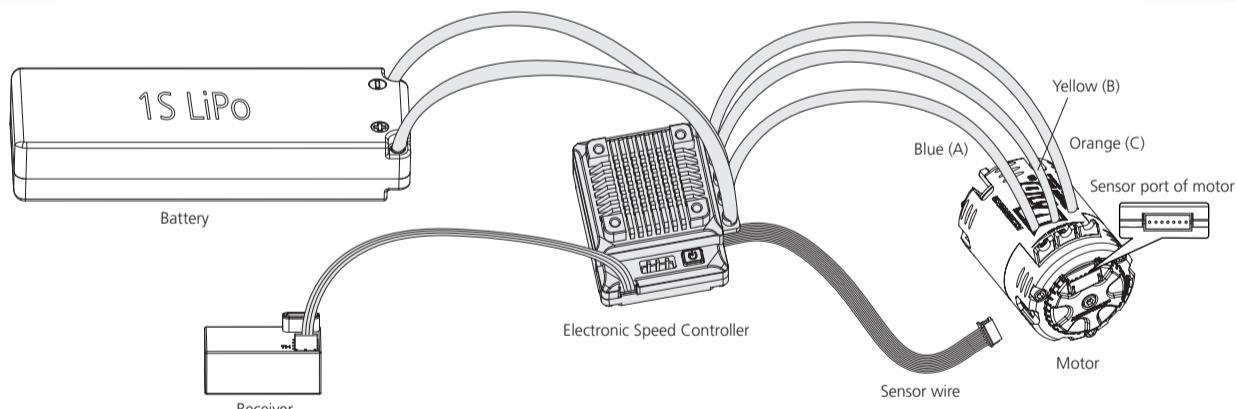

This is an extremely powerful brushless motor system. For your safety and the safety of those around you, we strongly recommend removing the pinion gear attached to the motor before performing calibration and programming functions with this system. It is also advisable to keep the wheels in the air when you turn on the ESC.

1. Motor Wiring

The motor wiring is different between the sensored and the sensorless; please only follow the introductions below.

• Sensored Motor Wiring

There is strict wiring order from the ESC to the motor, the three A/B/C ESC wires must connect to the three A/B/C motor wires correspondingly. Next, connect the ESC sensor port and the motor sensor port with the stock 6-pin sensor cable. If you don't plug the sensor cable in, your ESC will still work in sensorless mode even if you're using a sensored motor.

• Sensorless Motor Wiring

Users do not need to be worried in regards to the connectivity with the A/B/C(ESC and motor) as there is no polarity. You may find it necessary to swap two wires if the motor runs in reverse.

2. Receiver Wiring

The throttle control cable on the ESC has to be plugged into the throttle (TH) channel on the receiver. The throttle control cable has an output voltage of 6V to the receiver and steering servo, hence, no separate battery can be connected to the receiver. Otherwise, your ESC may be damaged.


3. Battery Wiring

Proper polarity is essential. Please ensure positive (+) connects to positive (+), and negative (-) connects to negative (-) when plugging in the battery! When reverse polarity is applied to the ESC from the battery, it WILL damage the ESC. This WILL NOT be covered under warranty!


06 ESC Setup

1 ESC/Radio Calibration

Begin using your ESC by calibrating with your transmitter. We strongly recommend Hobbywing users to use the "Fail Safe" function on the radio system and set (F/S) to "Output OFF" or "Neutral Position". Example of calibrating Neutral range and Endpoint.

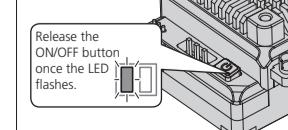

- Turn on the transmitter, ensure all parameters (D/R, Curve, ATL) on the throttle channel are at default (100%). For transmitter without LCD, please turn the knob to the maximum, and the throttle "TRIM" to 0. Please also turn the corresponding knob to the neutral position.
- Start by turning on the transmitter with the ESC turned off but connected to a battery. Holding the "ON/OFF" button, the RED LED on the ESC starts to flash (Note 2: the motor beeps at the same time), and then release the ON/OFF button immediately.
- Note 2: Beeps from the motor may be low sometimes, and you can check the LED status instead.

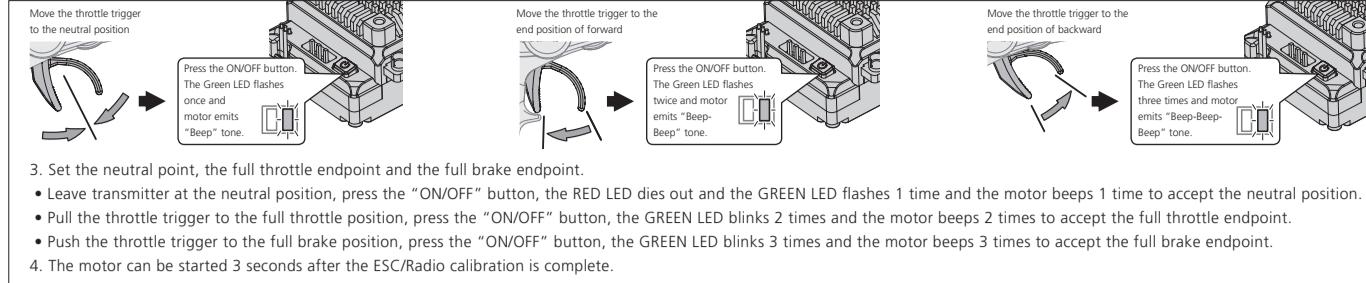

2 Power On/Off

Attention! The temperature of its Aluminum housing may be very high when there is heavy load. For precaution, we recommend users to have a fan blown towards the ESC. (Start with the ESC turned off), press the ON/OFF button to turn on the ESC (the indication LED comes on); and press the ON/OFF button again to turn off the ESC (the indication LED dies out). Note 3: Do not turn off the ESC when the motor is spinning. The sudden stoppage may result in unwanted damage to both the motor and ESC. If there is an emergency, battery plugs can be pulled out to switch the ESC off.

3 Programmable Items

Section	Item	Programmable Items		Parameter Values									
		Forward with Brake	Forward/ Reverse with Brake	Forward and Reverse									
General Setting	1A	Running Mode	Forward with Brake	Forward/ Reverse with Brake	Forward and Reverse								
	1B	Max. Reverse Force	25%	50%	75%	100%							
	1C	Cutoff Voltage	Disabled	Auto	3.0-4.5V Adjustable (Step:0.1V)								
	1D	ESC Thermal Protection	105°C/221°F	125°C/257°F	Disabled								
	1E	Motor Thermal Protection	105°C/221°F	125°C/257°F	Disabled								
	1F	BEC Voltage	6.0V										
	1G	Remote Off	Enabled	Disabled									
Throttle Control	1H	Sensor Mode	Full Sensored										
	2A	Throttle Rate Control	1-30 Adjustable (Step: 1)										
	2B	Throttle Curve	Linear	Customized									
	2C	Neutral Range	4%	6%	8%								
	2D	Coast	0%-20% Adjustable (Step: 1%)										
	2E	PWM Drive Frequency	1K	2K	4K	8K	12K	16K	24K	32K			
	2F	Softening Range	0%	10%	20%-75% Adjustable, Step: 5%								
Brake Control	3A	Drag Brake	0%-100% Adjustable (Step: 1%)										
	3B	Max. Brake Force	0%	12.5%	25%	37.5%	50%	62.5%	75%	87.5%	100%		
	3C	Initial Brake Force	=Drag Brake	0%-50% Adjustable (Step: 1%)									
	3D	Brake Rate Control	1-20 Adjustable (Step: 1)										
	3E	Brake Curve	Linear	Customized									
	3F	Brake Frequency	0.5K	1K	2K	4K	8K	16K					
	3G	Brake Control	Linear	Traditional	Hybrid								
Timing	4A	Boost Timing	0-64° Adjustable (Step: 1°)										
	4B	Boost Timing Activation	RPM	Auto									
	4C	Boost Start RPM	500-35000 RPM Adjustable (Step: 500RPM)										
	4D	Boost End RPM	3000-60000 RPM Adjustable (Step: 500RPM)										
	5A	Turbo Timing	0-64° Adjustable (Step: 1°)										
	5B	Turbo Delay (sec)	Instant 0.05 0.1 0.15	0.2 0.25 0.3 0.35 0.4 0.45 0.5 0.6 0.7 0.8 0.9 1.0	18 24 30 Instant								
	5C	Turbo Increase Rate (degree/0.1sec)	6	12	18	24	30	Instant					
	5D	Turbo Decrease Rate (degree/0.1sec)	6	12	18	24	30	Instant					

Note 4: Item 4C (Boost Start RPM) & item 4D (Boost End RPM) are not programmable if item 4B (Timing Activation) is set to "Auto".

1A. Running Mode

Option 1: Forward with Brake

Racing mode. It has only forward and brake functions.

Option 2: Forward/ Reverse with Brake

This option is known to be the "training" mode with "Forward/ Reverse with Brake" functions. Hobbywing has adopted the "DOUBLE-CCLICK" method, that is your vehicle only brakes on the 1st time you push the throttle trigger forward (brake) (1st push). The motor stops when you quickly release the throttle trigger and then re-push the trigger quickly (2nd push),

2F. Softening Value

It allows users to fine-tune the bottom end, change the driving feel, and maximize the driving efficiency at different track conditions. The higher the "Softening Value", the milder the bottom end. In Modified class, drivers often feel the power of the bottom end is too aggressive. Little throttle input usually brings too much power to the car and make it hard to control at the corners, so HOBBYWING creates this softening function to solve the issue.

Note 6: You can increase the motor mechanical timing accordingly after you set the softening value. Every time you increase the softening value by 5 degrees, you can increase the mechanical timing by 1 degree. For example, if you set the softening value to 20 degrees, then you can increase the mechanical timing by 4 degrees. Please note that you will never increase the mechanical timing by over 5 degrees.

2G. Softening Range

It's the range to which "Softening Value" starts and ends. For example, 0% to 30% will be generated when the user pre-program the "Softening Range" at a value of 30%.

3A. Drag Brake

It is the braking power produced when releasing from full speed to neutral position. This is to simulate the slight braking effect of a neutral brushed motor while coasting. It's not recommended for buggy and monster truck.

(Attention! Drag brake will consume more power and heat will be increased, apply it cautiously.)

3B. Max. Brake Force

This ESC provides proportional braking function; the braking effect is decided by the position of the throttle trigger. It sets the percentage of available braking power when full brake is applied. Large amount will shorten the braking time but it may damage your pinion and spur.

3C. Initial Brake Force

It is also known as "minimum brake force". It is the force when pushing throttle trigger from neutral zone to the initial brake position. To get a smoother braking effect, the default is equal to the drag brake.

3D. Brake Rate Control

It's adjustable from 1 to 20 (step: 1), the lower the brake rate, the more limit on the brake response. A suitable rate can aid the driver to brake his vehicle correctly. Generally, you can set it to a high value to have a quick brake response.

3E. Brake Curve

This item is used for regulating the relation between the throttle range in brake zone and the brake force. The default setting is linear. You can change it to non-linear via a LCD program box and a PC (HOBBYWING USB LINK software needs to be installed on the PC.) for different braking effect.

3F. Brake Frequency

The brake force will be larger if the frequency is low; you will get a smoother brake force when the value is higher.

3G. Brake Control

Option 1: Linear

Hobbywing has recommended using this mode under all circumstances. The braking effect is a bit weaker in this mode than in Traditional brake mode, but it's easy to control and brings great control feel.

Option 2: Traditional

This brake mode is the same as to the XERUN series of ESCs, the brake force is stronger.

Option 3: Hybrid

The ESC switches the brake mode between Linear and Traditional as per the vehicle speed to prevent the slide (between tires and track) from affecting the braking effect.

Note 7: Please select the right mode for your vehicle as per the track condition, motor performance, and etc.

4A. Boost Timing

It is effective within the whole throttle range; it directly affects the car speed on straightaway and winding course. The ESC adjusts the timing dynamically as per the RPM (when "Boost Timing Activation" set to "RPM") or throttle amount (when "Boost Timing Activation" set to "Auto") in the operation. The Boost Timing is not constant but variable.

4B. Boost Timing Activation

Option 1: RPM

In RPM mode, the ESC adjusts the Boost Timing dynamically as per the motor speed (RPM). The actual Boost Timing is 0 when the RPM is lower than the Boost Start RPM. The Boost Timing changes as per the RPM when the RPM change is between the Boost Start RPM and the Boost End RPM. For example, if the Boost Timing is set to 5 degrees and the Boost Start RPM is 10000, the Boost End RPM is 15000. The Boost Timing corresponds to different RPM is shown below. When the RPM is higher than the Boost End RPM, the actual Boost Timing is the value you had previously set.

RPM (Motor Speed)	<10000	10001-11000	11001-12000	12001-13000	13001-14000	14001-15000	>15000
Actual Boost Timing	0 Degree	1 Degree	2 Degrees	3 Degrees	4 Degrees	5 Degrees	5 Degrees

Option 2: Auto

In Auto mode, the ESC adjusts the Boost Timing dynamically as per the throttle amount. Only at full throttle, the actual Boost Timing is the value you had previously set.

4C. Boost Start RPM

This item defines the RPM at which Boost Timing is activated. For example, when the Boost Start RPM is set to 5000, the ESC will activate the corresponding Boost Timing when the RPM goes above 5000. The specific value is determined by the Boost Timing and the Boost End RPM you had previously set.

4D. Boost End RPM

This item defines the RPM at which Boost Timing (you specifically set) is applied. For example, when Boost Timing is set to 10 degrees and the Boost End RPM to 15000, the ESC will activate the Boost Timing of 10 degrees when the RPM goes above 15000. The ESC will adjust the Boost Timing accordingly as per the actual RPM when the RPM goes below 15000.

5A. Turbo Timing

This item is adjustable from 0 degree to 64 degrees, the corresponding turbo timing (you set) will initiate at full throttle. It's usually activated on long straightaway and makes the motor unleash its maximum potential.

5B. Turbo Delay

When "TURBO DELAY" is set to "INSTANT", the Turbo Timing will be activated right after the throttle trigger is moved to the full throttle position. When other value(s) is applied, you will need to hold the throttle trigger at the full throttle position (as you set) till the Turbo Timing initiates.

5C. Turbo Increase Rate

This item is used to define the "speed" at which Turbo Timing is released when the trigger condition is met. For example, "6 degs/0.1sec" refers to the Turbo Timing of 6 degrees that will be released in 0.1 second. Both the acceleration and heat is higher when the "Turbo increase rate" is of a larger value.

5D. Turbo Decrease Rate

After the Turbo Timing is activated and the trigger condition turns to not be met (i.e. vehicle slows down at the end of the straightaway and gets into a corner, full throttle turns to partial throttle, the trigger condition for Turbo Timing turns to be not met), if you disable all the Turbo Timing in a moment, an obvious slow-down like braking will be felt and cause the control of vehicle to become bad. If the ESC can disable the Turbo Timing at some "speed", the slow-down will be linear and the control will be improved.

Warning! Boost Timing & Turbo Timing can effectively improve the motor efficiency; they are usually used in competitions. Please take some time to read this manual and then set these two items carefully, monitor the ESC & motor temperatures when you have a trial run and then adjust the Timing and FDR accordingly as aggressive Timings and FDR may cause your ESC or motor to be burnt.

4 Preset Modes

In order to make one firmware applicable to all different racing conditions, there are five "easy-to-select" preset modes (as shown below). Users are able to change the settings of the modes provided (and rename those modes) as per the control feel, track, and etc. For example, the name can be changed from "Modify" to "IFMAR2016_MOD_4.5" to indicate the race was ran with a 4.5T motor at IFMAR2016. This can be saved for future reference as well.

Preset Modes for Different Racing:

Mode #	Modes/Profiles	Applications
1	Zero Timing	All Stock racing requiring users to use Zero timing (/blinky) program on their ESCs
2	TC-Modify	Modify class of 1/12 th on-road racing
3	Practice	(With Reverse function activated,) practice and sport
4	Stock-13.5T	13.5T Open Stock class of 1/12 th on-road racing
5	Stock-17.5T	17.5T Open Stock class of 1/12 th on-road racing

Default Settings of Different Preset Modes:

Section	Item	Programmable Item	Zero Timing	TC-Modify	Practice	Open-BL 13.5T	Open-BL 17.5T
General Setting	1A	Running Mode	For/Brake	For/Brake	For/Rev/Brake	For/Brake	For/Brake
	1B	Max. Reverse Force	25%	25%	25%	25%	25%
	1C	Cutoff Voltage	Auto	Auto	Auto	Auto	Auto
	1D	ESC Thermal Protection	105°C/221°F	105°C/221°F	105°C/221°F	105°C/221°F	105°C/221°F
	1E	Motor Thermal Protection	105°C/221°F	105°C/221°F	105°C/221°F	105°C/221°F	105°C/221°F
	1F	BEC Voltage	6.0V	6.0V	6.0V	6.0V	6.0V
	1G	Remote Off	Enabled	Enabled	Enabled	Enabled	Enabled
	1H	Sensor Mode	Full Sensored				
	2A	Throttle Rate Control	30	20	15	30	30
	2B	Throttle Curve	Linear	Linear	Linear	Linear	Linear
Throttle Control	2C	Neutral Range	6%	6%	6%	6%	6%
	2D	Coast	0%	0%	0%	0%	0%
	2E	PWM Drive Frequency	2K	8K	8K	4K	4K
	2F	Softening Value	0 Deg				
	2G	Softening Range	0%	0%	0%	0%	0%
	3A	Drag Brake	0%	10%	0%	5%	5%
	3B	Max. Brake Force	100%	87.5%	100%	87.5%	87.5%
	3C	Initial Brake	=Drag Brake	=Drag Brake	=Drag Brake	=Drag Brake	=Drag Brake
	3D	Brake Rate Control	10	10	20	20	20
	3E	Brake Curve	Linear	Linear	Linear	Linear	Linear
Timing	3F	Brake Frequency	1K	1K	1K	1K	1K
	3G	Brake Control	Linear	Linear	Linear	Linear	Linear
	4A	Boost Timing	0 Deg	0 Deg	0 Deg	30 Degs	30 Degs
	4B	Boost Timing Activation	RPM	RPM	RPM	RPM	RPM
	4C	Boost Start RPM	6000	1500	6000	1500	1000
	4D	Boost End RPM	22500	25000	22500	12000	20000
	5A	Turbo Timing	0 Deg	20 Degs	0 Deg	25 Degs	35 Degs
	5B	Turbo Delay (sec)	0.3	0.1	0.3	0.2	0.1
	5C	Turbo Increase Rate (deg/0.1sec)	12	18	12	24	24
	5D	Turbo Decrease Rate (deg/0.1sec)	24	24	24	18	18

5 ESC Programming

1) Program your ESC with a multifunction LCD program box

You can program this XR10 Pro 1S ESC via a multifunction LCD program box or via a multifunction LCD program box & a PC (HOBBYWING USB LINK software needs to be installed on the PC). Before programming, you need to connect your ESC and the LCD program box via a cable with two JR male connectors and turn on the ESC; the boot screen will show up on the LCD. Press any button on the program box to initiate the communication between your ESC and the program box. Seconds later, "CONNECTING ESC" will be displayed, and indicates the following parameters. You can adjust the setting via "ITEM" & "VALUE" buttons, and press the "OK" button to save new settings to your ESC.

2) Program your ESC with a WiFi Module

The XR10 Pro 1S ESC can also be programmed via a WiFi module along with smart phone devices (HOBBYWING WiFi LINK software needs to be installed on the smart phone). Before programming, users will need to plug the programming cable on the WiFi module into the programming port on ESC and switch on the ESC. For detailed information about ESC programming via WiFi module, please refer to the user manual of Hobbywing's WiFi Express.

Attention! This ESC has a separate programming port. Please don't use the throttle control cable (also called Rx cable) on the ESC to connect the program box; otherwise the program box won't function.

3) Data Checking

The ESC is able to record the maximum ESC temperature, maximum motor temperature, minimum battery voltage and maximum motor speed in operation. It automatically saves the recorded data to the designated area when you turn off the ESC after a run. You can check those data via a multifunction LCD program box whenever necessary. Users need to switch on the ESC after connection between the program box and the ESC has been established. Press the "R/P" button on any "item" page followed by pressing the "R/P" button again multiple times. The following 5 item pages will be displayed circularly: Mode → ESC Temperature → Motor Temperature → Min Voltage → Max RPM.

Attention!

- Press the "VALUE" button on any data-recording page can get you into the next preset mode. Please note that improper operation will get you into other preset mode(s).
- Press the "ITEM" button on any data-recording page can get you to the parameter setting page of the current preset mode; press the "R/P" button if you want to return to the data-recording page

6 Factory Reset

• Restore the default values with a multifunction LCD program box

After connecting the program box to the ESC, continue to press the "ITEM" button on the program box until you see the "RESTORE DEFAULT" item, and press "OK" to factory reset your ESC.