



Instruction Manual Book

Item code: BH196

P-80 SHOOTING STAR

1980mm 77,95" W/Tail Pipe and
Electric Retract 80N - 100N ARF CARBON

95% PRE BUILT
ARF
ALMOST READY TO FLY



95% ALMOST READY TO FLY

SPECIFICATION:

- Wingspan: 1980mm (77.95 in)
- Length: 1776mm (69.92 in)
- Flying weight: 8000-8500gr
- Wing area: 63.3 dm²
- Retract gear type: Electric Retract and Brakes are included

Parts listing required (not included):

- Radio: 9 channels minimum.
- Servo: 2 aileron; 2 flap; 2 elevator; 1 rudder; 1 Nose steering (Mount 18mm X 36mm) (not included)
- Engine: Turbine Jet Engine with 80-100N (not included)
- Plane type: Jet Scale



UNDER SAFETY PRECAUTIONS

This radio control model is not a toy!

- It is highly recommended that first-time builders seek advice of experienced modelers before beginning assembly.
- Assemble this kit only in places out of children's reach!
- Take enough safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation!
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.

TABLE OF CONTENTS

▶ Introduction.....	2	▶ Installing the wing to fuselage	22
▶ Warranty.....	3	▶ Installing the horizontal stabilizer	
▶ Disclaimer.....	3	to fuselage	24
▶ Safety precaution	3	▶ Installing the nose gear retract	26
▶ Important building notes	3	▶ Nose door installing	28
▶ Suggestion	3	▶ Installing the fuselage nose	29
▶ Flight warnings	4	▶ Installing the exhaust pipe	30
▶ Covering tools	4	▶ Installing the engine	31
▶ Adhesives and required tools	4	▶ Installing the fuel tank.....	33
▶ Academy of model aeronautics national		▶ Fuel tank sytem	34
Model aircraft safety code	4	▶ Installing the receiver, battery, controller box	
▶ Parts listing (not included)	6	and switch	36
▶ Tools & supplies needed	6	▶ Installing keine bombe!.....	38
▶ Symbols used throughout this instruction		▶ Installing the cockpit fuselage	40
Manual comprise	6	▶ Balancing.....	42
▶ Installing the ailerons and flaps	9	▶ Lateral balance	42
▶ Installing the aileron and flap servo	10	▶ Control throws	44
▶ Installing the main landing gear		▶ Flight preparation pre flight check	44
and wheel well	14	▶ For your radio installation basic connection	
▶ Installing the light wing	16	For airplane and adjustment of servos	45
▶ Installing the horizontal stabilizer	17	▶ Main gear dimensional detail.....	46
▶ Installing the horizontal stabilizer servos	17	▶ Nose gear dimensional detail	46
▶ Installing the vertical stabilizer.....	19	▶ Exploded view	47
▶ Installing the vertical stabilizer servos	19	▶ Decoration	48
▶ Installing the air intake.....	21	▶ I/c flingt warnings.....	49

INTRODUCTION

Thank you for purchasing BlackHorse Model products. With over 19 years experience in production and fly testing, BlackHorse Model is committed to bring the best quality products and good service to customers. Along with a team of creative engineers and skilled workers, we will always accompany with customers by our great experiences, fully enthusiasm...which will burn our passion!! Joining with us to explore and conquer challenges in the sky...

Your satisfaction is our success. Please read through this manual before starting construction.

Academy of Model Aeronautics: If you are not already a member of the AMA, please join! The AMA is the governing body of model aviation and membership provides liability insurance coverage, protects modelers' rights and interests and is required to fly at most R/C sites.

Academy of Model Aeronautics
5151 East Memorial Drive Muncie IN 47302-9252

Tele. (800) 435-9262
Fax. (765) 741-0057

Or via the Internet at: <http://www.modelaircraft.org>



WARRANTY

Black Horse Model guarantees the component parts in this kit to be free from defects in both material and workmanship at the date of purchase by the purchaser.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the Product.

This warranty does not cover damage due to improper installation, operation, maintenance, or attempted repair by anyone other than Black Horse Model.

Further, Black Horse Model reserves the right to change or modify this warranty without notice.

DISCLAIMER

Read this disclaimer carefully before using this product. Please strictly follow the instruction manual to assemble and use this.

In that Black Horse Model has no control over the final assembly or material used for final assembly, Black Horse Model is not responsible for loss of use, or other incidental or consequential damages.

Furthermore, Black Horse Model cannot be held liable for personal injury or property damage caused by the use or misuse of Black Horse Model products. By the act of using the user-assembled products, the user accepts all resulting liability.

SAFETY PRECAUTION

- This is not a toy and pilots must be over the age of 14
- Be sure that no other flyers are using your radio frequency.
- Do not smoke near fuel
- Store fuel in a cool, dry place, away from children and pets.
- Wear safety glasses.
- The glow plug clip must be securely attached to the glow plug.
- Do not flip the propeller with your fingers.
- Keep loose clothing and wires away from the propeller.
- Do not start the engine if people are near. Do not stand in line with the side of the propeller.
- Make engine adjustments from behind the propeller only. Do not reach around the spinning propeller.
- Moisture causes damage to electronics. Avoid water exposure to all equipment not specifically designed and protected for this purpose.

IMPORTANT BUILDING NOTES

- Please trial fit all the parts. Make sure you have the correct parts and that they fit and are aligned properly before gluing! This will assure proper assembly. This kit is hand made from natural materials, every plane is unique and minor adjustments may have to be made. However, you should find the fit superior and assembly simple.
- The painted and plastic parts used in this kit are fuel proof. However, they are not tolerant of many harsh chemicals including the following: paint thinner, C/A glue accelerator, C/A glue debonder and acetone. Do not let these chemicals come in contact with the colors on the covering and the plastic parts.
- Some parts included in this kit such as the cowl or wheel pants are made of fiberglass, the fibers of which may cause eye, skin and respiratory tract irritation. Never blow into a part to remove fiberglass dust, as the dust will blow back into your eyes. Always wear safety goggles, a particle mask and rubber gloves when grinding, drilling and sanding fiberglass parts. Vacuum the parts and the work area thoroughly after working with fiberglass parts.

SUGGESTION

To avoid scratching your new airplane, do not unwrap the pieces until they are needed for assembly. Cover your workbench with an old towel or brown paper, both to protect the aircraft and to protect the table. Keep a couple of jars or bowls handy to hold the small parts after you open the bag.

FLIGHT WARNINGS

- Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc.
- NEVER fly your aircraft close to people or built up areas.
- NEVER fly near power lines, aerials or other dangerous areas including airports, motorways etc.
- NEVER fly in wet conditions or on windy or stormy days.
- ALWAYS adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.
- THE PROPELLER IS DANGEROUS Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at ALL times.
- NEVER use damaged or deformed propellers or spinners.
- Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.
- DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

FLIGHT WARNINGS

- When ready to fly, first extend the transmitter aerial.
- Switch on the transmitter.
- Switch on the receiver.
- Check that the wings are correctly fitted to the fuselage.
- Operate the control sticks on the transmitter and check that the control surfaces move freely and in the CORRECT directions.
- Check that the transmitter batteries have adequate power.
- ALWAYS take off into the wind.
- If the model does not respond correctly to the controls, land it as soon as possible and correct the fault.
- ALWAYS land the model INTO the wind, this ensures that the model lands at the slowest possible speed.
- Switch off the receiver.
- Switch off the transmitter.
- Empty the fuel tank after flying, fuel left in the tank can cause corrosion and lead to engine problems.

COVERING TOOLS

- Top Flite® MonoKote® Sealing Iron
- Top Flite Hot Sock Iron Cover
- Top Flite MonoKote Trim Seal Iron
- Top Flite MonoKote Heat Gun

ADHESIVES AND REQUIRED TOOLS

- Thin CA
- 30-minute epoxy
- 6-minute epoxy
- Threadlocker thread locking cement
- Mixing sticks
- Mixing cups (GPMR8056)
- Epoxy brushes
- Denatured alcohol
- Canopy Glue
- Felt-tipped pen or pencil
- Flat screwdriver
- Adjustable wrench
- Drill
- Hobby knife
- Masking tape
- Phillips screwdriver (large)
- Phillips screwdriver (small)
- Ruler
- Sandpaper
- Soldering iron
- Solder
- Hex wrench
- Drill bit: 1/16-inch (1.5mm), 5/64-inch (2mm), 1/8-inch (3,2mm), 3/16-inch (4,8mm), 11/64-inch (4.5mm), 13/64-inch (5,2mm), 1/4-inch (6,4mm)

Academy of Model Aeronautics National Model Aircraft Safety Code

Effective January 1, 2018

A. GENERAL: A model aircraft is a non-human-carrying device capable of sustained flight within visual line of sight of the pilot or spotter(s). It may not exceed limitations of this code and is intended exclusively for sport, recreation, education and/or competition. All model flights must be conducted in accordance with this safety code and related AMA guidelines, any additional rules specific to the flying site, as well as all applicable laws and regulations.

As an AMA member I agree:


- I will not fly a model aircraft in a careless or reckless manner.
- I will not interfere with and will yield the right of way to all human-carrying aircraft using AMA's See and Avoid Guidance and a spotter when appropriate.
- I will not operate any model aircraft while I am under the influence of alcohol or any drug that could adversely affect my ability to safely control the model.
- I will avoid flying directly over unprotected people, moving vehicles, and occupied structures.
- I will fly Free Flight (FF) and Control Line (CL) models in compliance with AMA's safety programming.
- I will maintain visual contact of an RC model aircraft without enhancement other than corrective lenses prescribed to me. When using an advanced flight system, such as an autopilot, or flying First-Person View (FPV), I will comply with AMA's Advanced Flight System programming.
- I will only fly models weighing more than 55 pounds, including fuel, if certified through AMA's Large Model Airplane Program.
- I will only fly a turbine-powered model aircraft in compliance with AMA's Gas Turbine Program.
- I will not fly a powered model outdoors closer than 25 feet to any individual, except for myself or my helper(s) located at the flightline, unless I am taking off and landing, or as otherwise provided in AMA's Competition Regulation.
- I will use an established safety line to separate all model aircraft operations from spectators and bystanders.

- Officially designated AMA Air Show Teams (AST) are authorized to use devices and practices as defined within the Team AMA Program Document. (AMA Document #718.)
- (j) Not operate a turbine-powered aircraft, unless in compliance with the AMA turbine regulations. (AMA Document #510-A.)
- 3. Model aircraft will not be flown in AMA sanctioned events, air shows or model demonstrations unless:
 - (a) The aircraft, control system and pilot skills have successfully demonstrated all maneuvers intended or anticipated prior to the specific event.
 - (b) An inexperienced pilot is assisted by an experienced pilot.
- 4. When and where required by rule, helmets must be properly worn and fastened. They must be OSHA, DOT, ANSI, SNELL or NOCSAE approved or comply with comparable standards.
- B. RADIO CONTROL (RC)**
 - 1. All pilots shall avoid flying directly over unprotected people, vessels, vehicles or structures and shall avoid endangerment of life and property of others.
 - 2. A successful radio equipment ground-range check in accordance with manufacturer's recommendations will be completed before the first flight of a new or repaired model aircraft.
 - 3. At all flying sites a safety line(s) must be established in front of which all flying takes place. (AMA Document #706.)
 - (a) Only personnel associated with flying the model aircraft are allowed at or in front of the safety line.
 - (b) At air shows or demonstrations, a straight safety line must be established.
 - (c) An area away from the safety line must be maintained for spectators.
 - (d) Intentional flying behind the safety line is prohibited.
 - 4. RC model aircraft must use the radio-control frequencies currently allowed by the Federal Communications Commission (FCC). Only individuals properly licensed by the FCC are authorized to operate equipment on Amateur Band frequencies.
 - 5. RC model aircraft will not knowingly operate within three (3) miles of any pre-existing flying site without a frequency-management agreement. (AMA Documents #922 and #923.)
 - 6. With the exception of events flown under official AMA Competition Regulations, excluding takeoff and landing, no powered model may be flown outdoors closer than 25 feet to any individual, except for the pilot and the pilot's helper(s) located at the flightline.
 - 7. Under no circumstances may a pilot or other person touch an outdoor model aircraft in flight while it is still under power, except to divert it from striking an individual.
 - 8. RC night flying requires a lighting system providing the pilot with a clear view of the model's attitude and orientation at all times. Hand-held illumination systems are inadequate for night flying operations.
 - 9. The pilot of an RC model aircraft shall:
 - (a) Maintain control during the entire flight, maintaining visual contact without enhancement other than by corrective lenses prescribed for the pilot.
 - (b) Fly using the assistance of a camera or First-Person View (FPV) only in accordance with the procedures outlined in AMA Document #550.
 - (c) Fly using the assistance of autopilot or stabilization system only in accordance with the procedures outlined in AMA Document #560.
- C. FREE FLIGHT**
 - 1. Must be at least 100 feet downwind of spectators and automobile parking when the model aircraft is launched.
 - 2. Launch area must be clear of all individuals except mechanics, officials, and other fliers.
 - 3. An effective device will be used to extinguish any fuse on the model aircraft after the fuse has completed its function.
- D. CONTROL LINE**
 - 1. The complete control system (including the safety thong where applicable) must have an inspection and pull test prior to flying.
 - 2. The pull test will be in accordance with the current Competition Regulations for the applicable model aircraft category.
 - 3. Model aircraft not fitting a specific category shall use those pull-test requirements as indicated for Control Line Precision Aerobatics.
 - 4. The flying area must be clear of all utility wires or poles and a model aircraft will not be flown closer than 50 feet to any above-ground electric utility lines.
 - 5. The flying area must be clear of all nonessential participants and spectators before the engine is started.


PARTS LISTING (NOT INCLUDED).

Servo extension leads.

	 2 pcs.
	920mm 3 pcs.
	330mm 2 pcs.
	220mm 9 pcs.
	420mm 4 pcs.

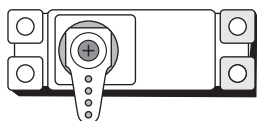

- Servo for Aileron 8-16kg (x2) – Standard size 15 x 36mm
- Servo for Flap 8-16kg (x2) – Standard size 15 x 36mm
- Servo for Elevator 8-16kg (x2) – Standard size 15 x 36mm
- Servo for Rudder 8-16kg (x1) – Standard size 15 x 36mm
- Servo for Nose steering 8-16kg (1)- Medium size 15 x 36mm

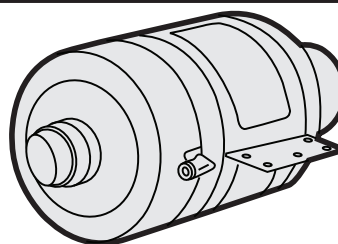




Engine: Turbine Jet Engine with 80-100N




LiPo: 2S- 7.4V - 3,200mAh.....2 Packs
 LiPo: 2S- 7.4V - 3,200mAh.....2 Packs

Ø20x1600mm
 600 Deg High Temperature Braided
 Soft Chemical Fiber Tubing

   --- 1

TOOLS & SUPPLIES NEEDED

30 minute epoxy.
 5 minute epoxy.

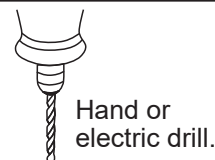

Some more tools.

- Assorted drill bits.
- Masking tape.
- Paper towels.
- Rubbing alcohol
- 90° square or builder's triangle.

Symbols used throughout this instruction manual, comprise:

Cut off excess.

Apply threadlocker
(screw cement).Must be purchased
separately!Cut off shaded portion
carefully.Apply instant glue
(C.A glue, super glue).Ensure smooth, non-binding
movement when assembling.

Pay close attention here.



Apply epoxy glue.

Drill holes using the stated.
(in this case 1.5mm Ø).

Take particular care here.

Assemble left and right
sides the same way.The number of times
the same way Assembly
(in this case twice).**Warning!**

► Set all screws securely. If they come off during
flight you will lose control of your aircraft!



Use a pencil to mark

1: Fuselage.

1a: fuselage nose set

1b: Cockpit set

1c: Top hatch

2: Wing.

(2a:(right) 2b:(left) 2c: (Carbon wing tube)).

3: Horizontal stabilizer.

(3a:(right) 3b:(right); 3c: Carbon tube).






4: Rudder.**5: Plastic air intake.**

(5a(right), 5b(left)).

6: Bomb plastic set.**7: Stainless tailpipe .****8: Wing spare part.****9: Horizontal stabilizer spare part.****10: Rudder spare part.****11: Nose Gear.**

(11a(Controller Box))

(11b(Nose Door))

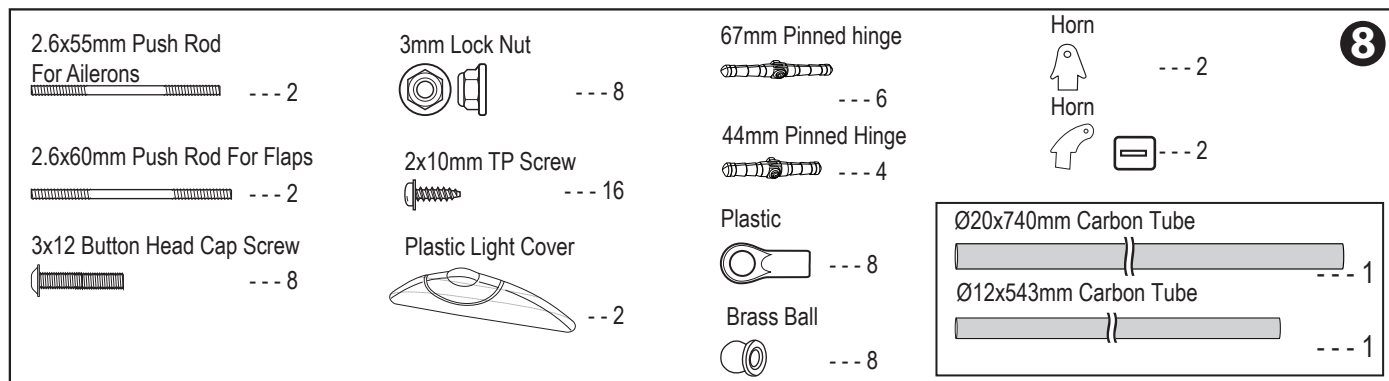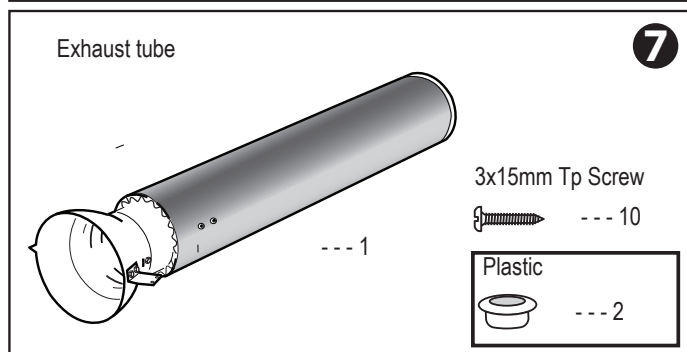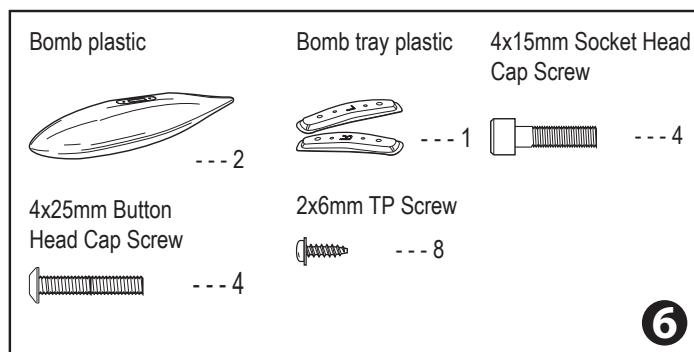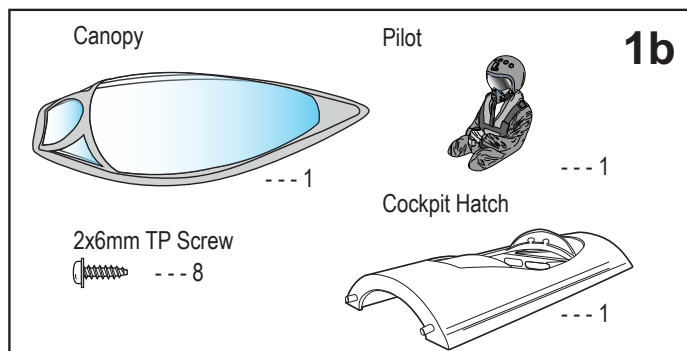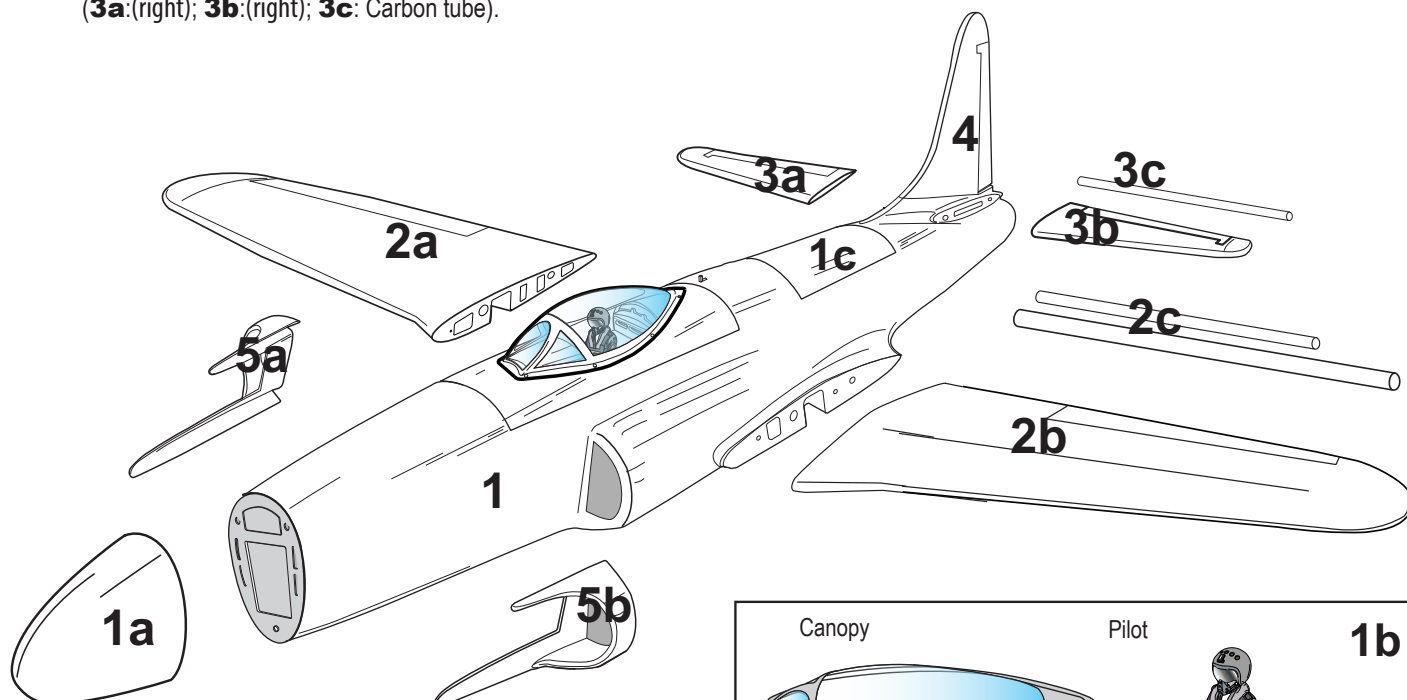12: Main Gear.**13: CG spare part.****14: Fuel tank.**

44mm Pinned Hinge --- 2

Horn --- 2

2.6x40mm Push Rod For Horizontal --- 2

Plastic --- 4

Brass Ball --- 4

6x50mm Aluminium --- 2

3x12 Button Head Cap Screw --- 4

3mm Lock Nut --- 4

Ø12x338mm Carbon Tube --- 1

9

44mm Pinned Hinge --- 3

Horn --- 1

2.6x50mm Push Rod For Rudder --- 1

Plastic --- 2

Brass Ball --- 2

3x12 Button Head Cap Screw --- 2

3mm Lock Nut --- 2

10

Nose Gear --- 1

2.6x30mm Push Rod Nose Gear --- 1

Plastic --- 2

Brass Ball --- 2

4x20 Button Head Cap Screw --- 4

4mm Spring Washer --- 4

3x12 Button Head Cap Screw --- 2

3mm Lock Nut --- 1

11a

Controller Box

11b

Nose Door --- 1

2x6mm TP Screw --- 8

15 x 220mm Velcro battery --- 2

11

Main Gear L --- 1

Main Gear R --- 1

4x20 Button Screw --- 8

4mm Spring Washer --- 8

12

Clunks --- 1

Rubber --- 1

3x25mm Screw --- 2

Aluminium --- 2

Aluminium --- 2

87mm Copper tube --- 1

55mm Copper tube --- 1

Zip tie --- 4

20 x 560mm Velcro Fuel tank --- 2

13

Ø12x100mm Aluminium tube --- 1

2000mm Wire --- 1

Plate of plywood --- 2

14

Fiber glass --- 1

2x5mm TP Screw --- 9


Magnetic Anodized Fuel Dot --- 1

Alu. Anodized Fuel Vent Line Plug --- 1

14

8

INSTALLING THE AILERONS AND FLAPS

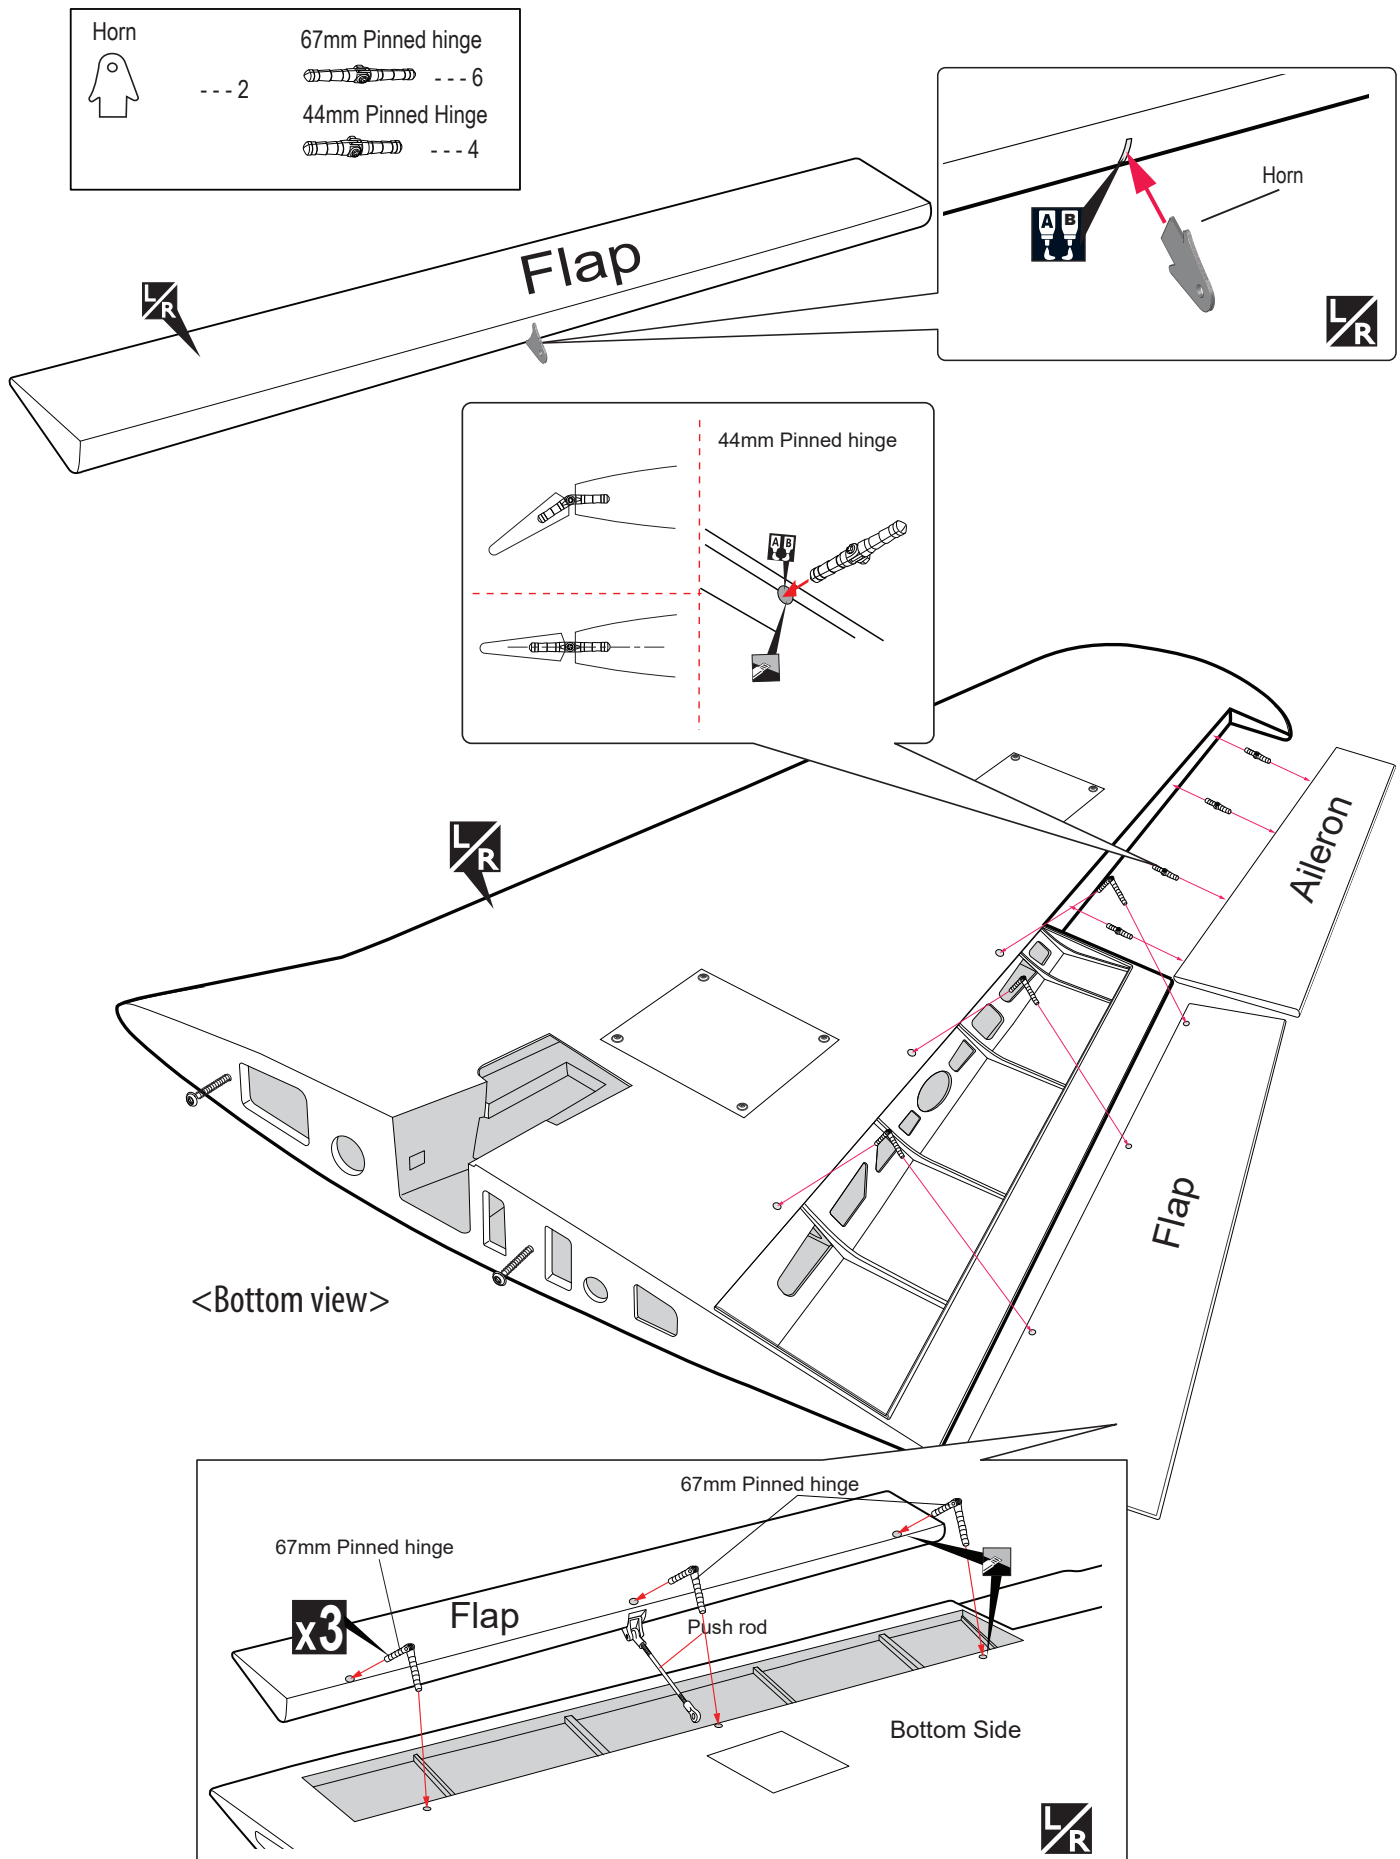

Apply epoxy glue.




Assemble left and right sides the same way



The number of times
the same way Assembly 9
(in this case twice).

Bottom Side

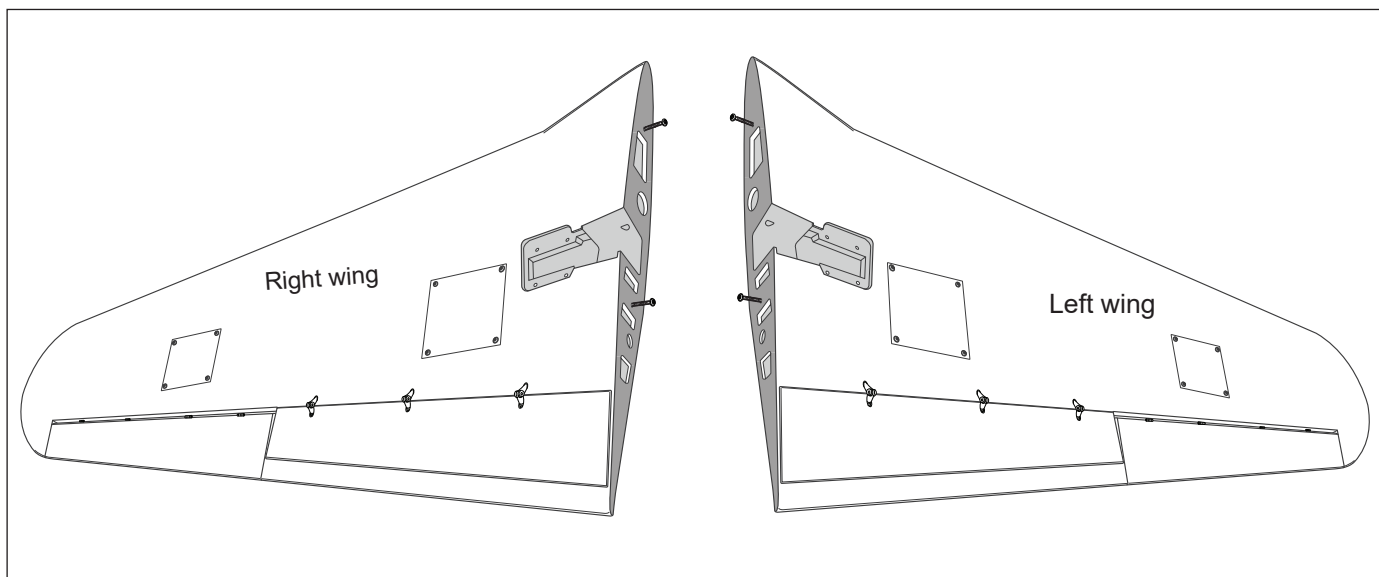

INSTALLING THE AILERON AND FLAP SERVO

2.6x55mm Push Rod For Ailerons

2

Plastic

8

3x12 Button Head Cap Screw

8

2.6x60mm Push Rod For Flaps

2

Brass Ball

8

3mm Lock Nut

8

Horn





2

2x10mm TP Screw

16


<Bottom view>

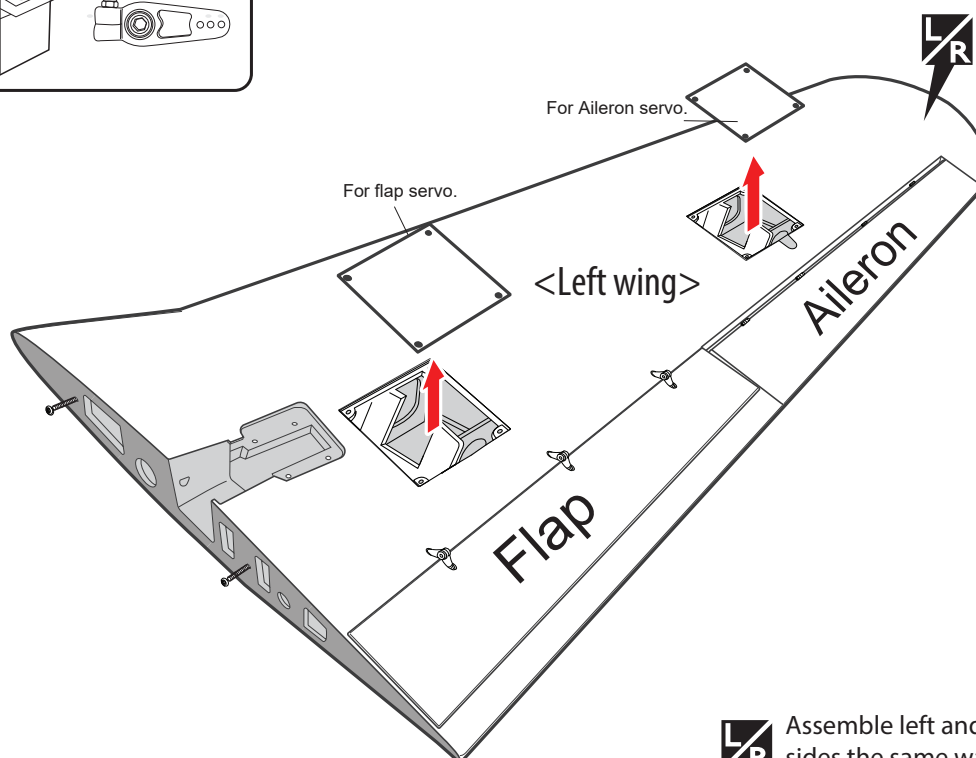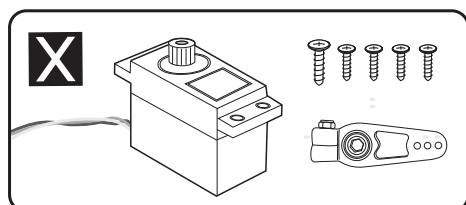


L/R Assemble left and right sides the same way

x2**x2**


Aileron servos.

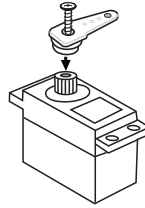


Aileron

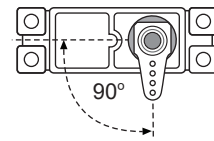**x2** **L/R**


Aileron

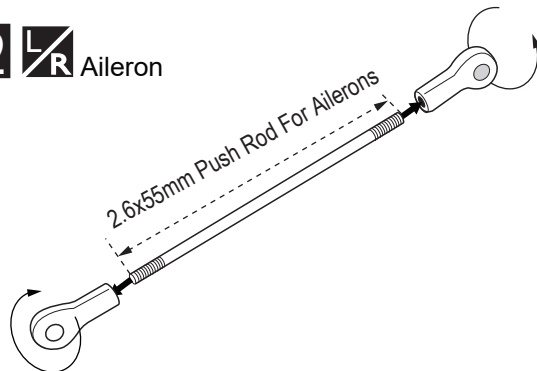**x2** **L/R**


Aileron

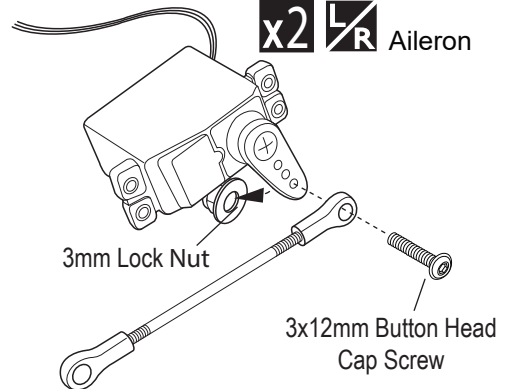**x2** **L/R**


Aileron

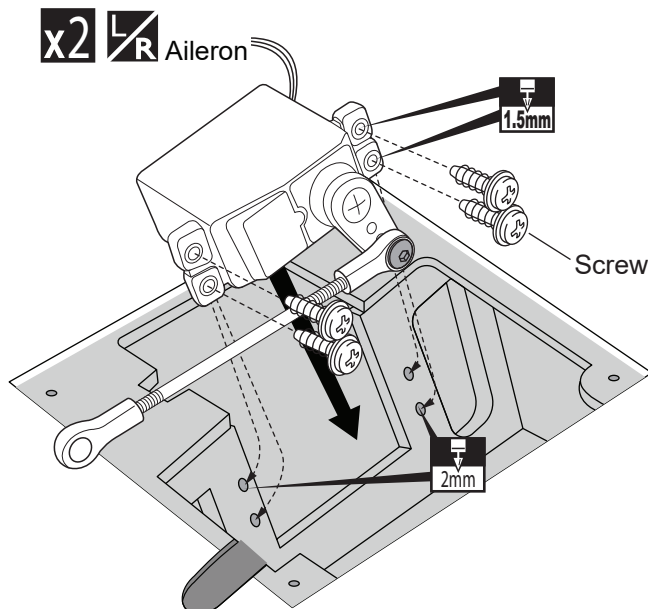**x2** **L/R**


Aileron

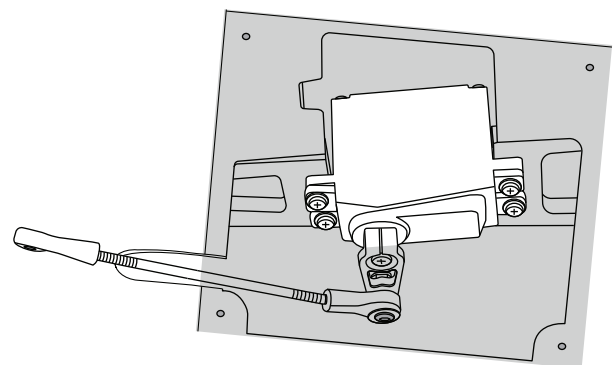**x4** **L/R**

Aileron

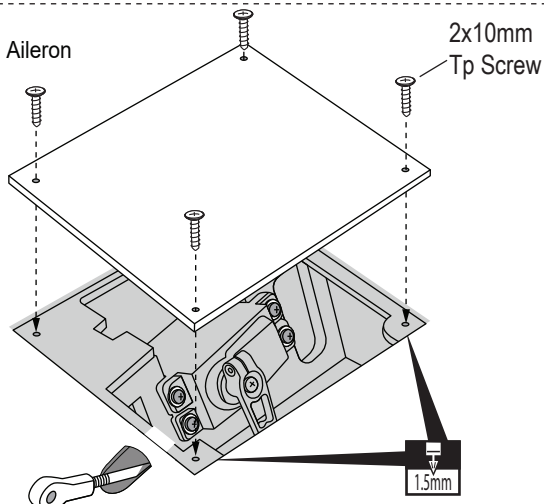**x2** **L/R**

Aileron

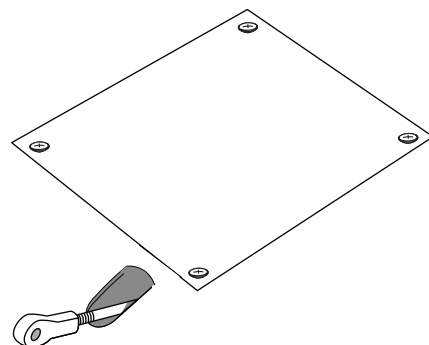

Assemble left and right sides the same way

x2


The number of times the same way Assembly (in this case twice).




Drill holes using the stated (in this case 1.5mm ø).

x2**x2**


Flaps servos.

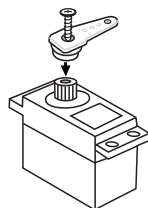



Flaps

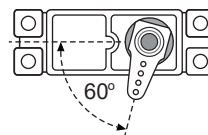**x2** **L/R**

For Flap.


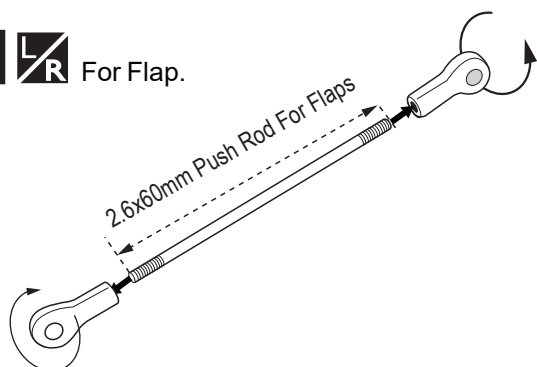
**x2** **L/R**

For Flap.

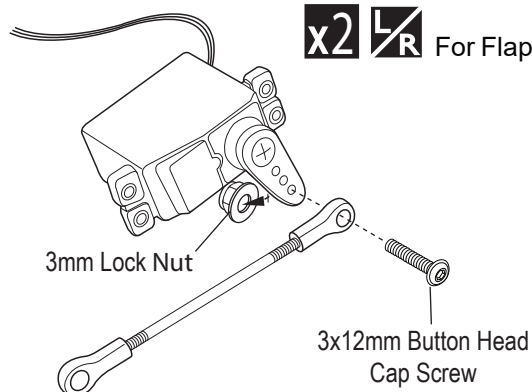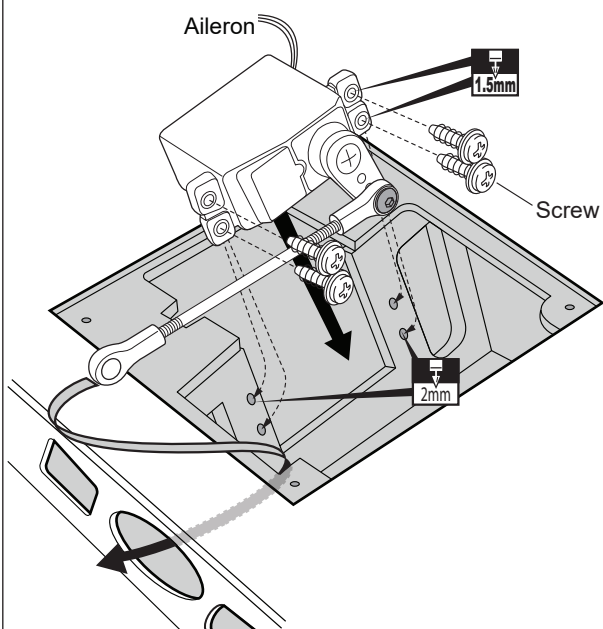**x2** **L/R** For Flap**FLAP**



3x12mm Button Head Cap Screw

3mm Lock Nut

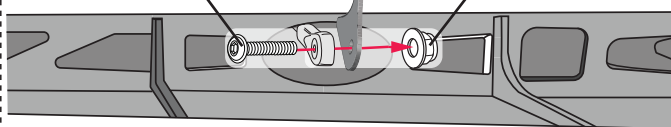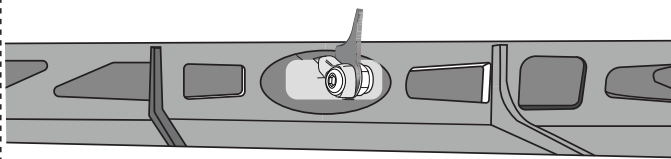**FLAP****x4** **L/R** For Flap

Aileron

2x10mm Tp Screw

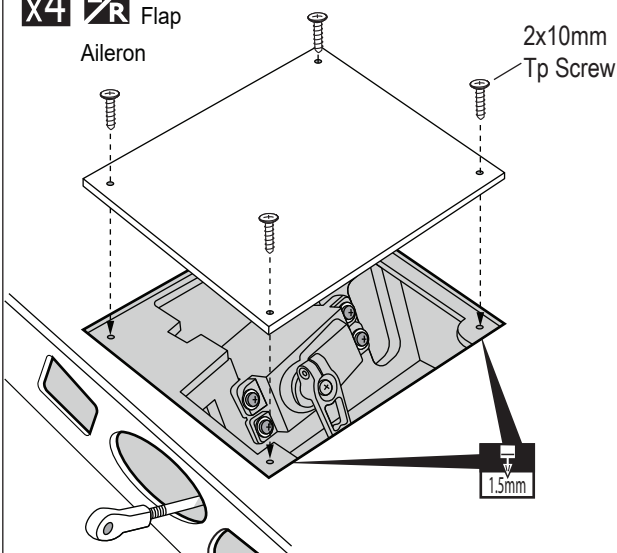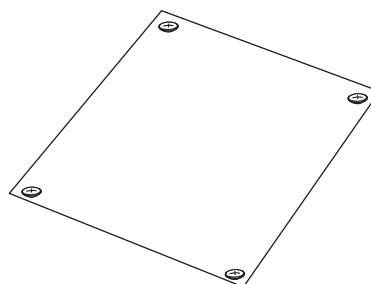**x2** **L/R** For Flap

Assemble left and right sides the same way





The number of times the same way Assembly (in this case twice).




Drill holes using the stated (in this case 1.5mm ø).

<Bottom view>

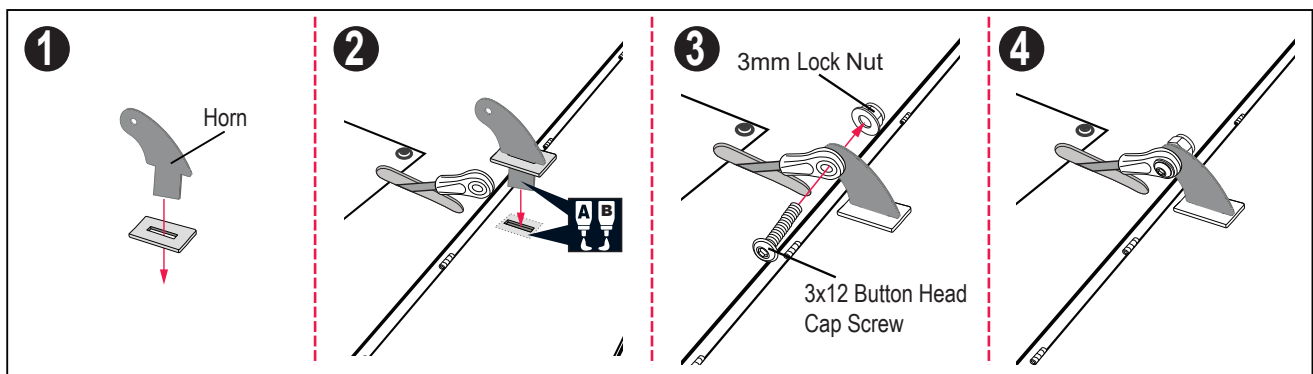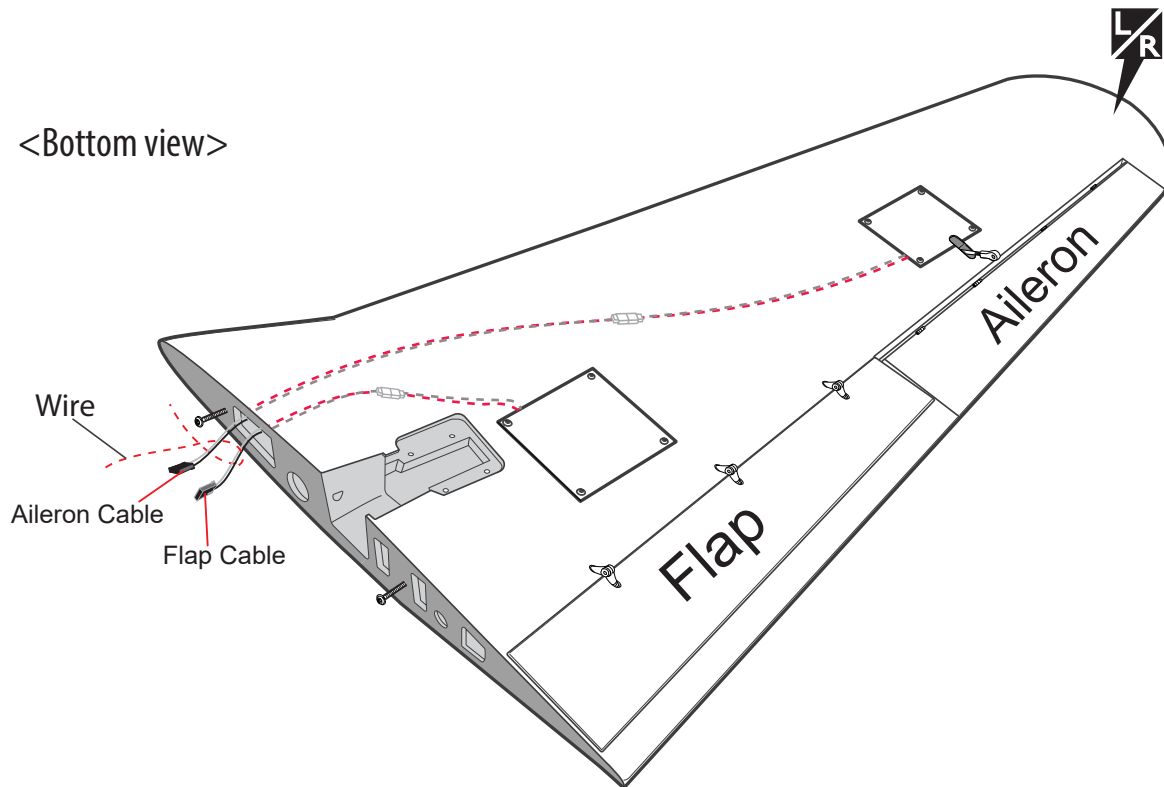


<Bottom view>

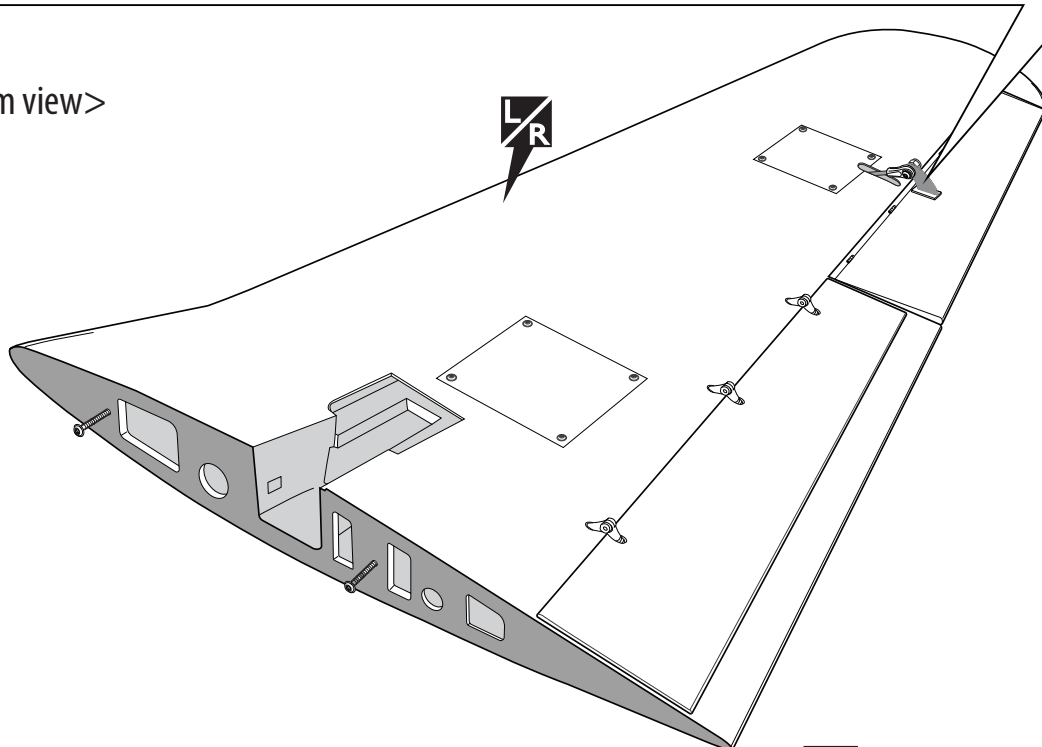


Apply epoxy glue.

Assemble left and right
sides the same way


INSTALLING THE MAIN LANDING GEAR AND WHEEL WELL

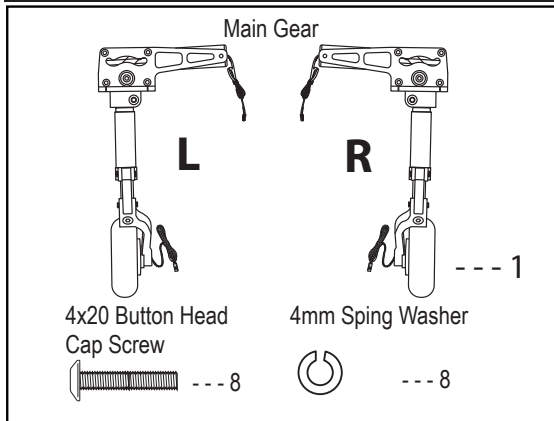

<Bottom view>

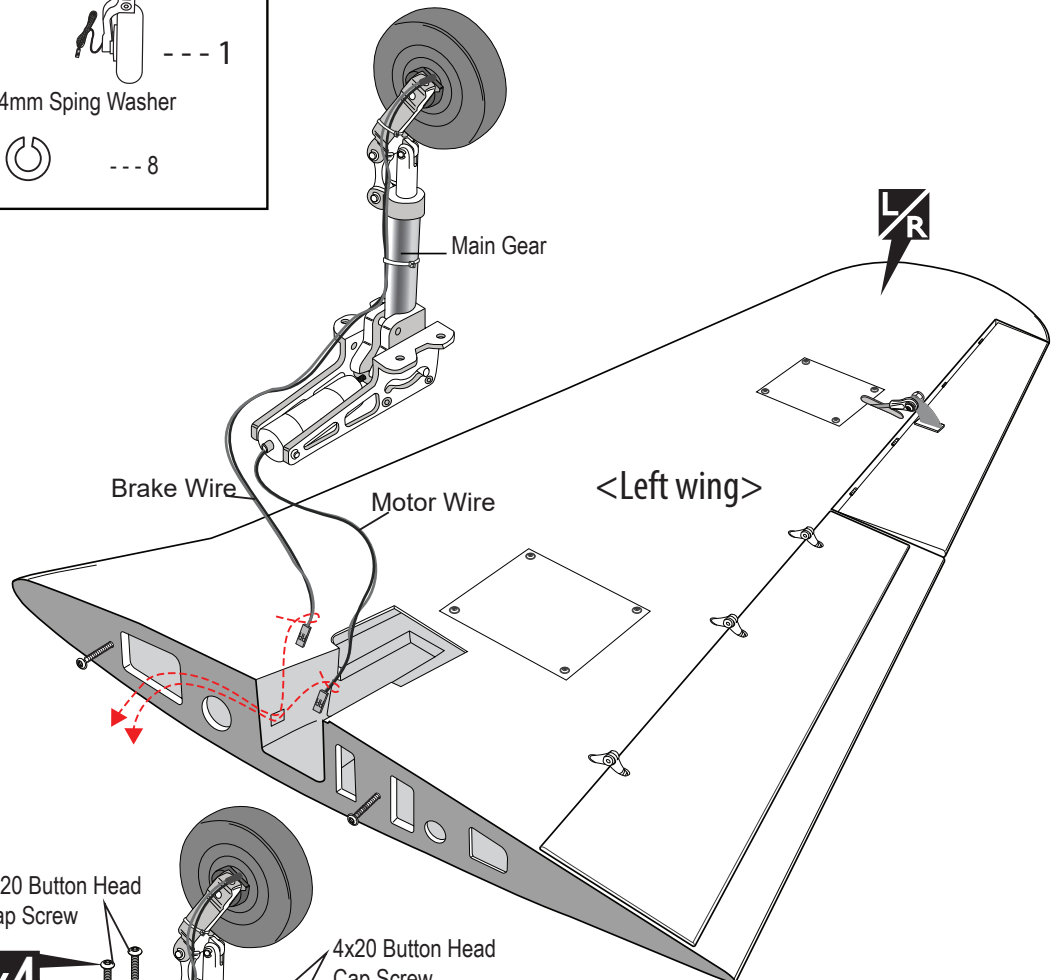


<Bottom view>

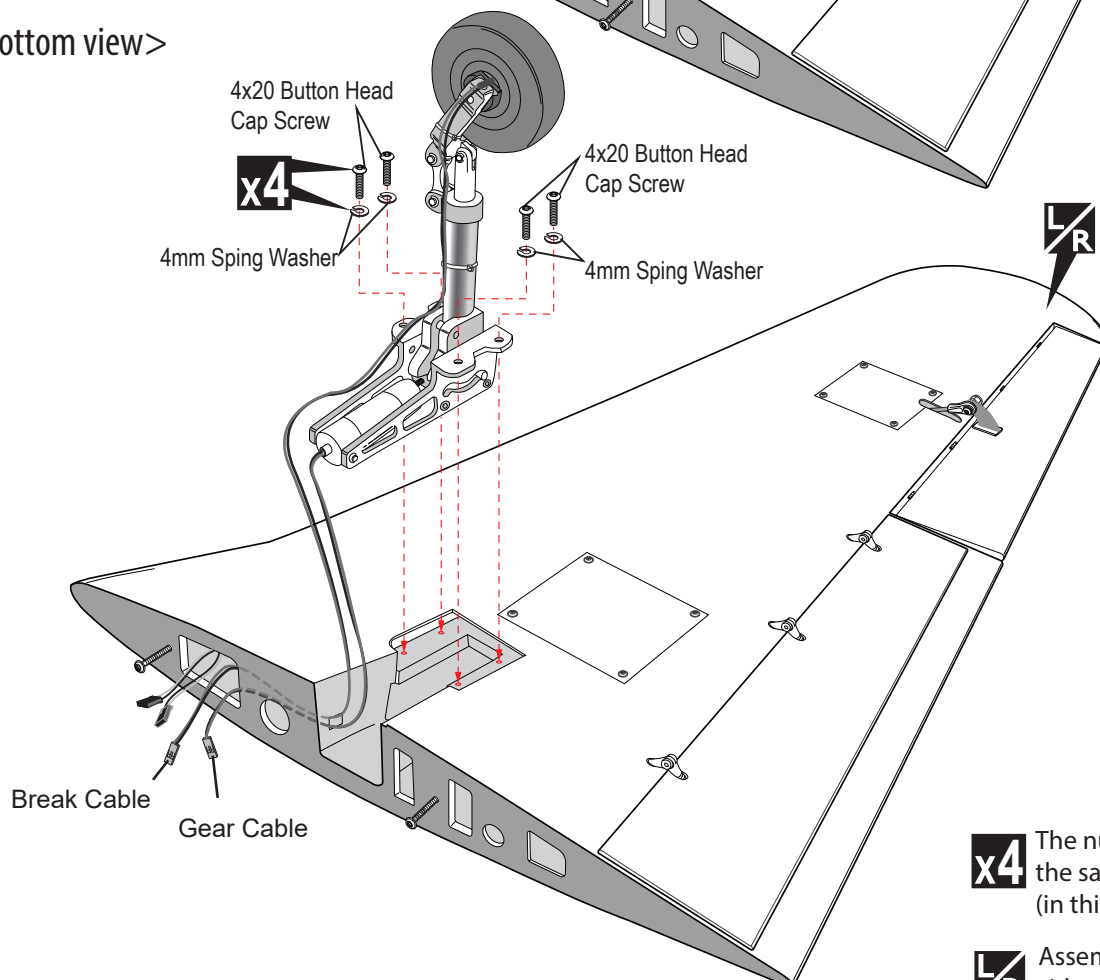


x4 The number of times the same way Assembly (in this case twice).

L/R Assemble left and right sides the same way

<Bottom view>

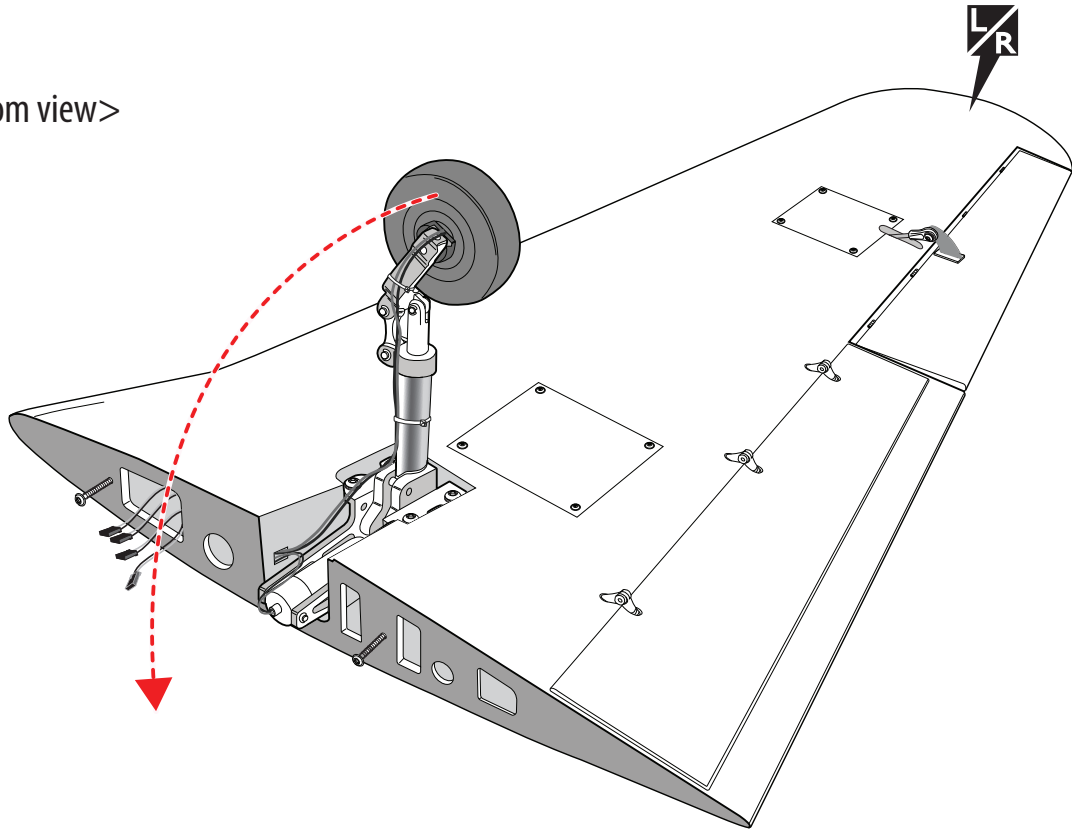


<Bottom view>

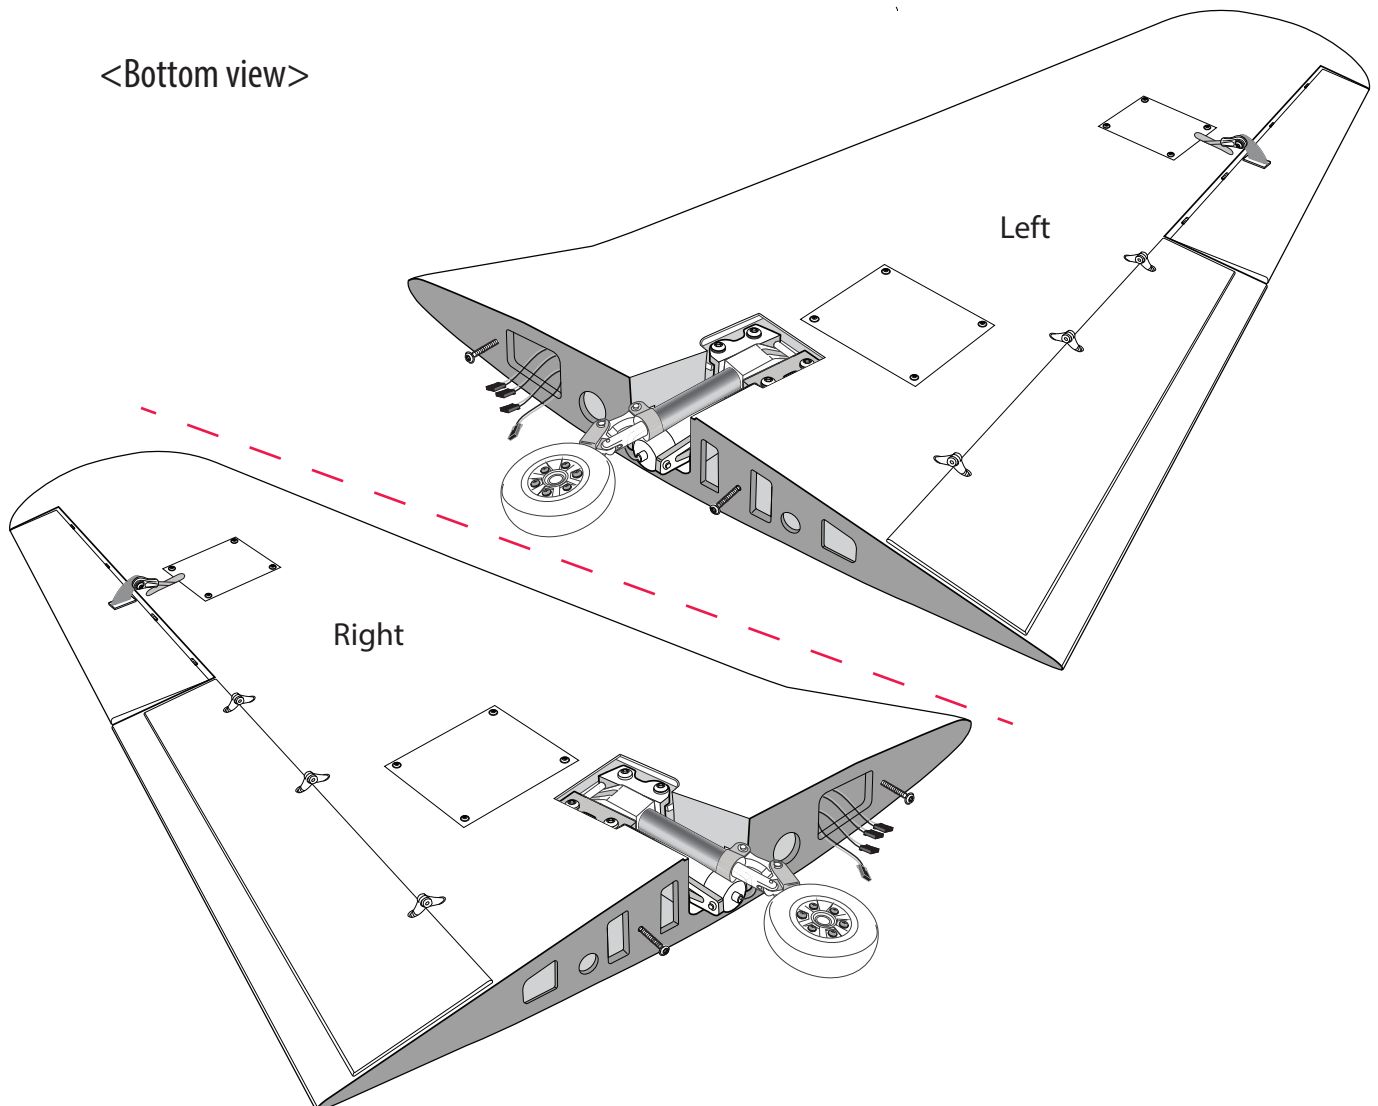


INSTALLING THE LIGHT WING

 Plastic Light Cover




-- 2


Plastic Light Cover

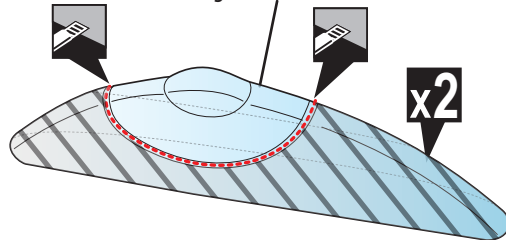

L/R

 

<Bottom view>

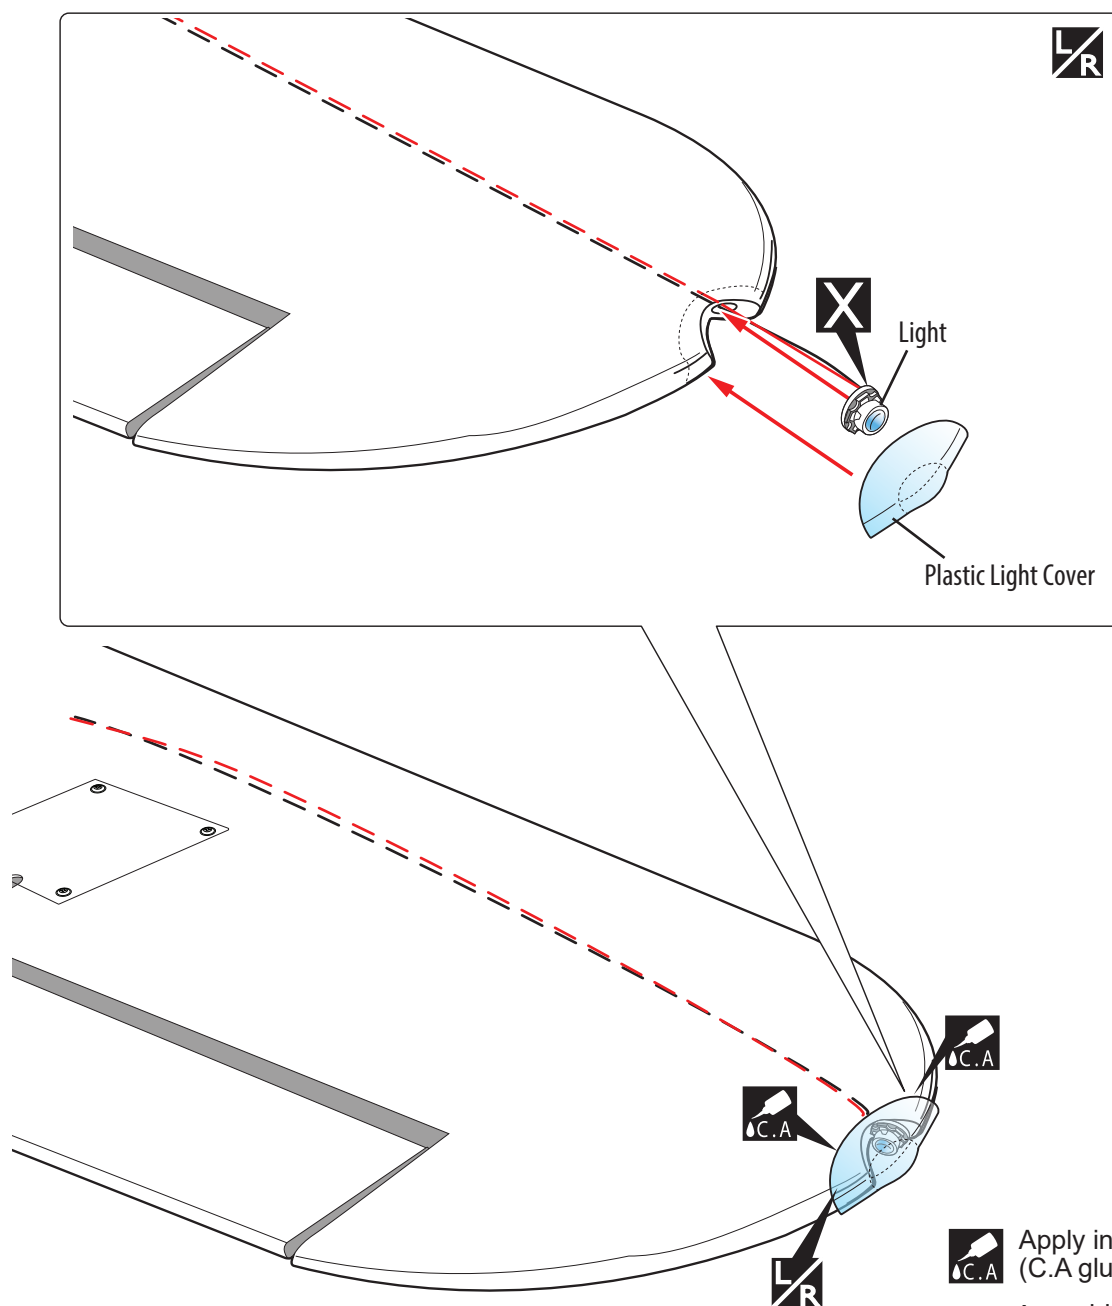

Apply instant glue
(C.A glue, super glue).



Assemble left and right
sides the same way



Apply epoxy glue.



Must be purchased
separately!

INSTALLING THE HORIZONTAL STABILIZER

44mm Pinned Hinge




--- 2

6x50mm Aluminium




--- 2


<Top view>

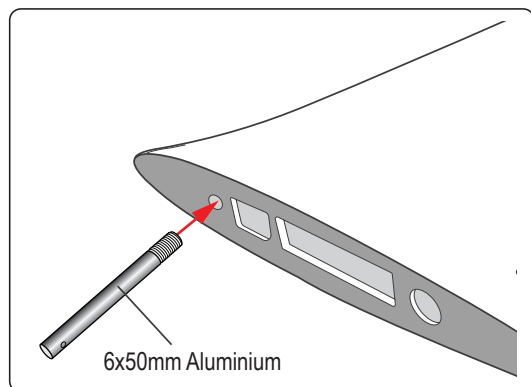

6x50mm Aluminium

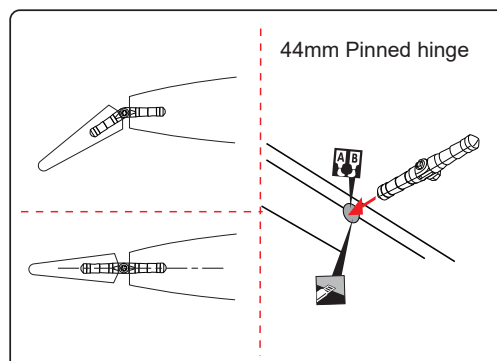

44mm Pinned hinge

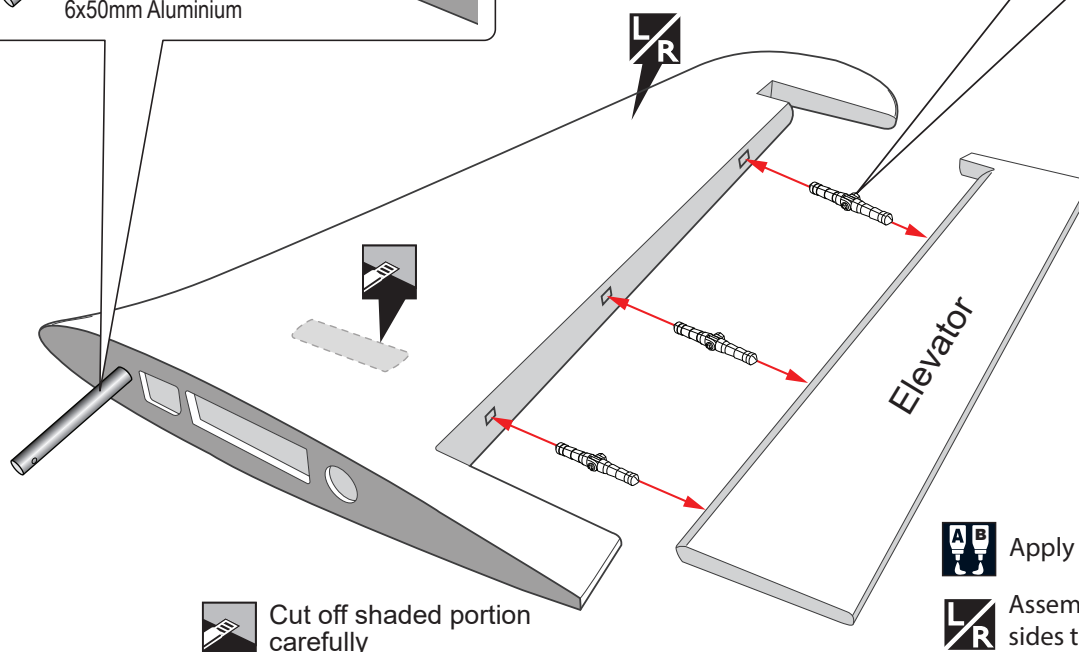

Cut off shaded portion carefully



Apply epoxy glue.



Assemble left and right sides the same way

INSTALLING THE HORIZONTAL STABILIZER SERVOS

Horn



--- 2

Plastic



 
--- 4

3x12 Button Head Cap Screw



--- 4

2.6x40mm Push Rod For Horizontal



--- 2

Brass Ball




--- 4




3mm Lock Nut




--- 4

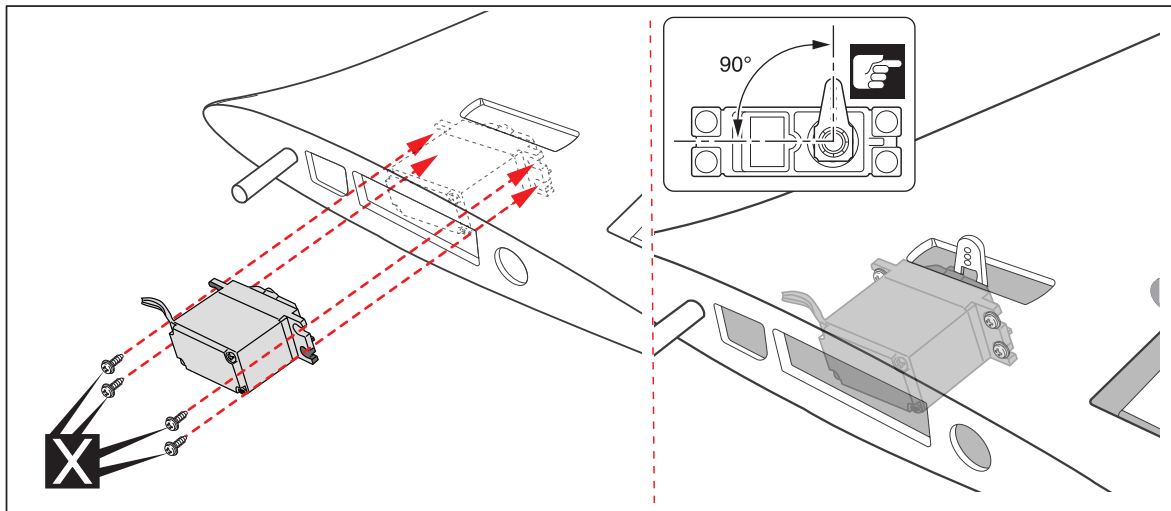

<Bottom view>

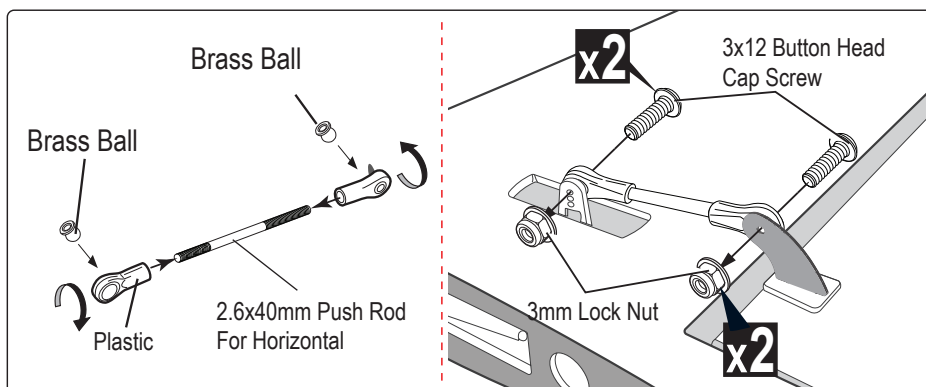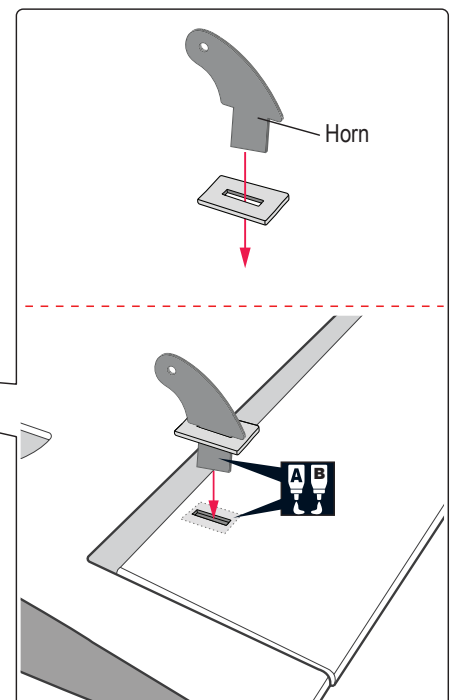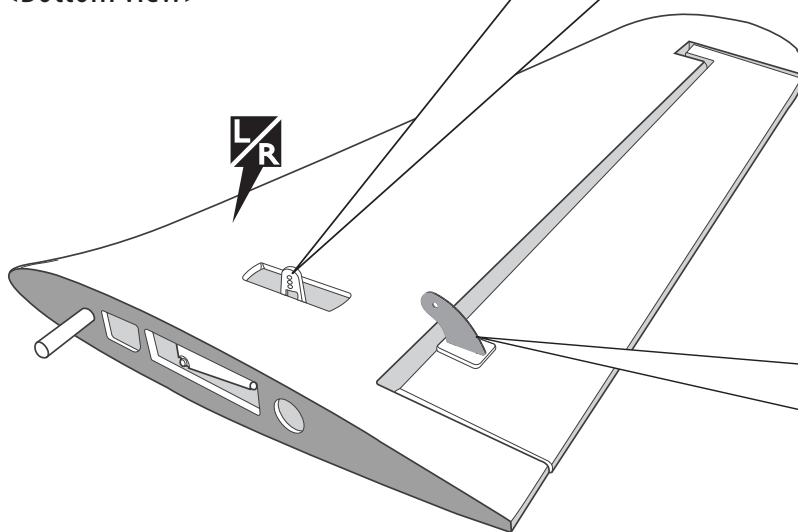

<Bottom view>

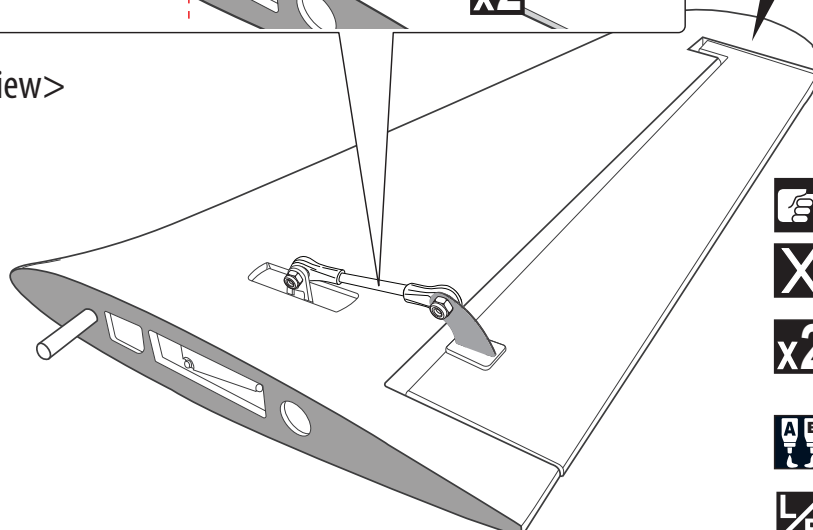

Pay close attention here.



Must be purchased separately!



The number of times the same way Assembly (in this case twice).



Apply epoxy glue.




Assemble left and right sides the same way

INSTALLING THE VERTICAL STABILIZER

44mm Pinned Hinge

--- 3

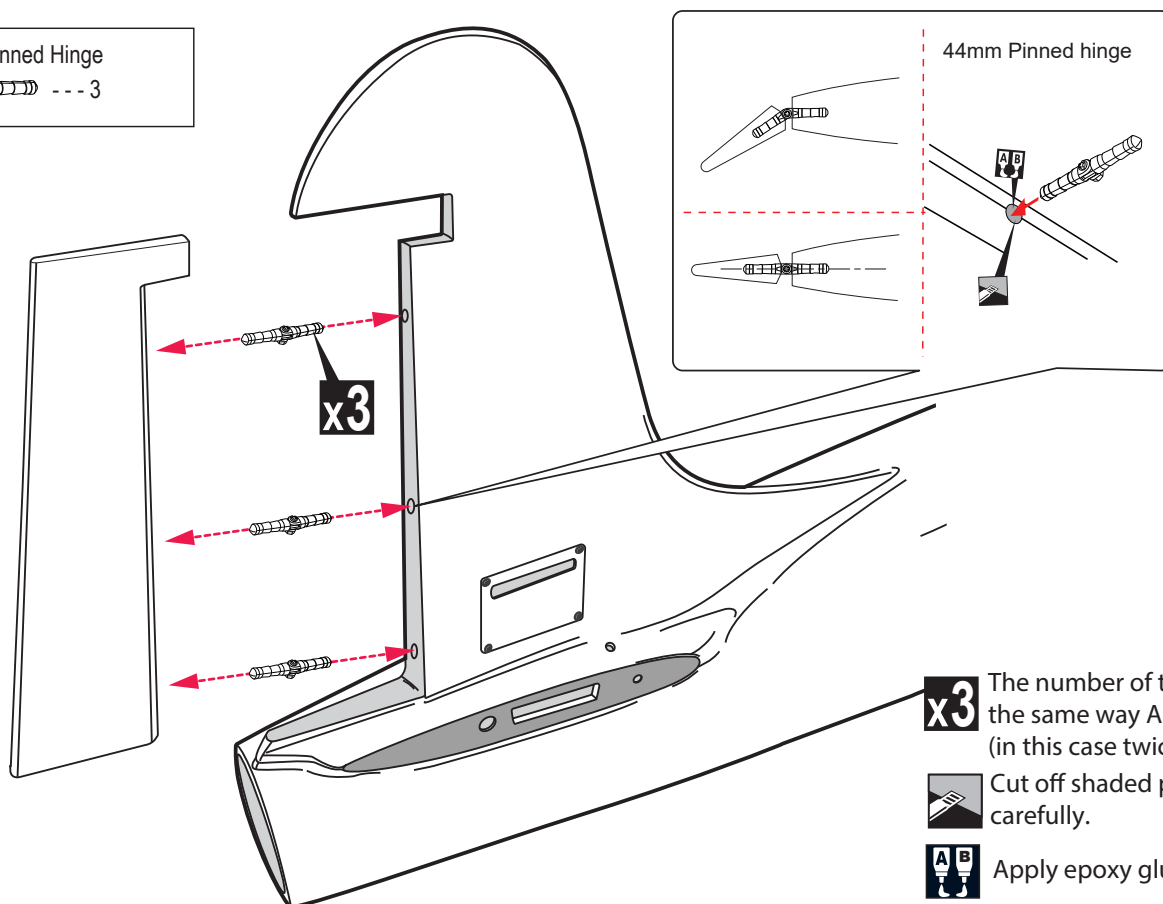

x3 The number of times the same way Assembly (in this case twice).

Cut off shaded portion carefully.

Apply epoxy glue.

INSTALLING THE VERTICAL STABILIZER SERVOS

2.6x50mm Push Rod
For Rudder

--- 1

Plastic

--- 2

Brass Ball

--- 2

3x12 Button Head
Cap Screw


--- 2

3mm Lock Nut

--- 2




Horn


--- 1

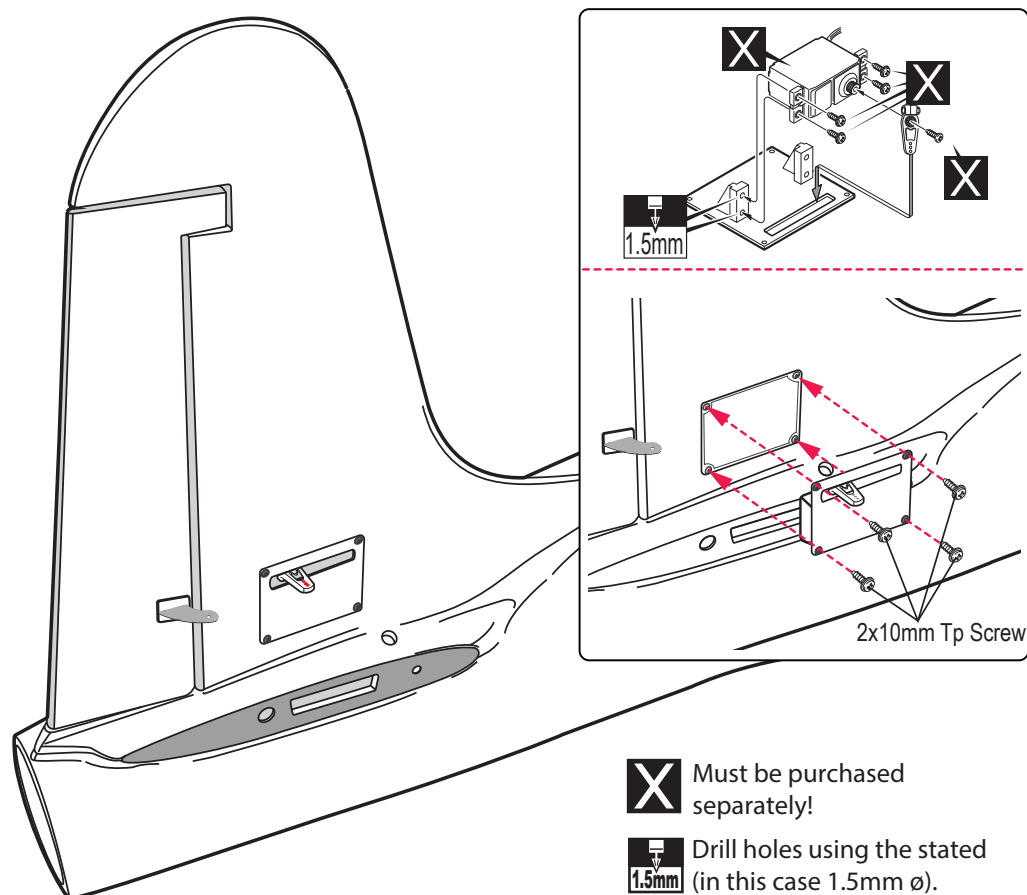


X Must be purchased separately!

Drill holes using the stated (in this case 1.5mm ø).

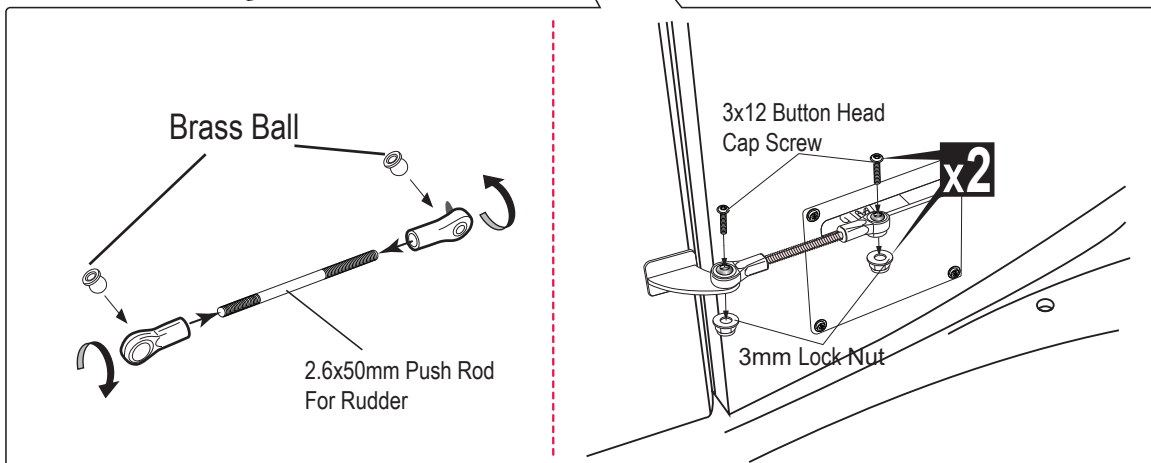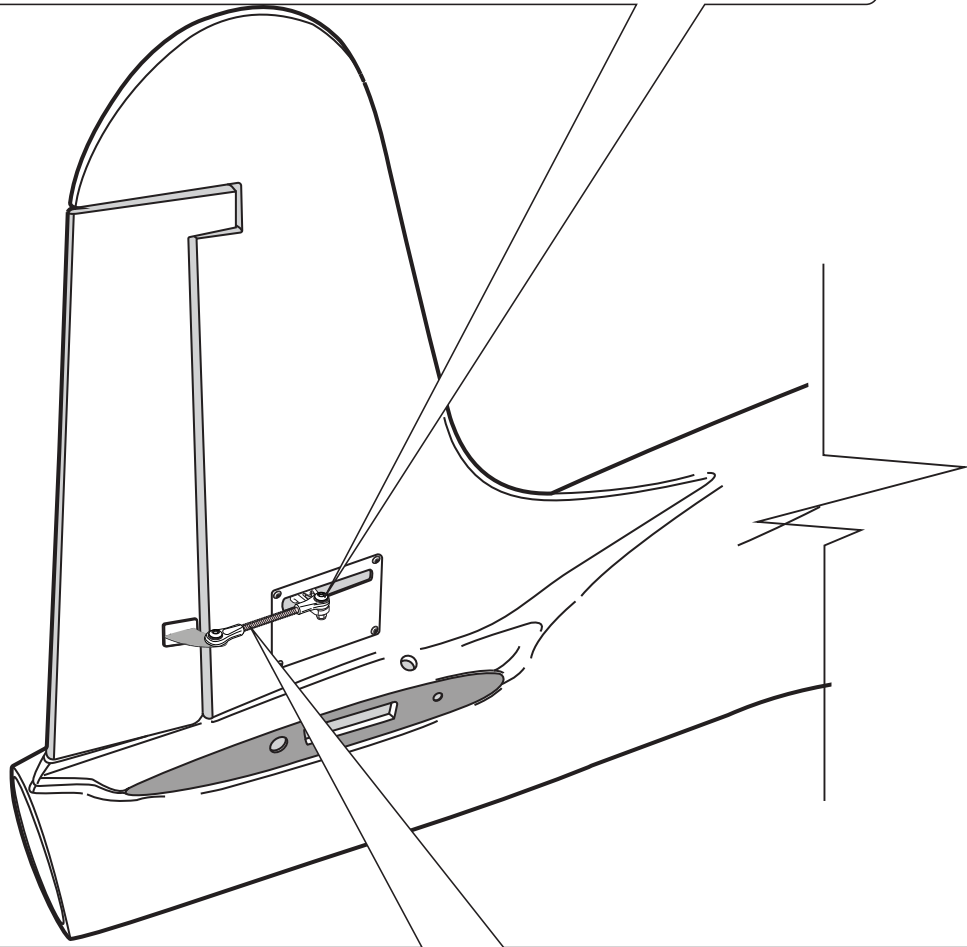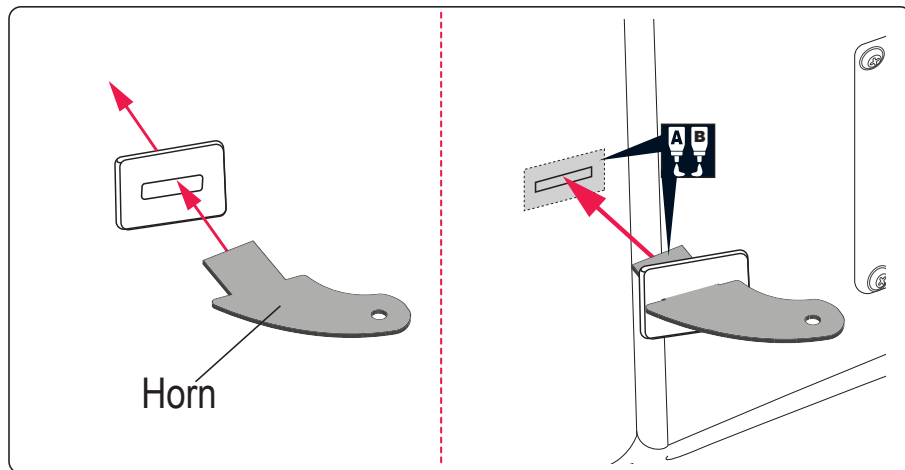

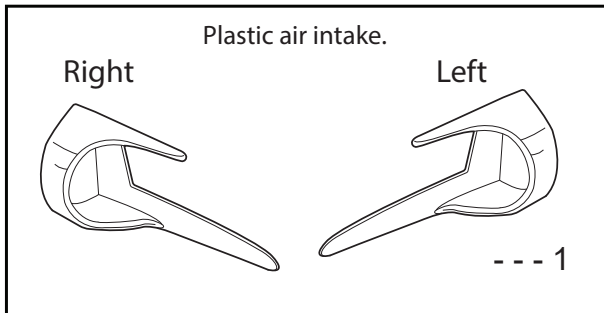INSTALLING THE AIR INTAKE

<Top view>

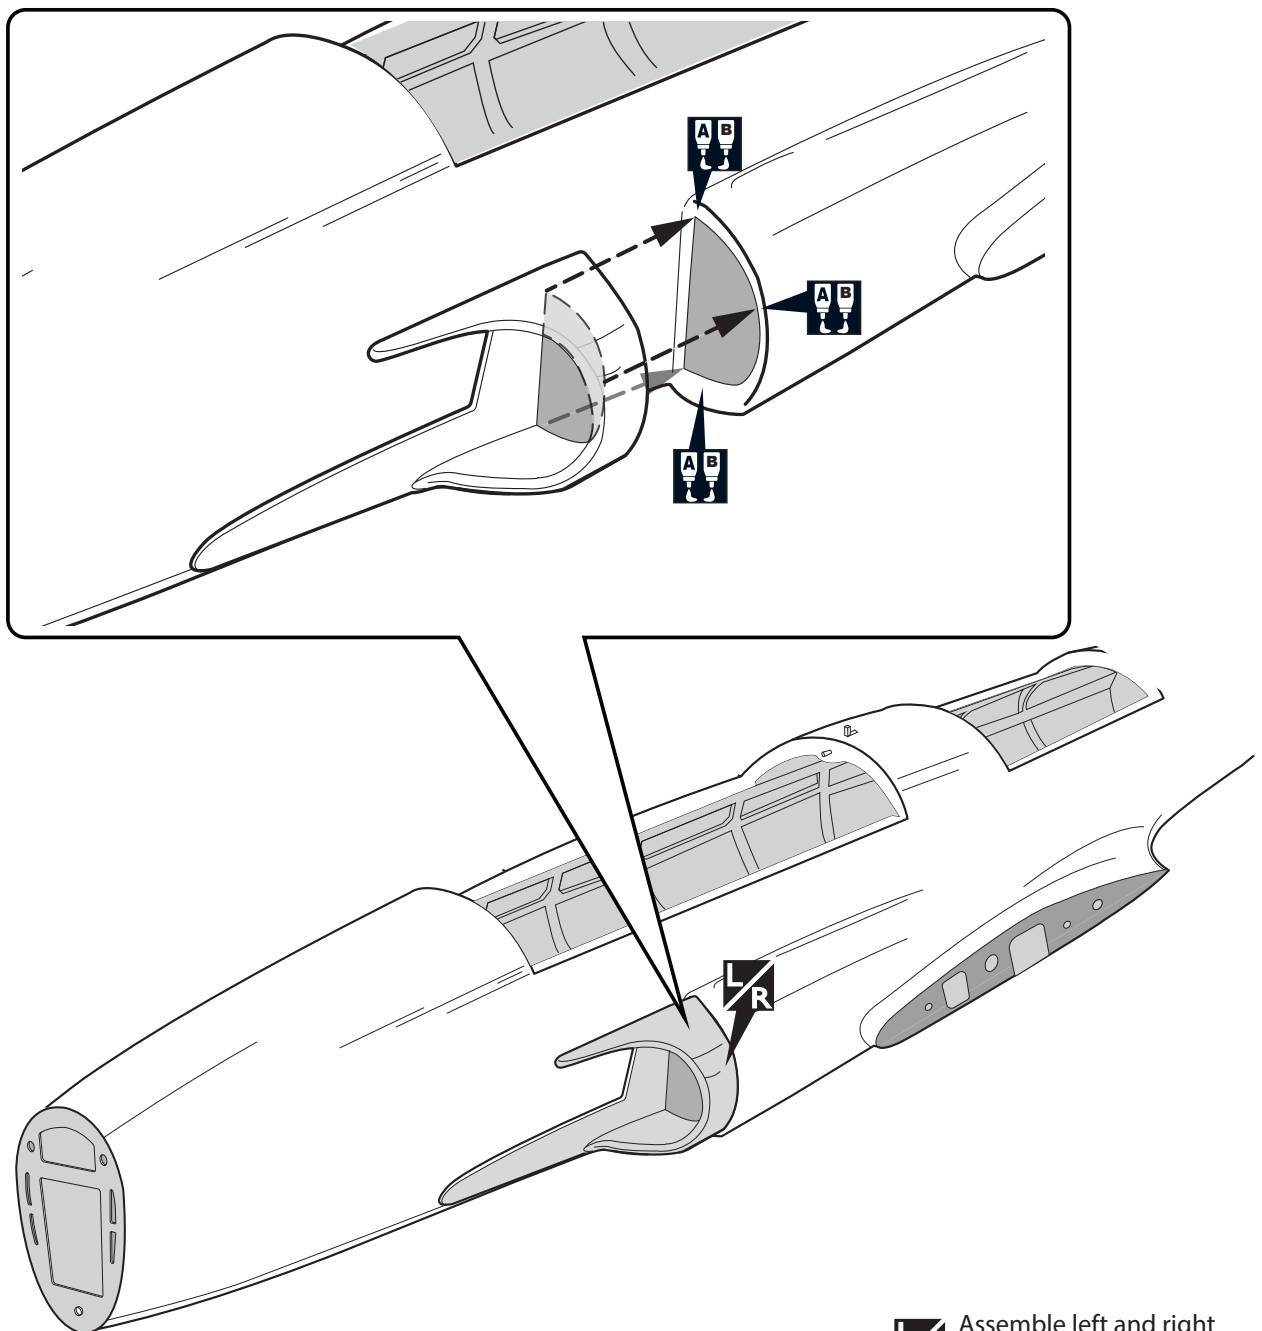


 Assemble left and right sides the same way

 Apply epoxy glue.

INSTALLING THE WING TO FUSELAGE

 Ø20x740mm Carbon Tube







--- 1

Ø12x543mm Carbon Tube




--- 1

<Bottom view>

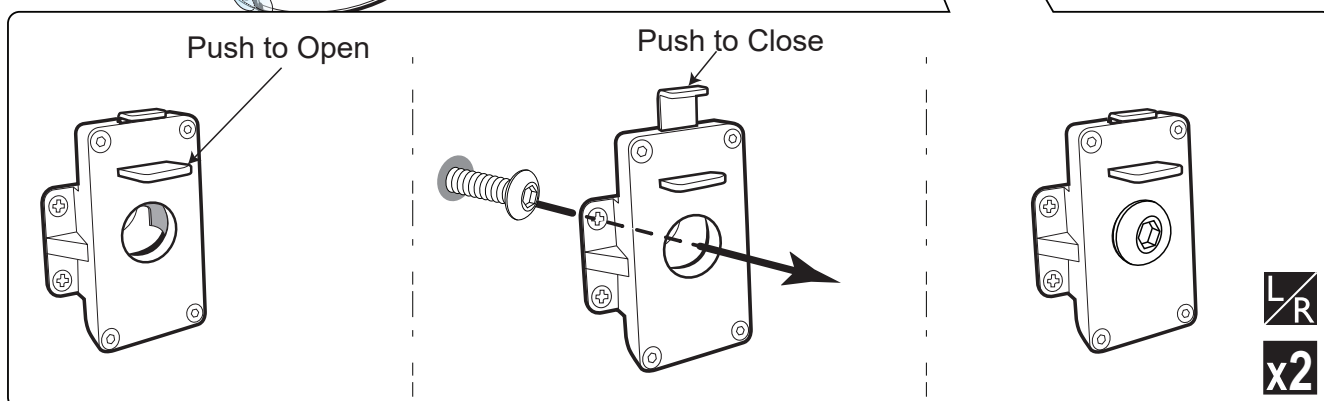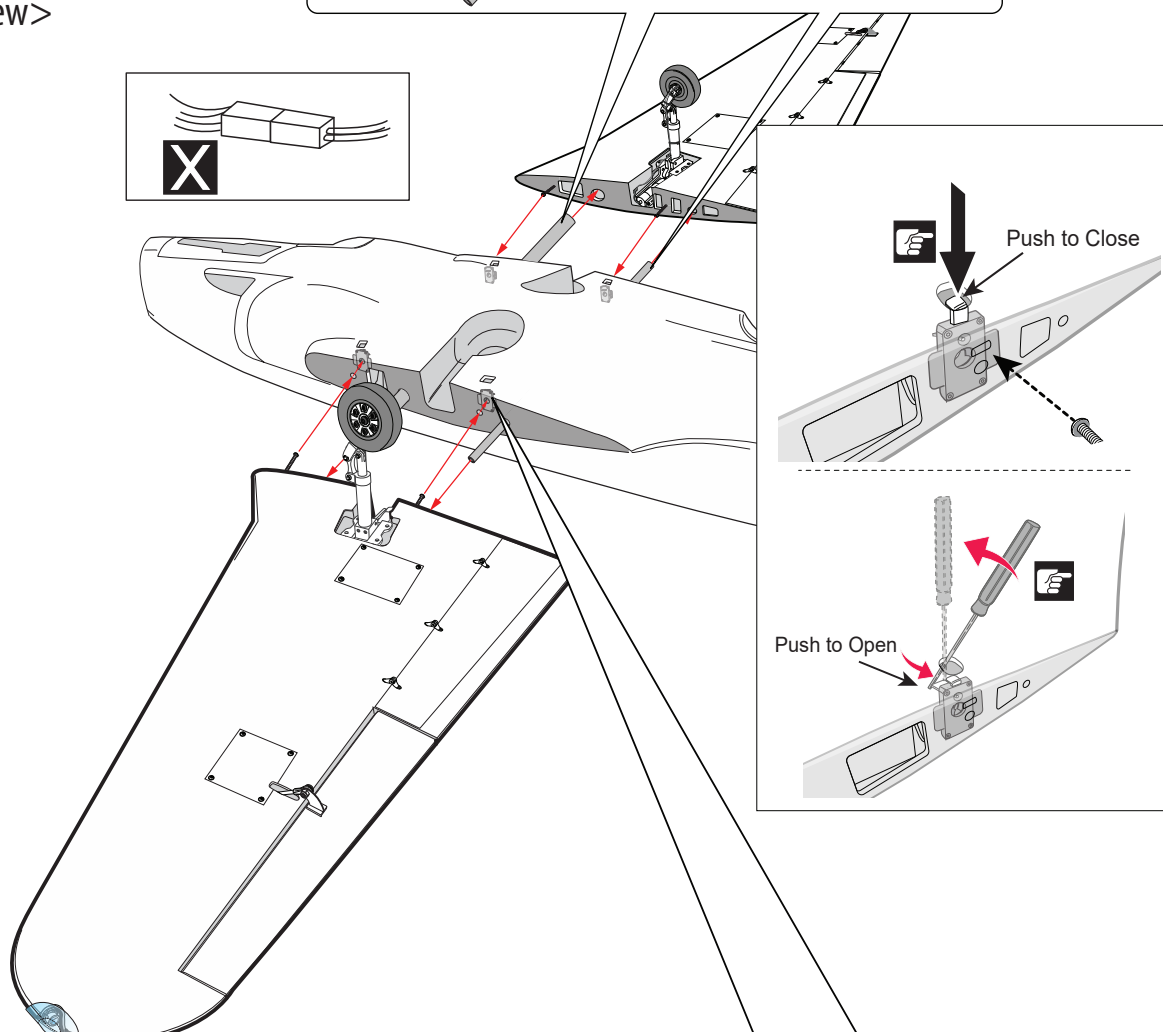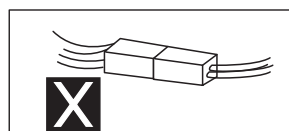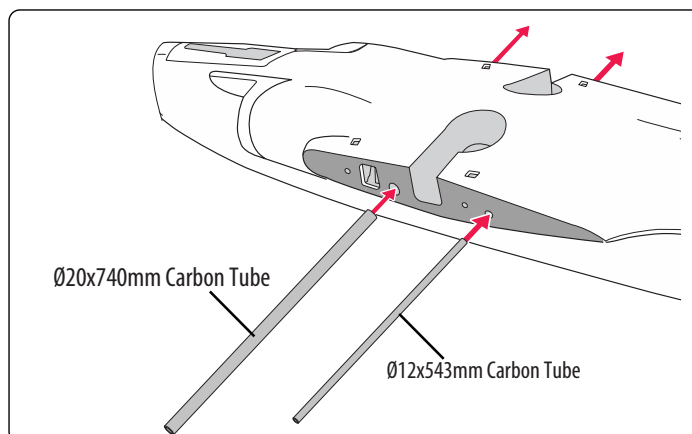


<Bottom view>

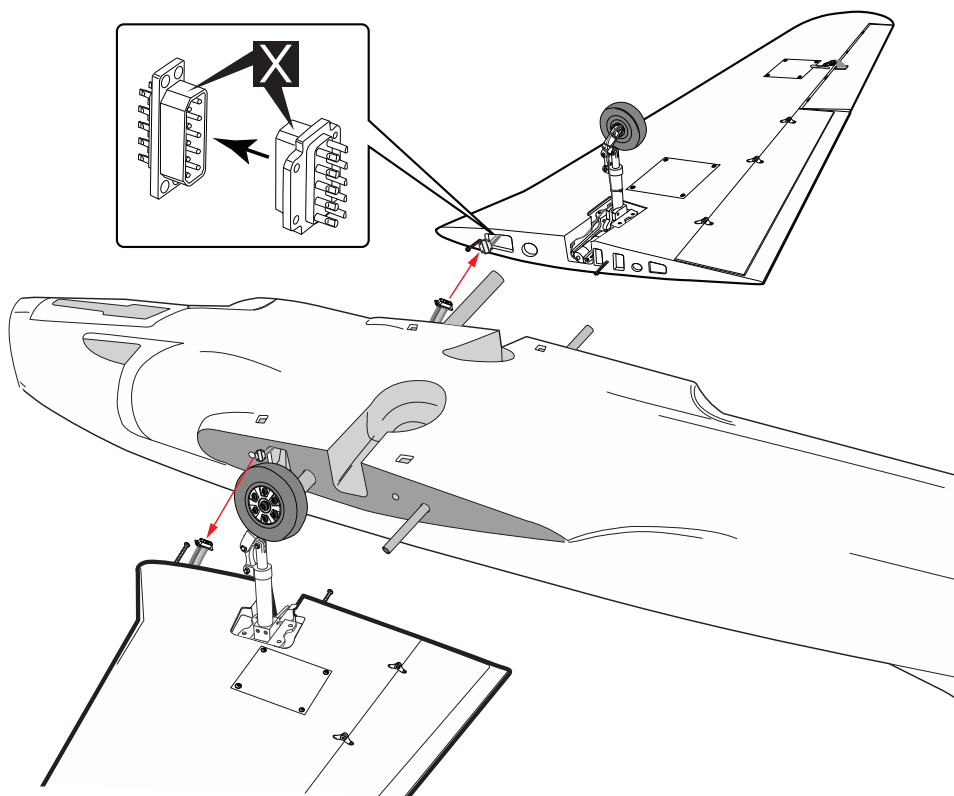


* Multiplex Connection 10 Pin
(Must Be Purchased Separately):


① < Aileron >

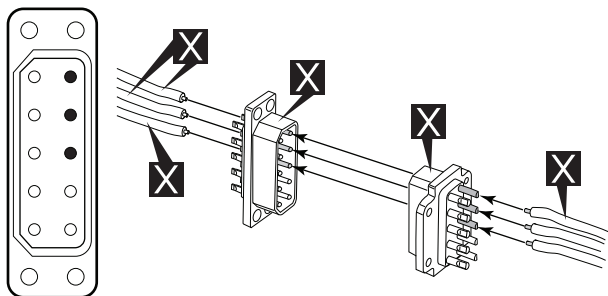


② < Flap >

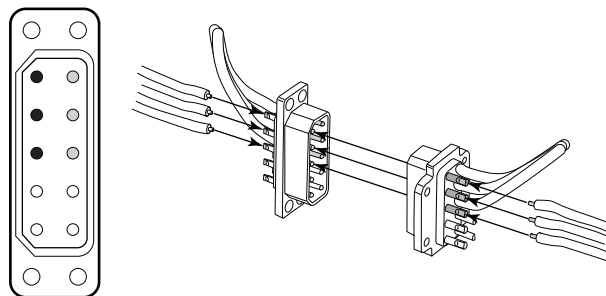

③ < Main Gear >

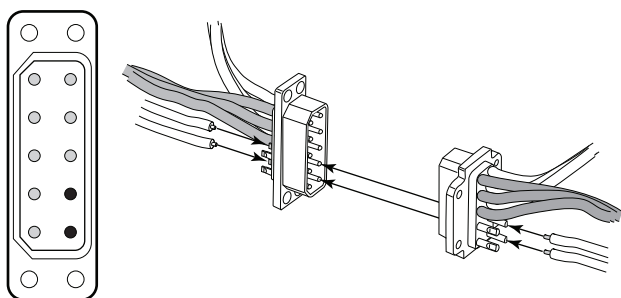

④ < Brakes >

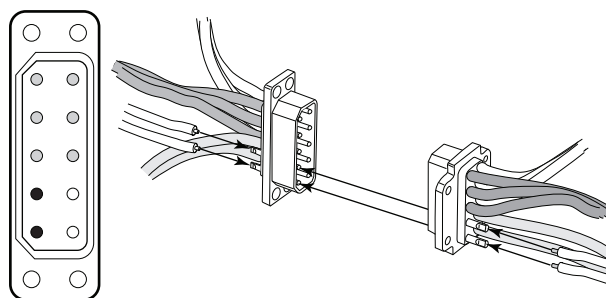


① ② ③ Assemble in the specified order.


X Must be purchased separately!

L/R Assemble left and right sides the same way


<Bottom view>

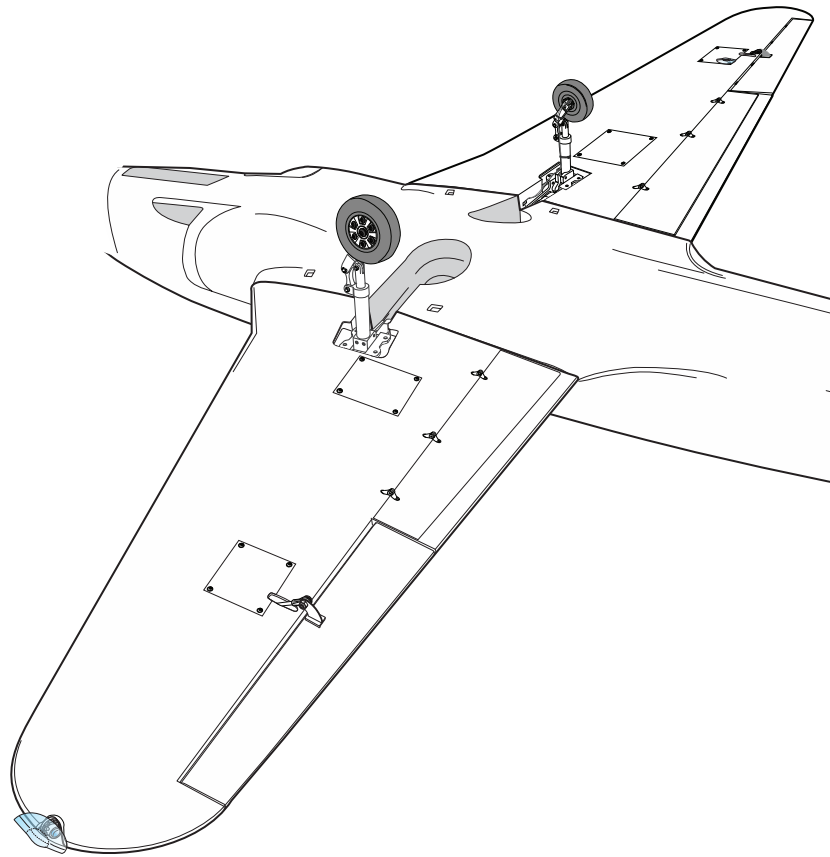**INSTALLING THE HORIZONTAL STABILIZER TO FUSELAGE**

 
Ø12x338mm Carbon Tube




Plastic

 


<Top view>

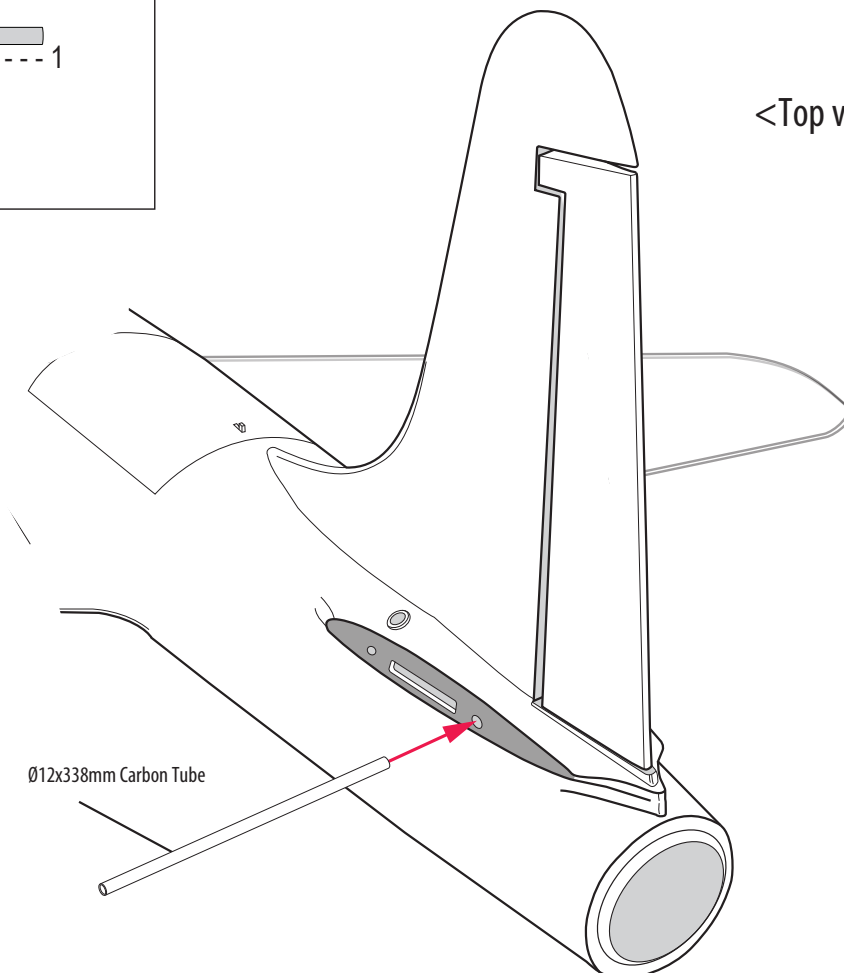


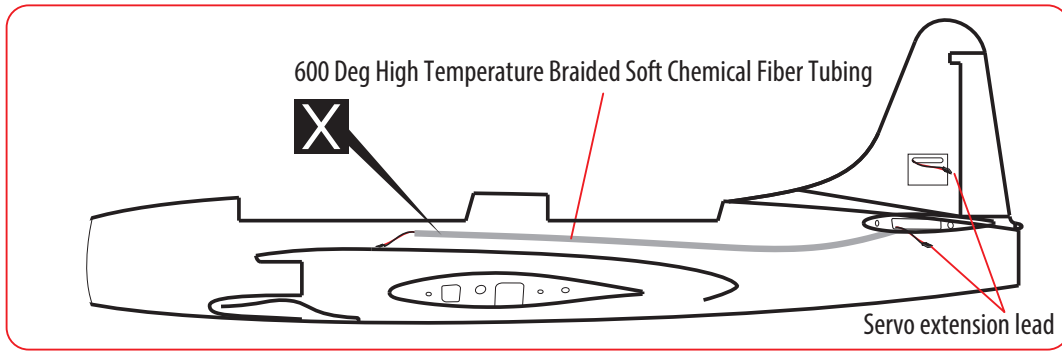

<Top view>

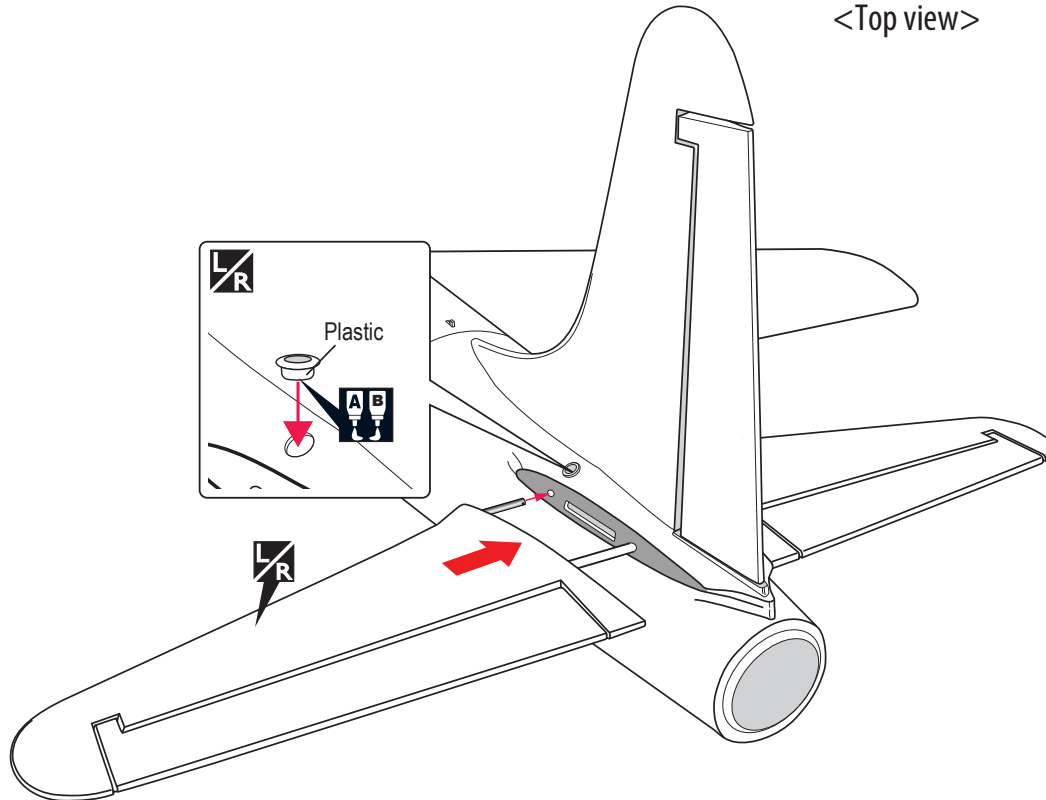

<Top view>

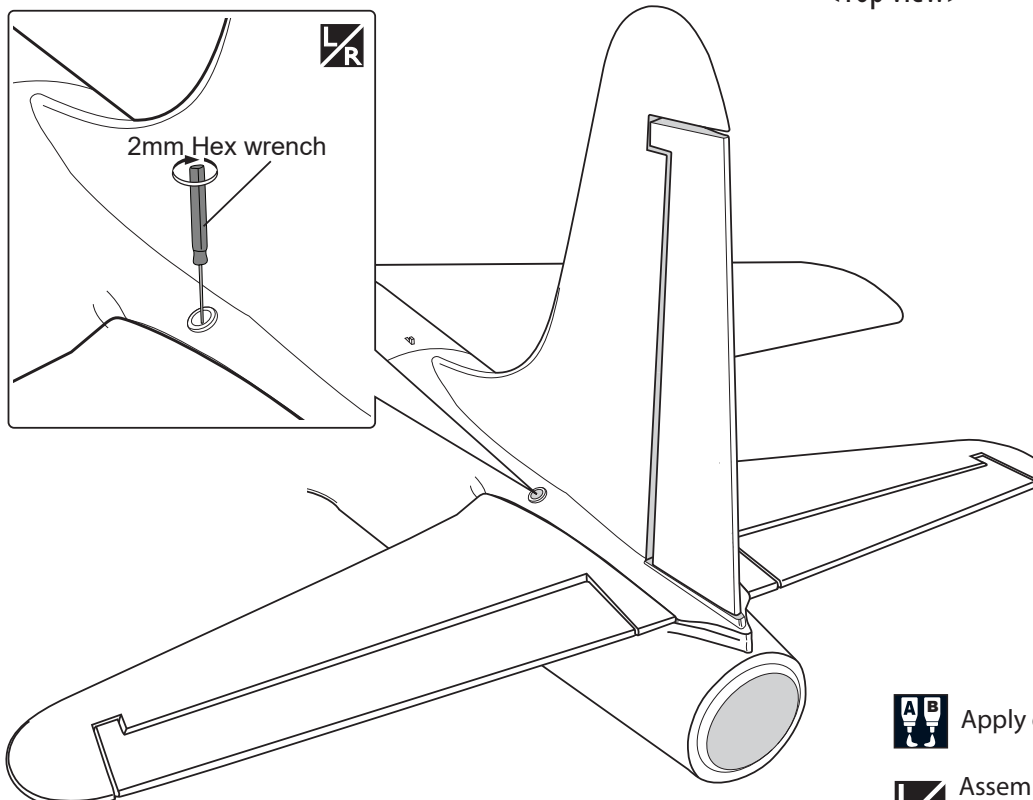

Apply epoxy glue.



Assemble left and right sides the same way

INSTALLING THE NOSE GEAR RETRACT

2.6x30mm Push Rod
For Nose Gear

--- 1

Plastic

--- 2

Brass Ball

--- 2

4x20 Button Head
Cap Screw

--- 4

4mm Sping Washer

--- 4


3x12 Button Head Cap Screw

--- 2

3mm Lock Nut


--- 1

Nose Gear

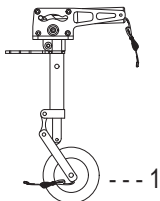

--- 1


 
Controller Box





--- 1




Nose gear
retract
servos.

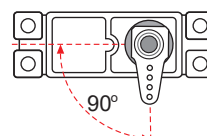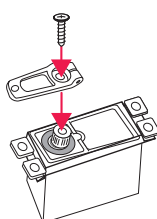

90°

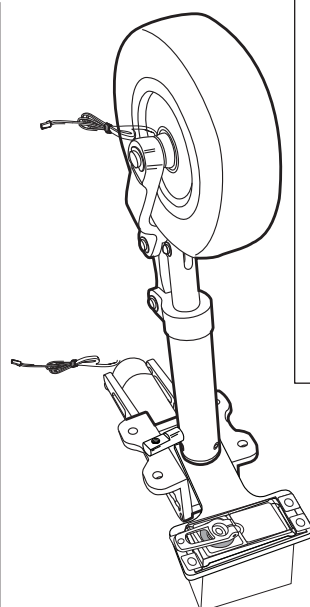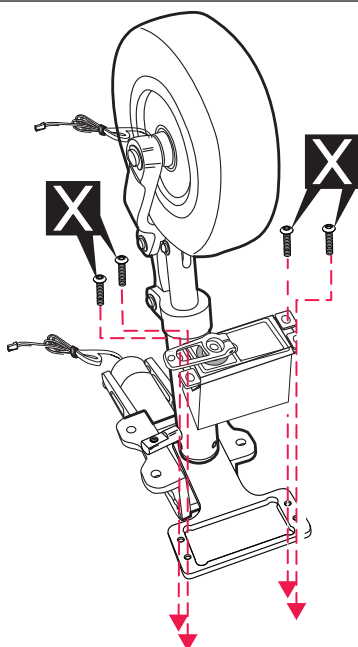


Brass Ball

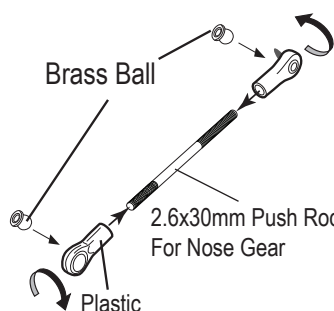

2.6x30mm Push Rod
For Nose Gear



Plastic

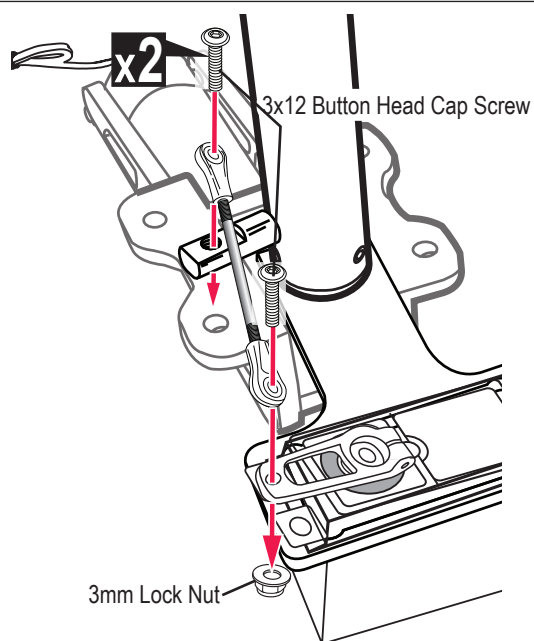

x2

3x12 Button Head Cap Screw

3mm Lock Nut

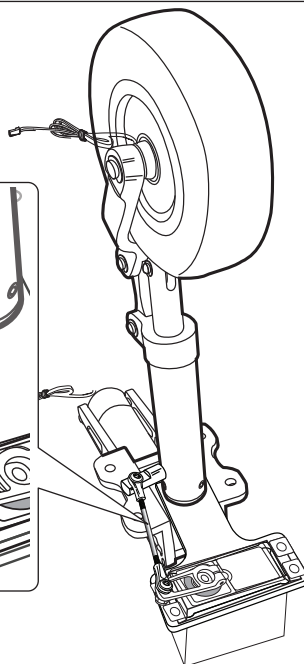
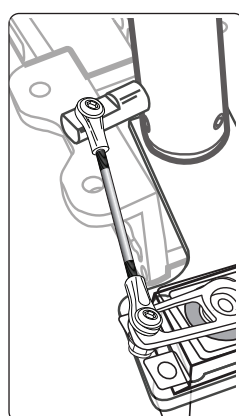



x2

The number of times
the same way Assembly
(in this case twice).


X

Must be purchased
separately!

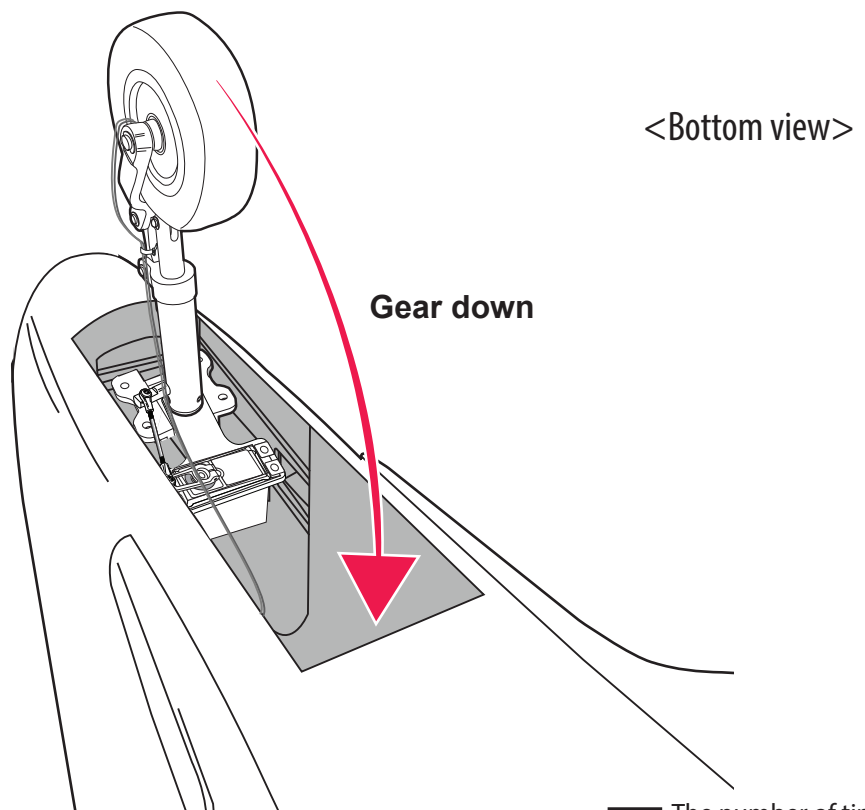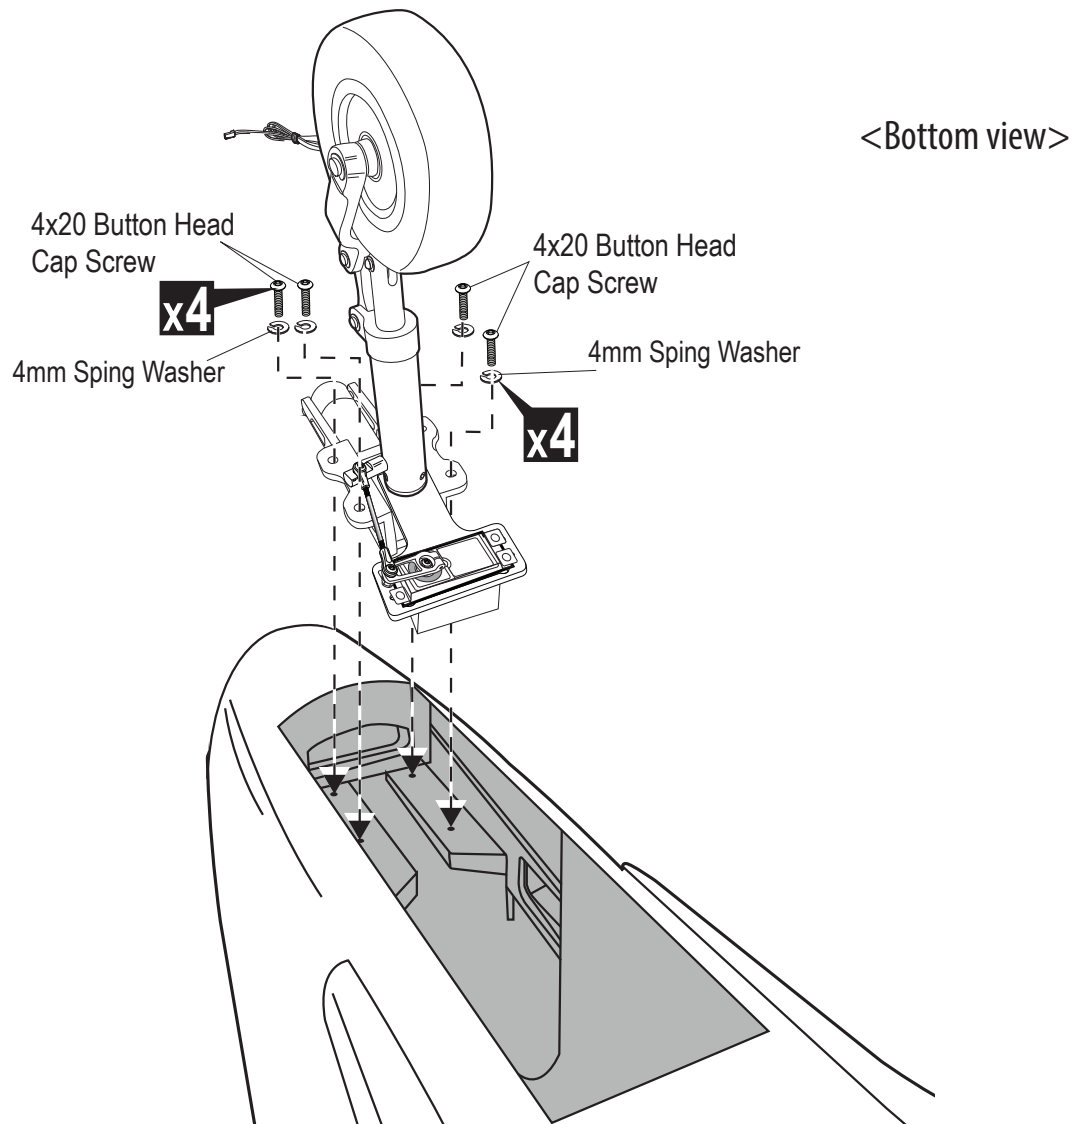


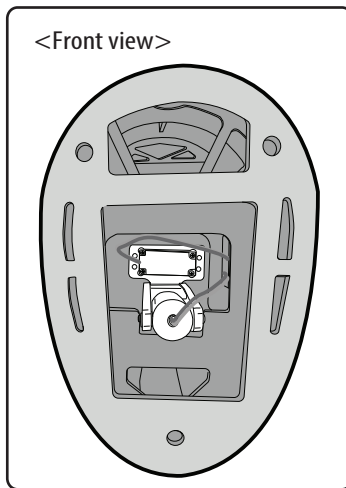



<Bottom view>

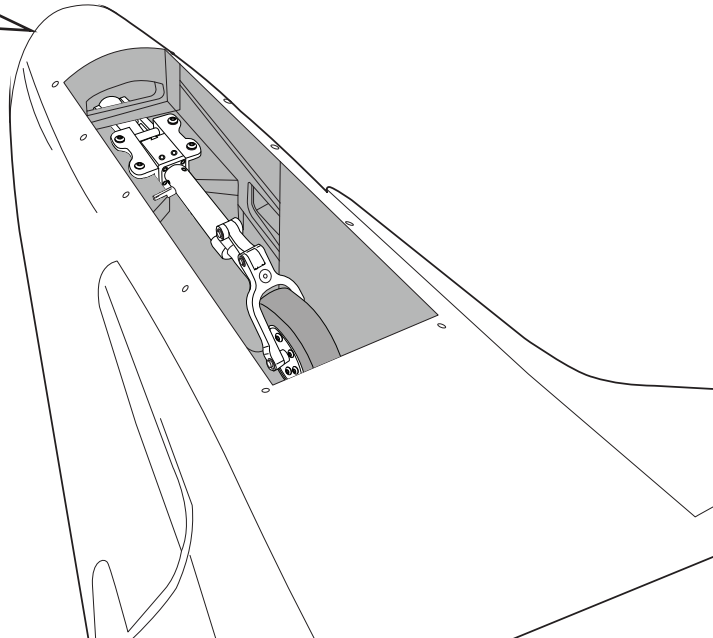


NOSE DOOR INSTALLING

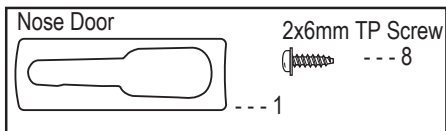


<Bottom view>

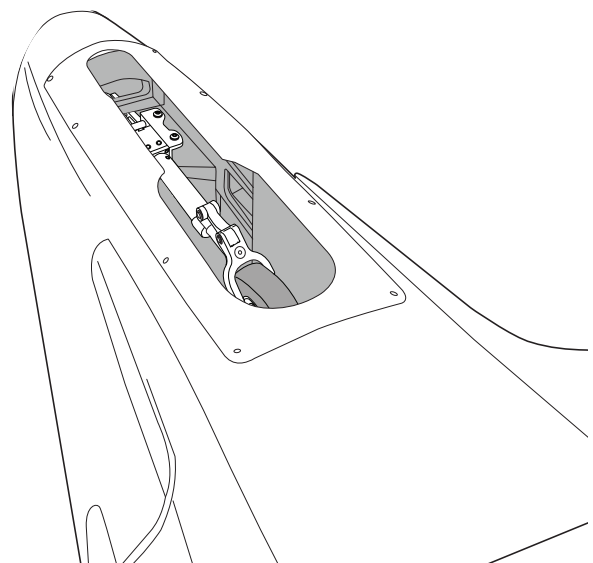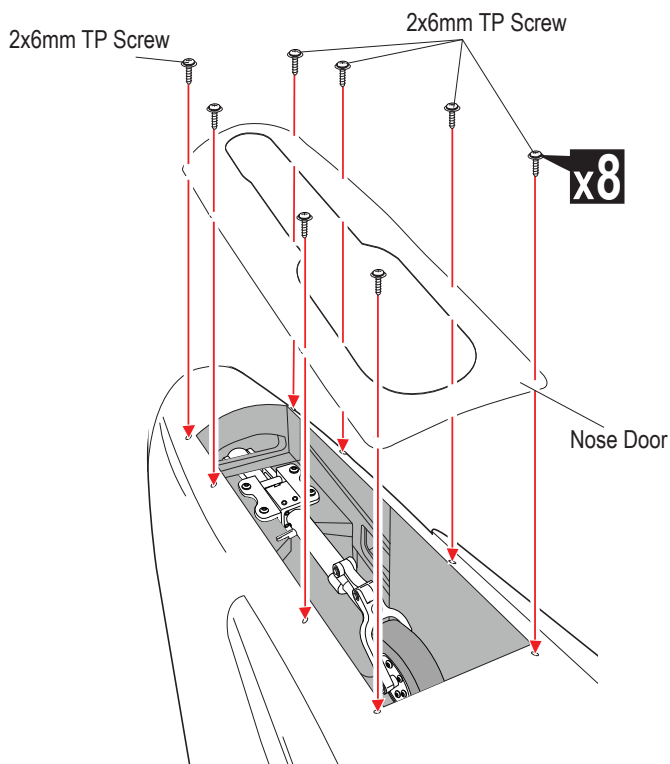


ELECTRIC RETRACT SYSTEM

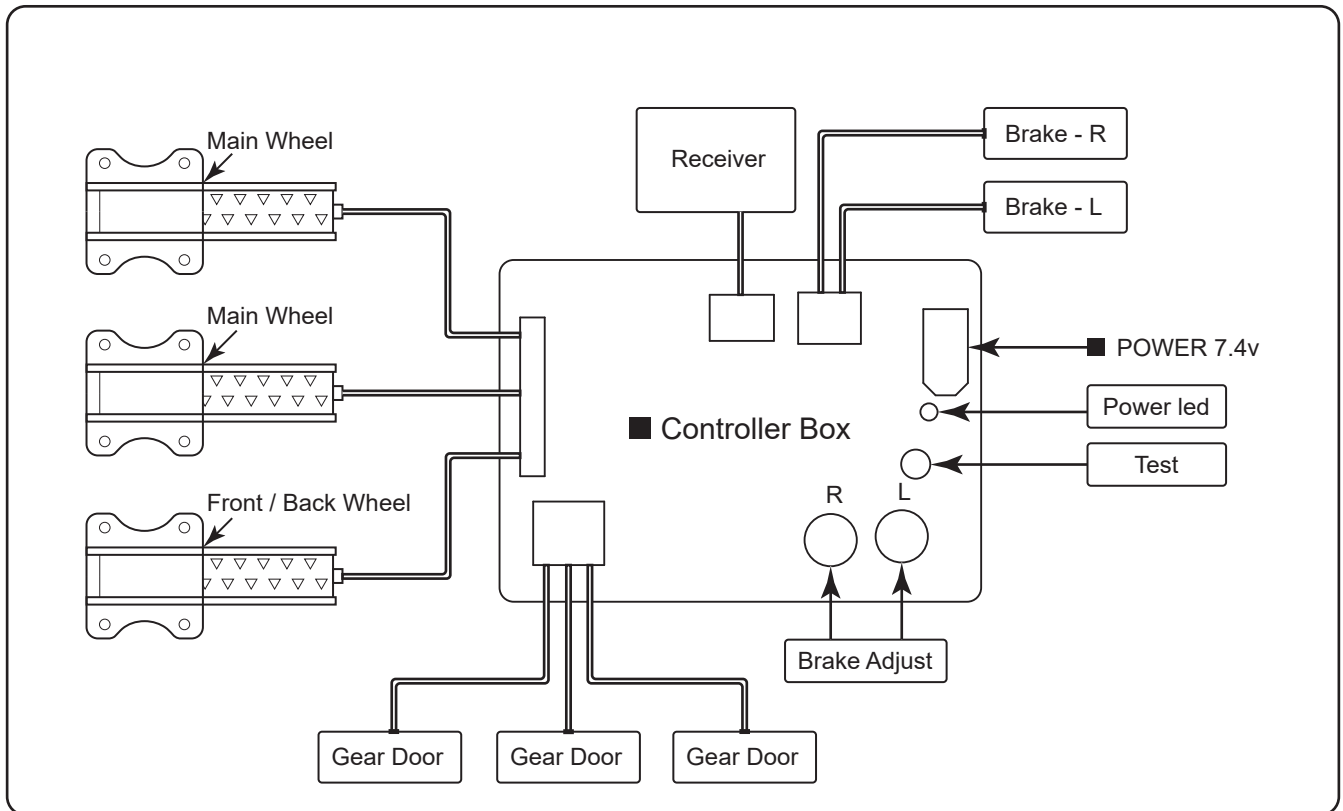


INSTALLING THE FUSELAGE NOSE

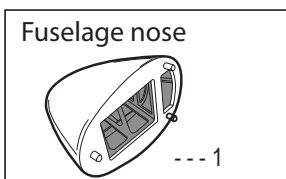


<Top view>

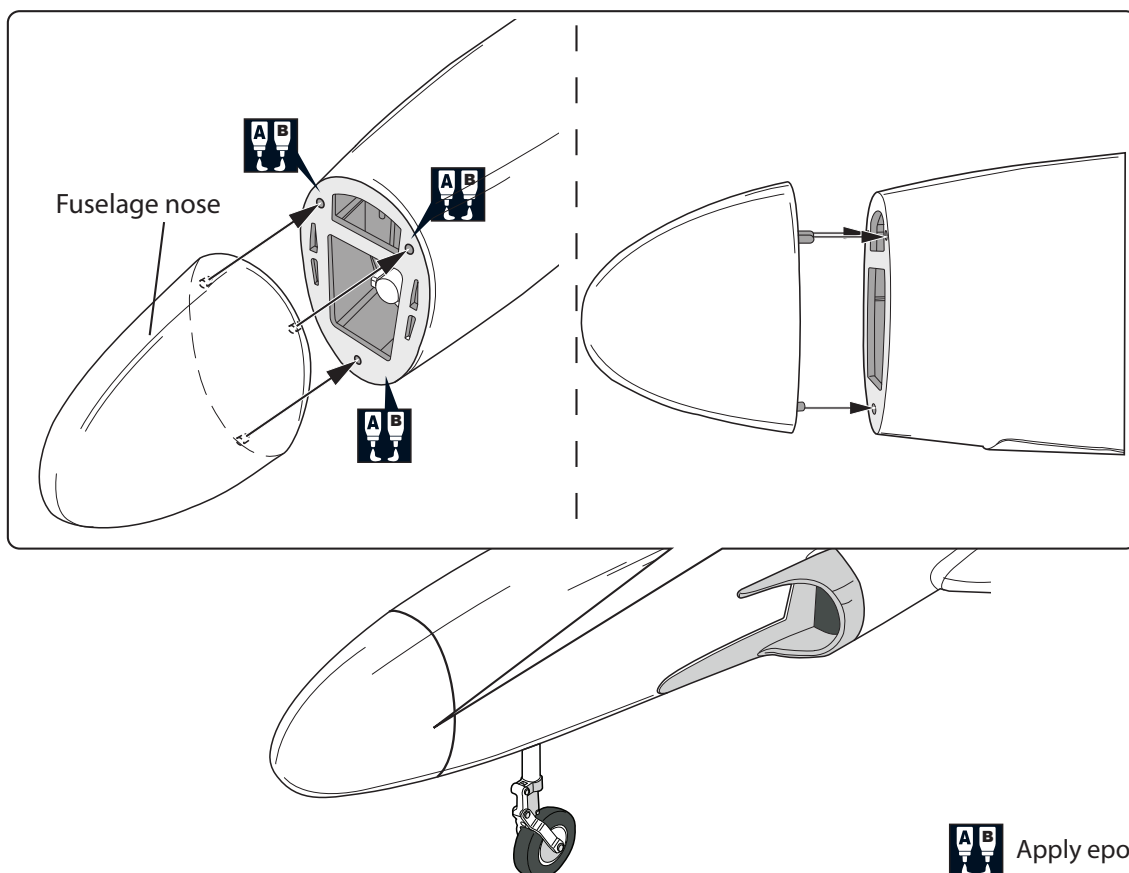

Apply epoxy glue.

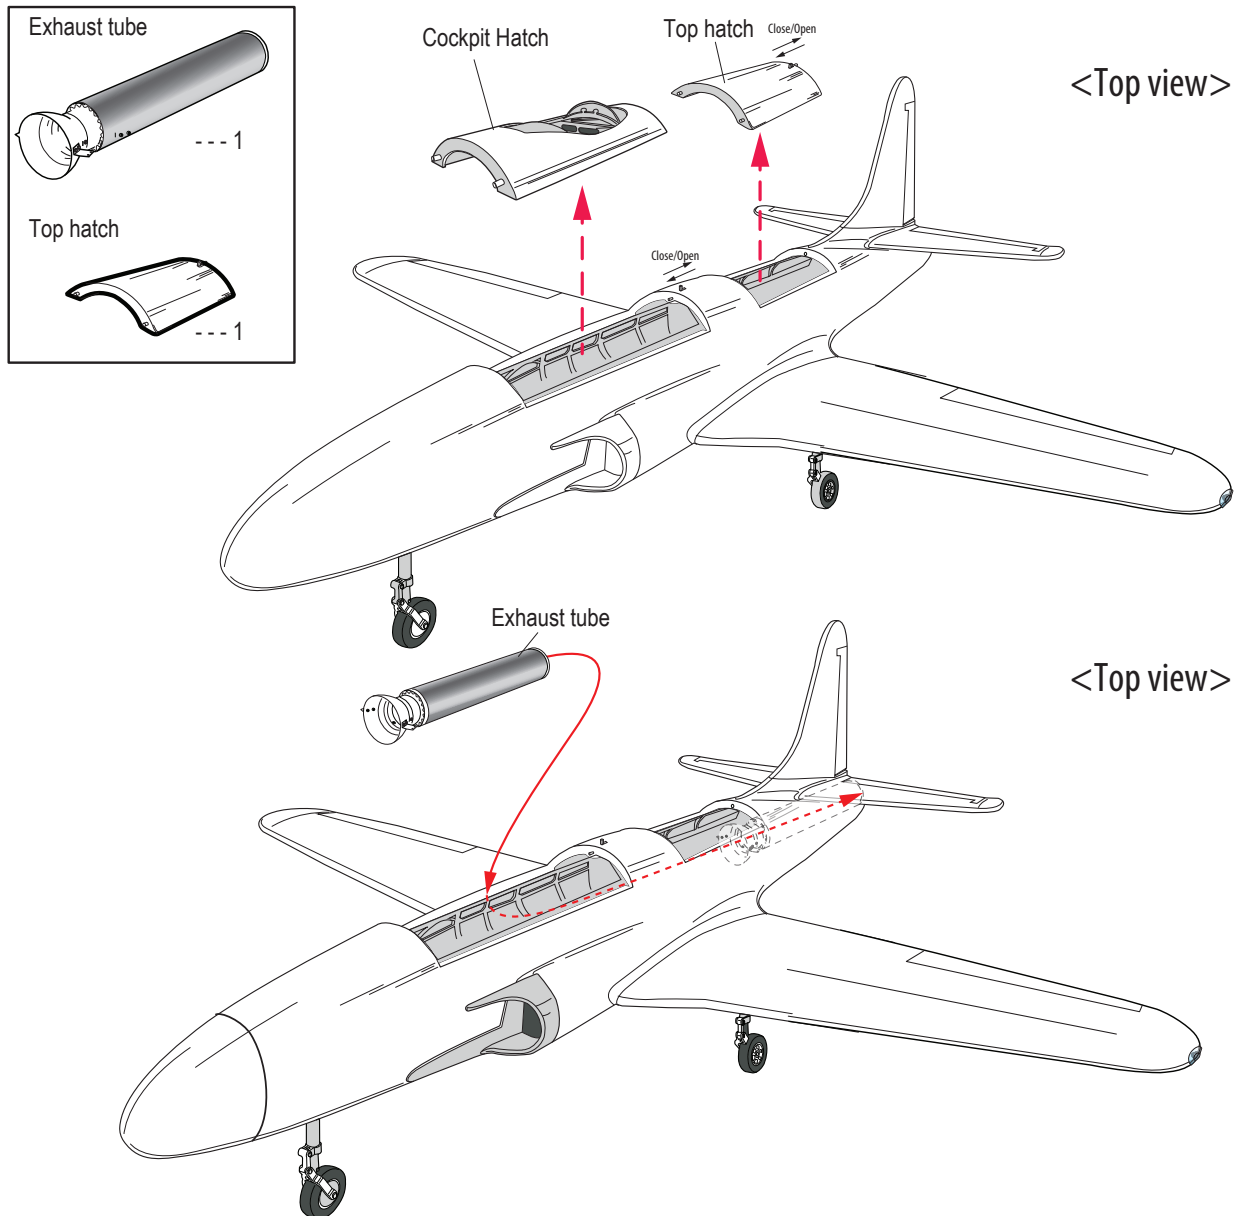INSTALLING THE EXHAUST PIPE

<Top view>


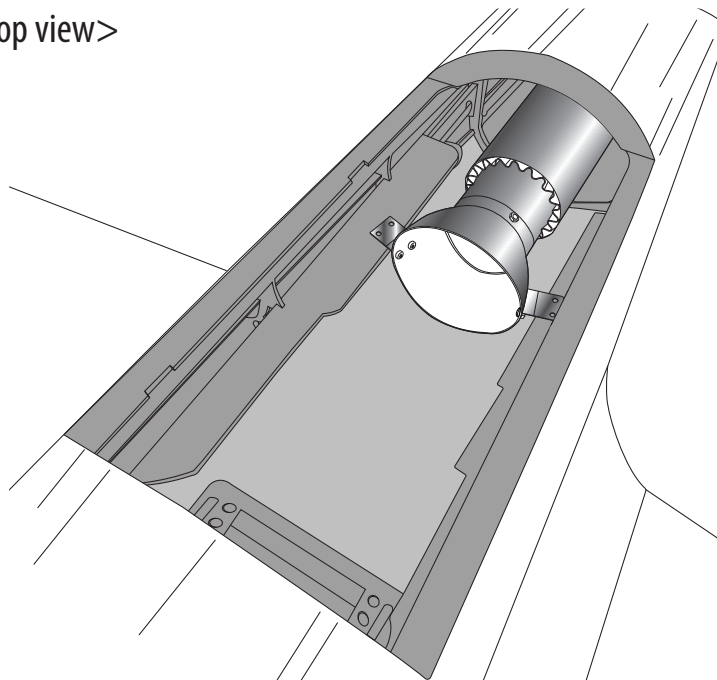



INSTALLING THE ENGINE

3x15mm Tp Screw




--- 10

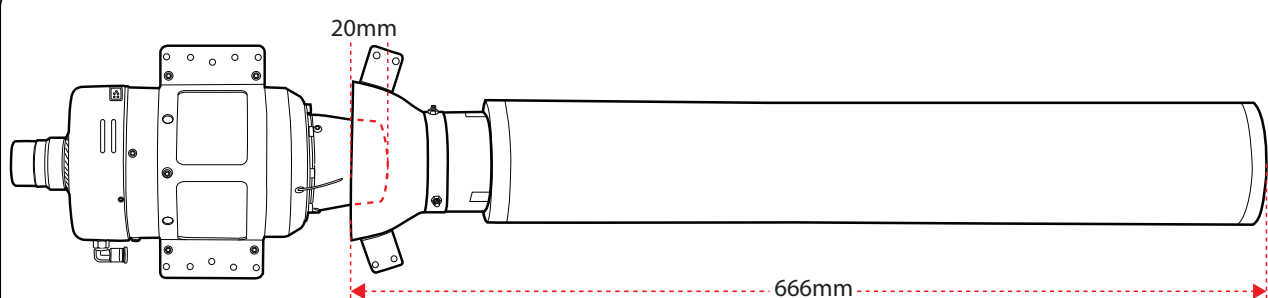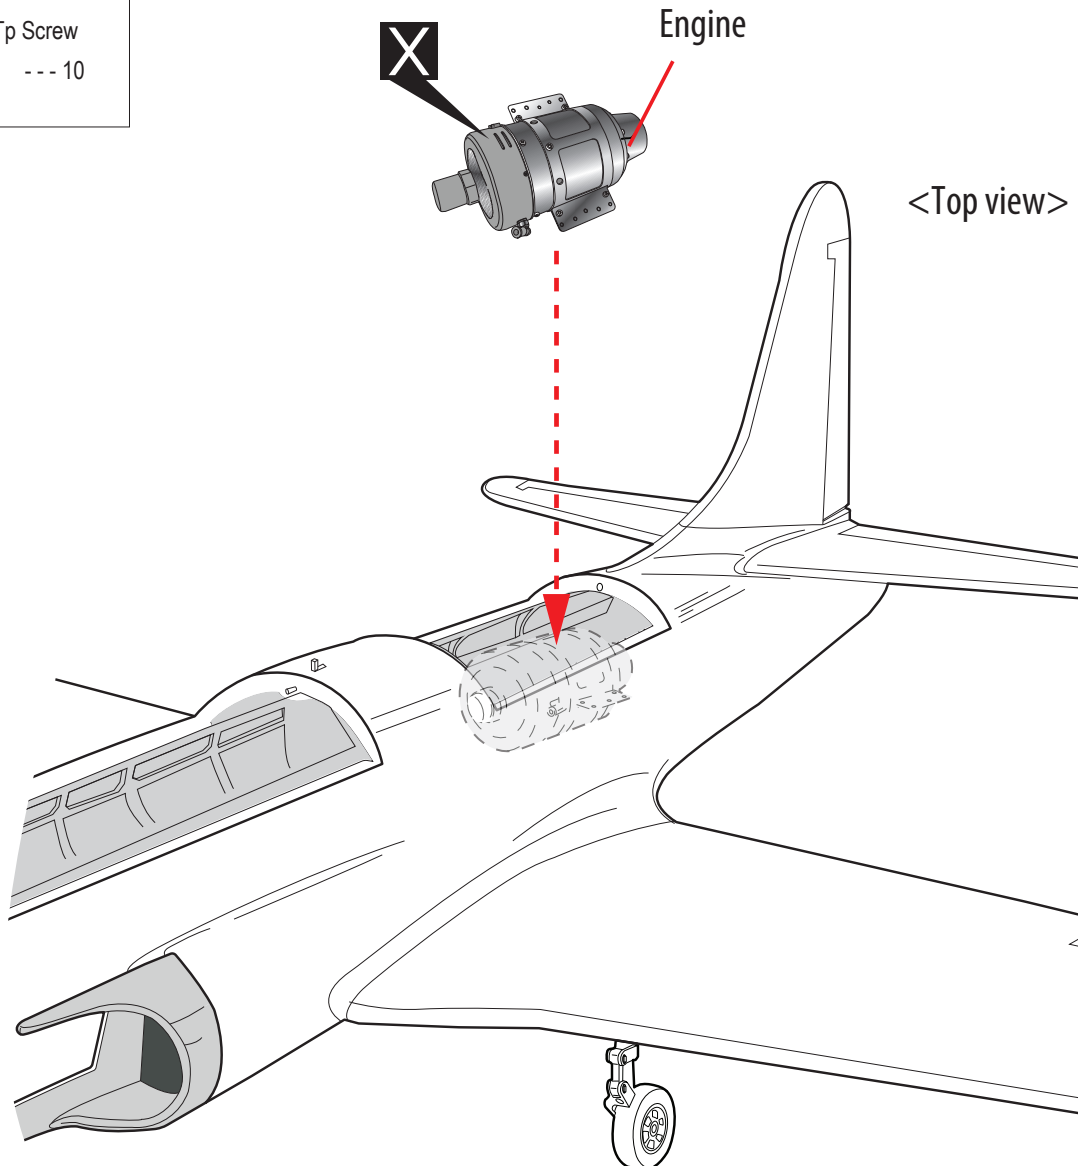

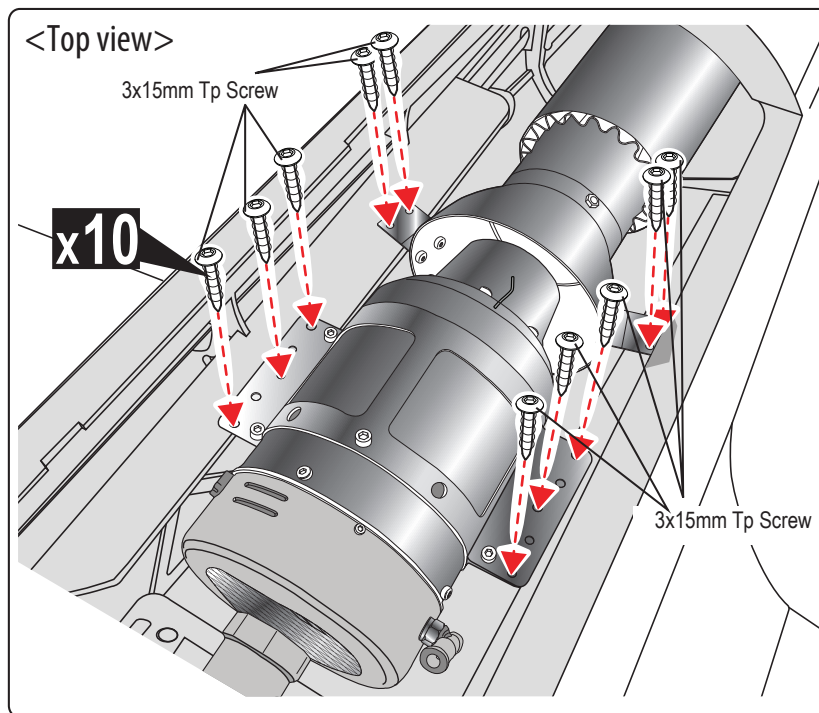



<Top view>

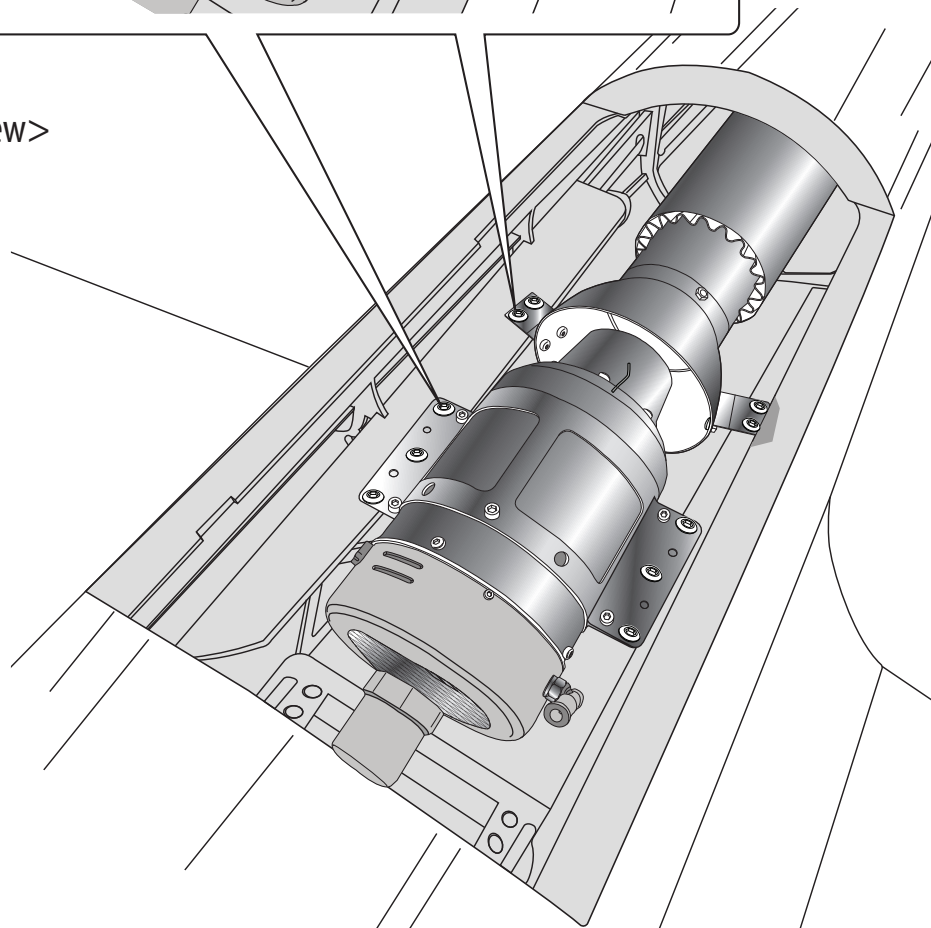


x10 The number of times
the same way Assembly
(in this case twice).

INSTALLING THE FUEL TANK

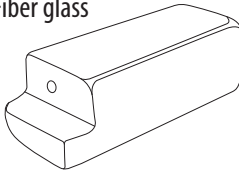
Clunks	---	3x25mm Screw	---	87mm Copper tube	---	Fiber glass	---
	1		1		1		1
Rubber	---	Aluminium	---	55mm Copper tube	---		
	1		1		2		
		Aluminium	---	20 x 560mm Velcro Fuel tank	---		
			1		2		

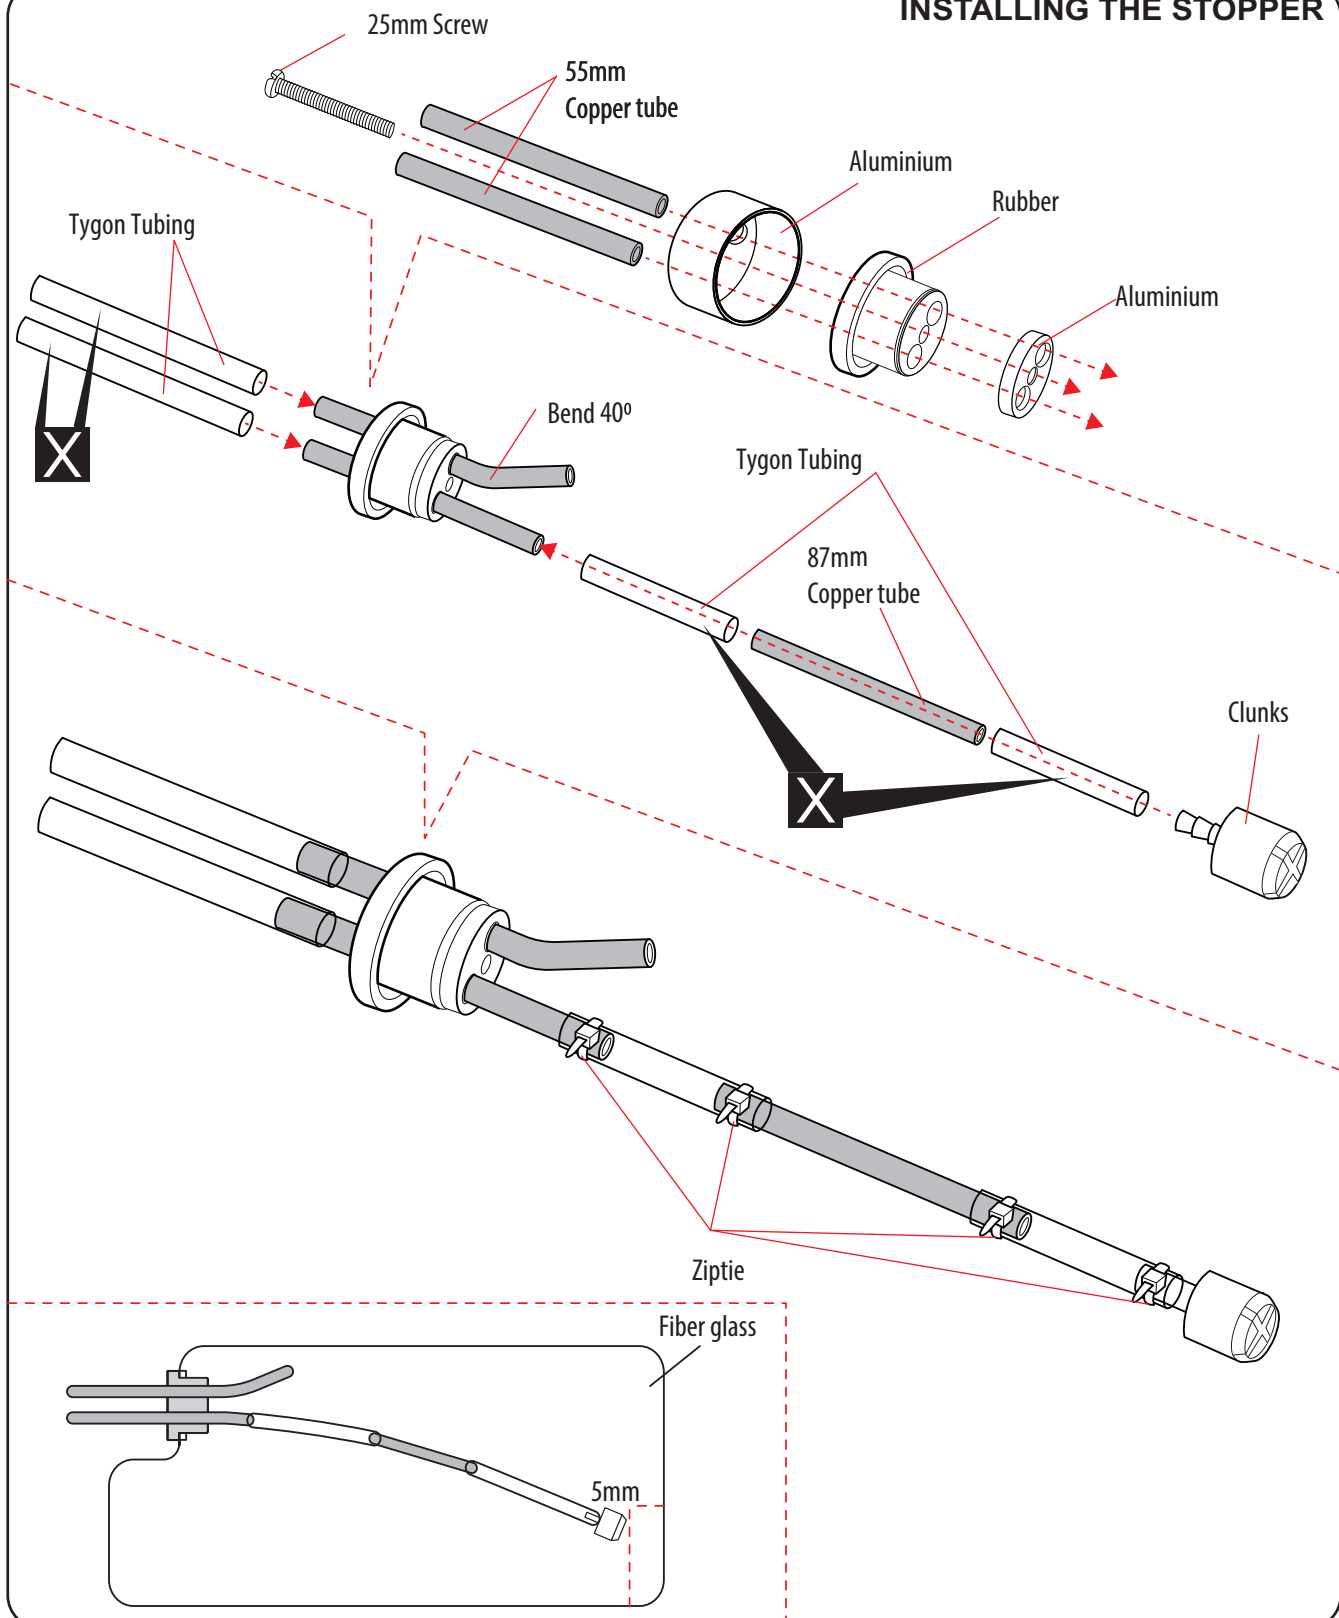INSTALLING THE STOPPER


<Top view>


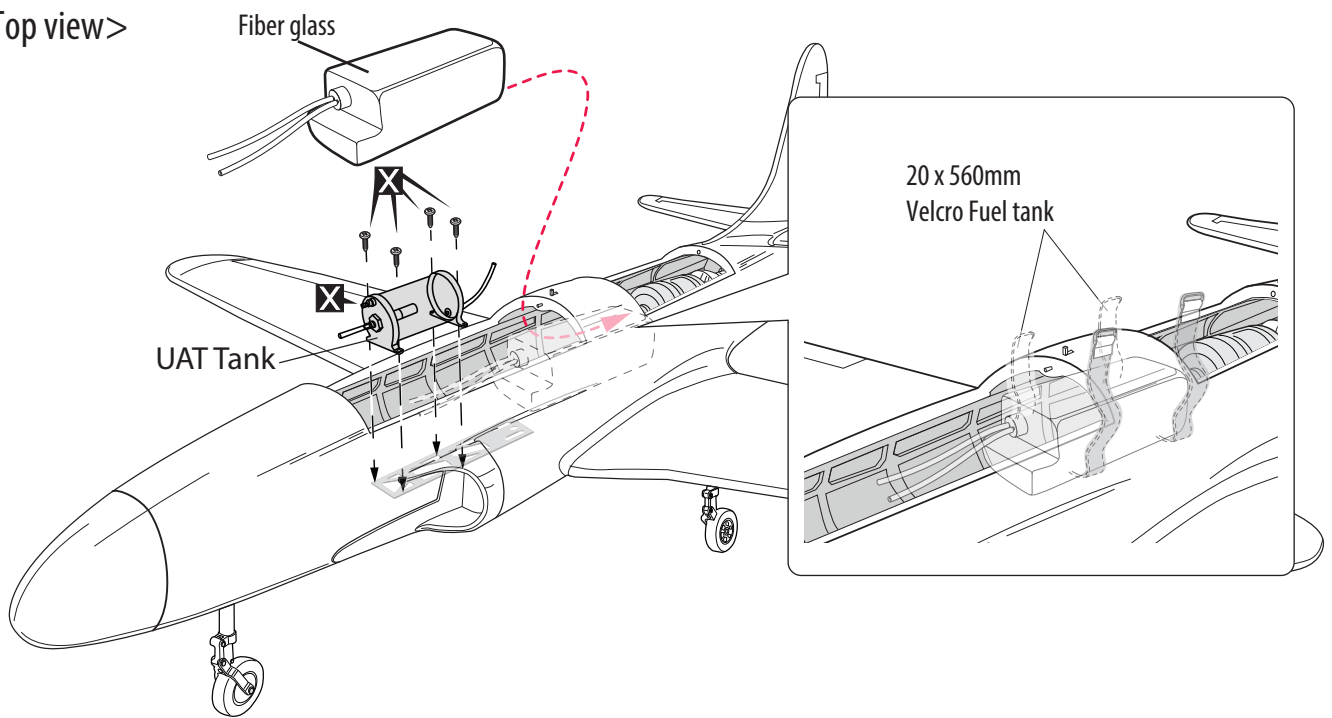


<Top view>

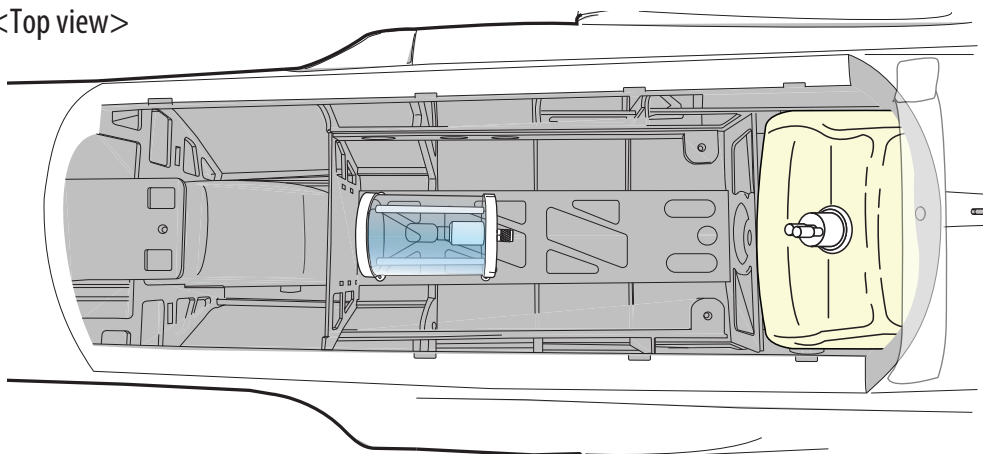


FUEL SYSTEM

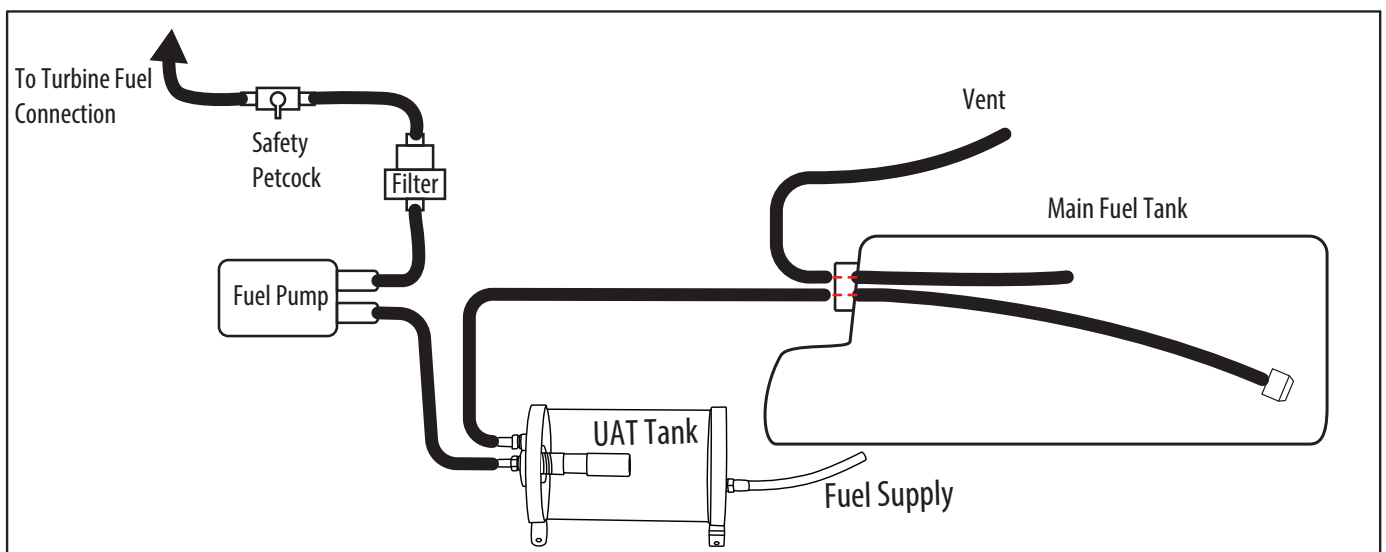

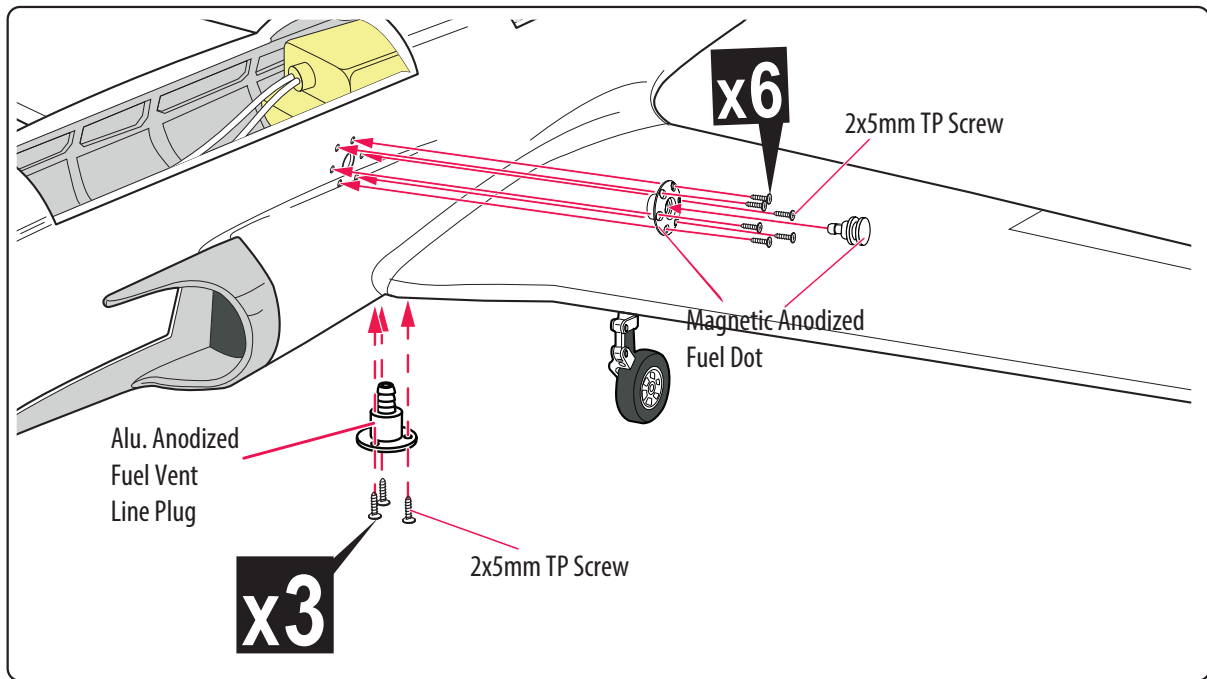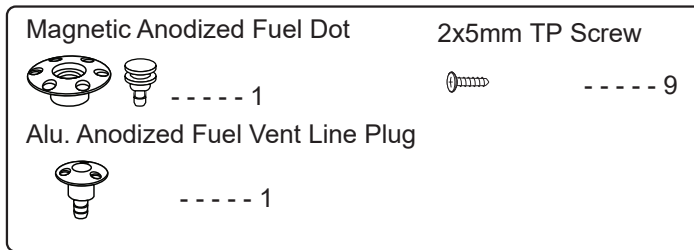

<Top view>

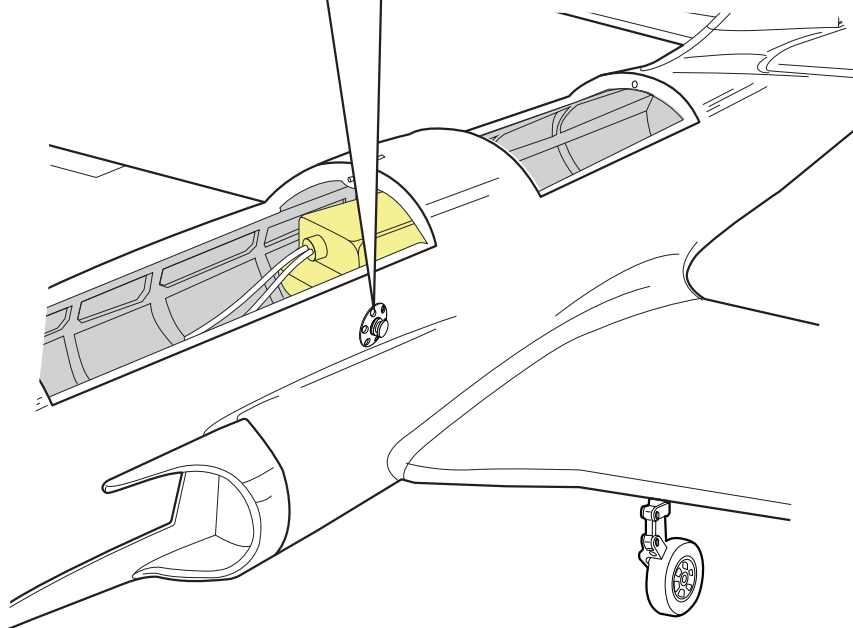


x6 The number of times the same way Assembly (in this case twice).

x3 The number of times the same way Assembly (in this case twice).

INSTALLING THE RECEIVER, BATTERY, CONTROLLER BOX AND SWITCH

<Top view>

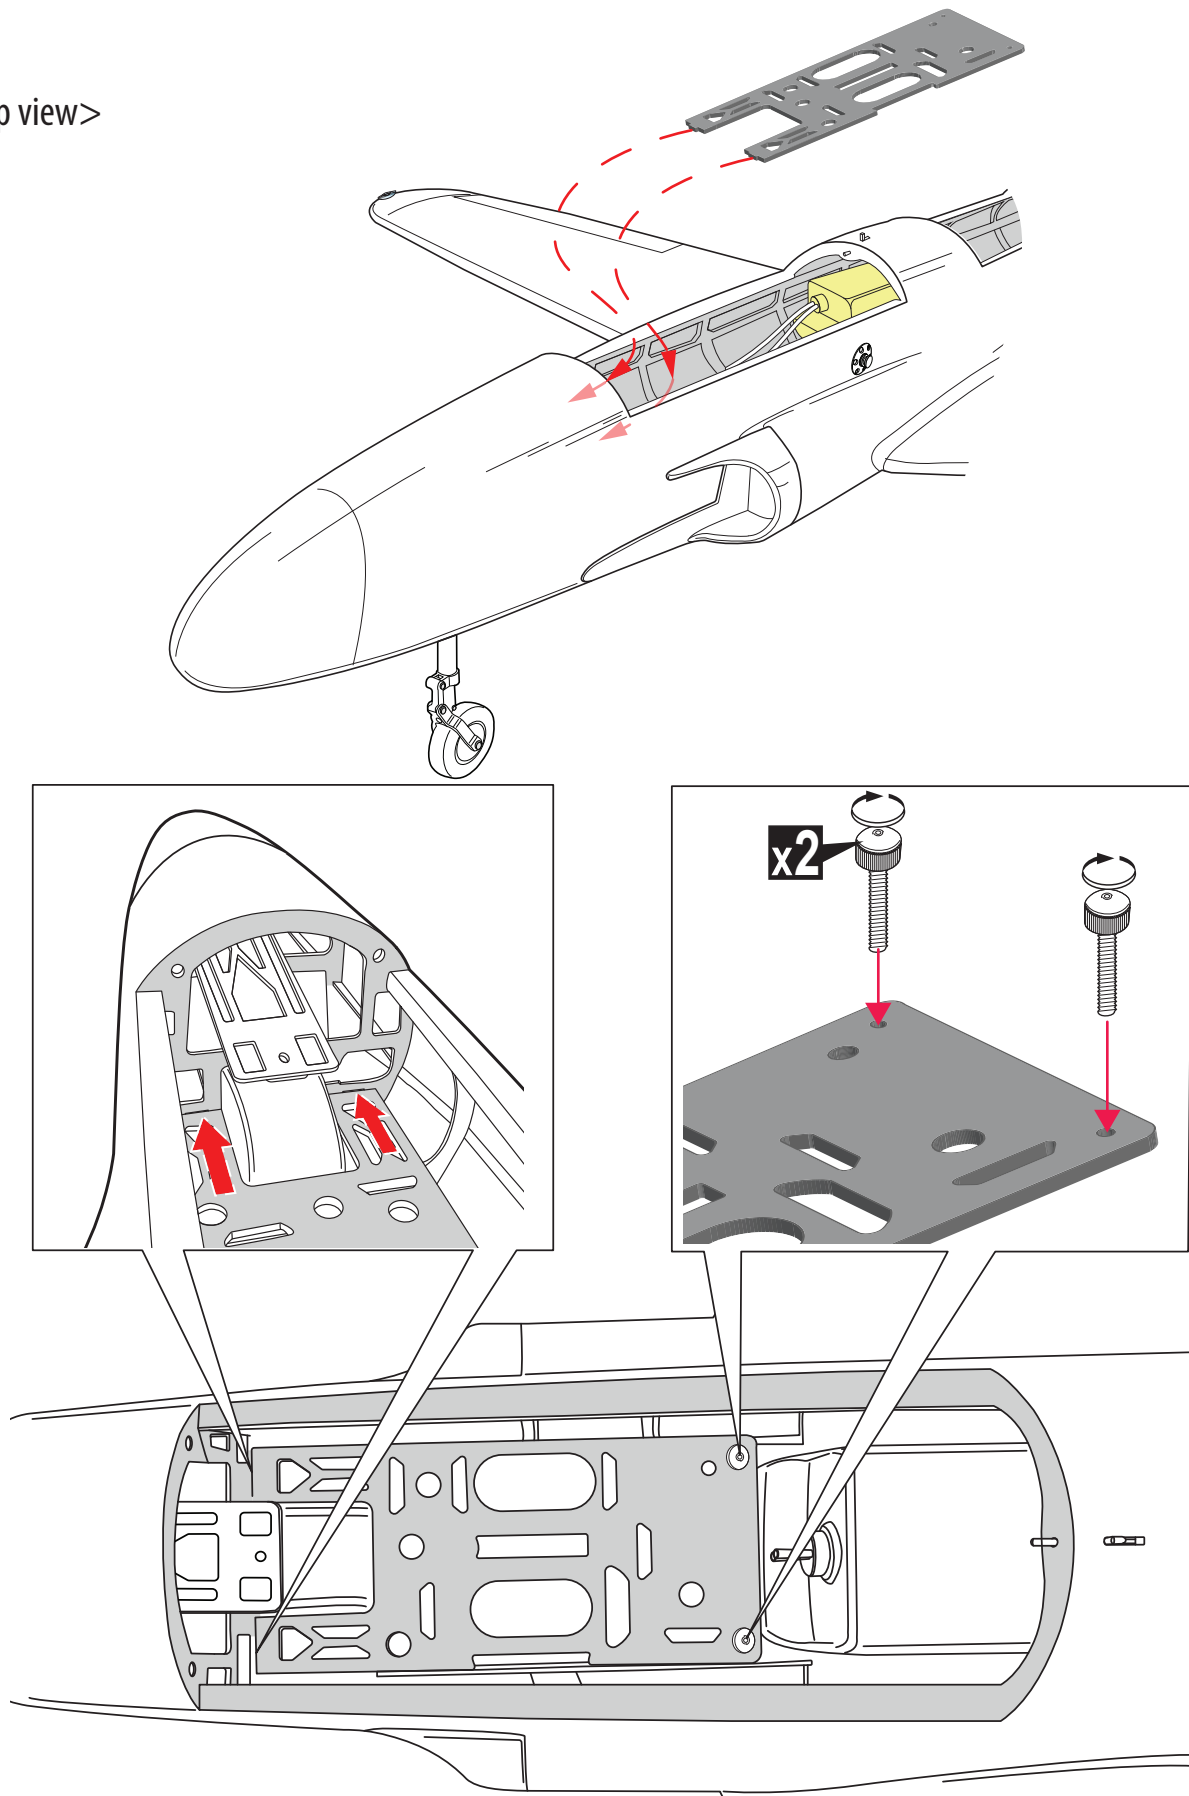

x2 The number of times
the same way Assembly
(in this case twice).


15 x 220mm Velcro battery



BLACK HOLE MODEL

--- 2


<Top view>

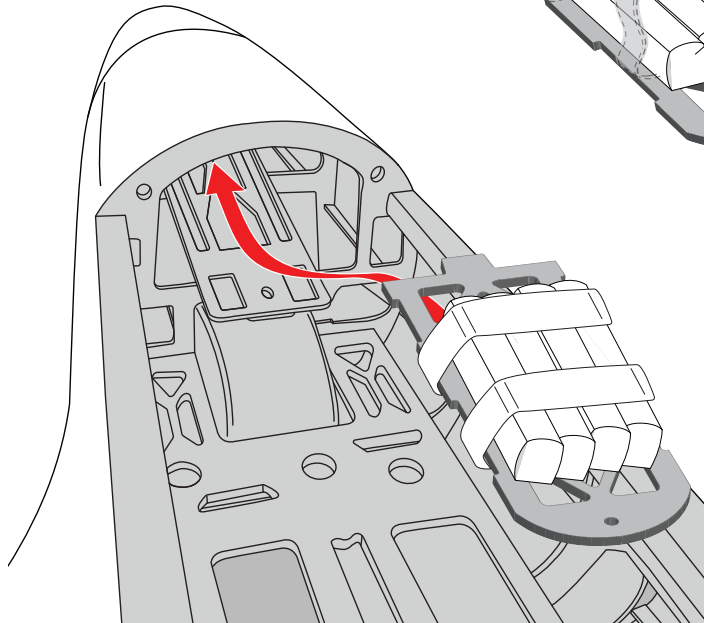**x2**



15 x 220mm Velcro battery

Battery

Battery Tray

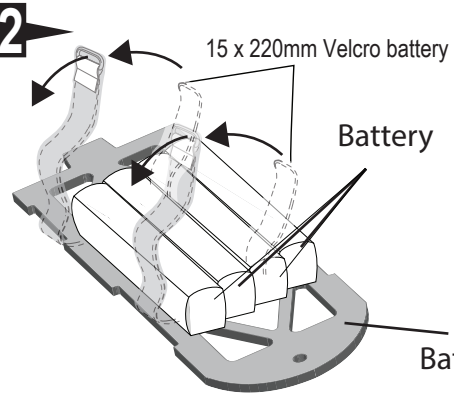


<Top view>


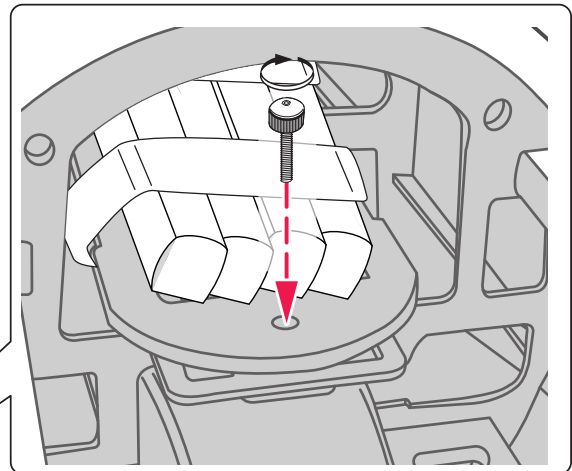
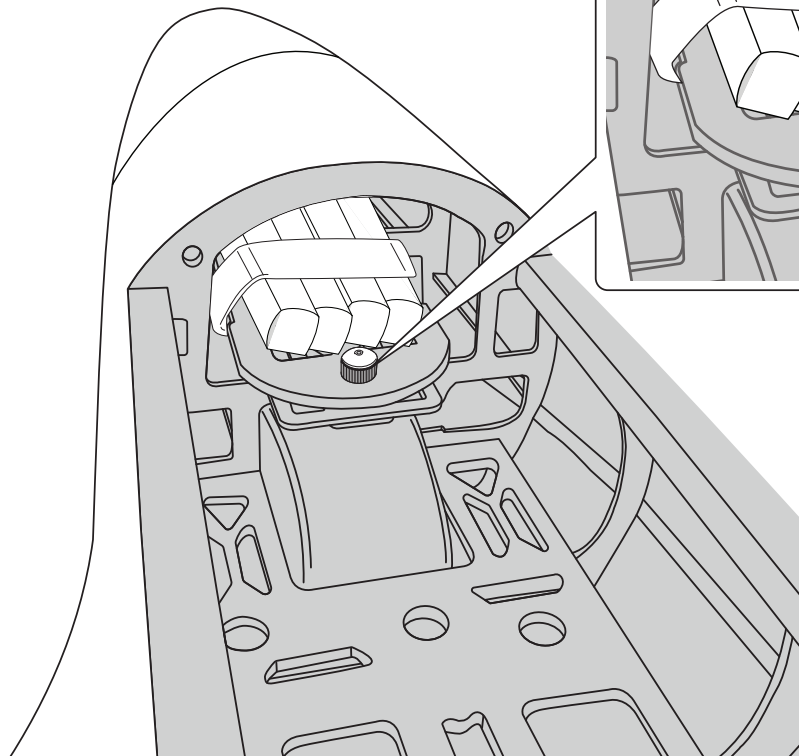
**x2**

The number of times
the same way Assembly
(in this case twice).


<Top view>

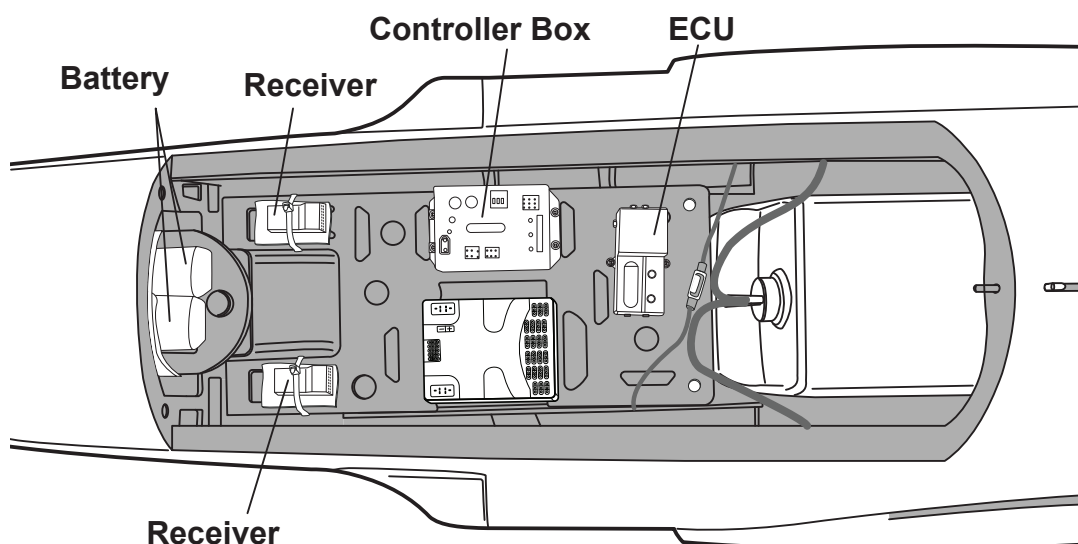

INSTALLING KEINE BOMBE!

   Bomb plastic  --- 2	Bomb tray plastic  --- 1	4mm Sping Washer  --- 8
4x15mm Socket Head Cap Screw  --- 4	2x6mm TP Screw  --- 12	4x25mm Button Head Cap Screw  --- 4


<Bottom view>

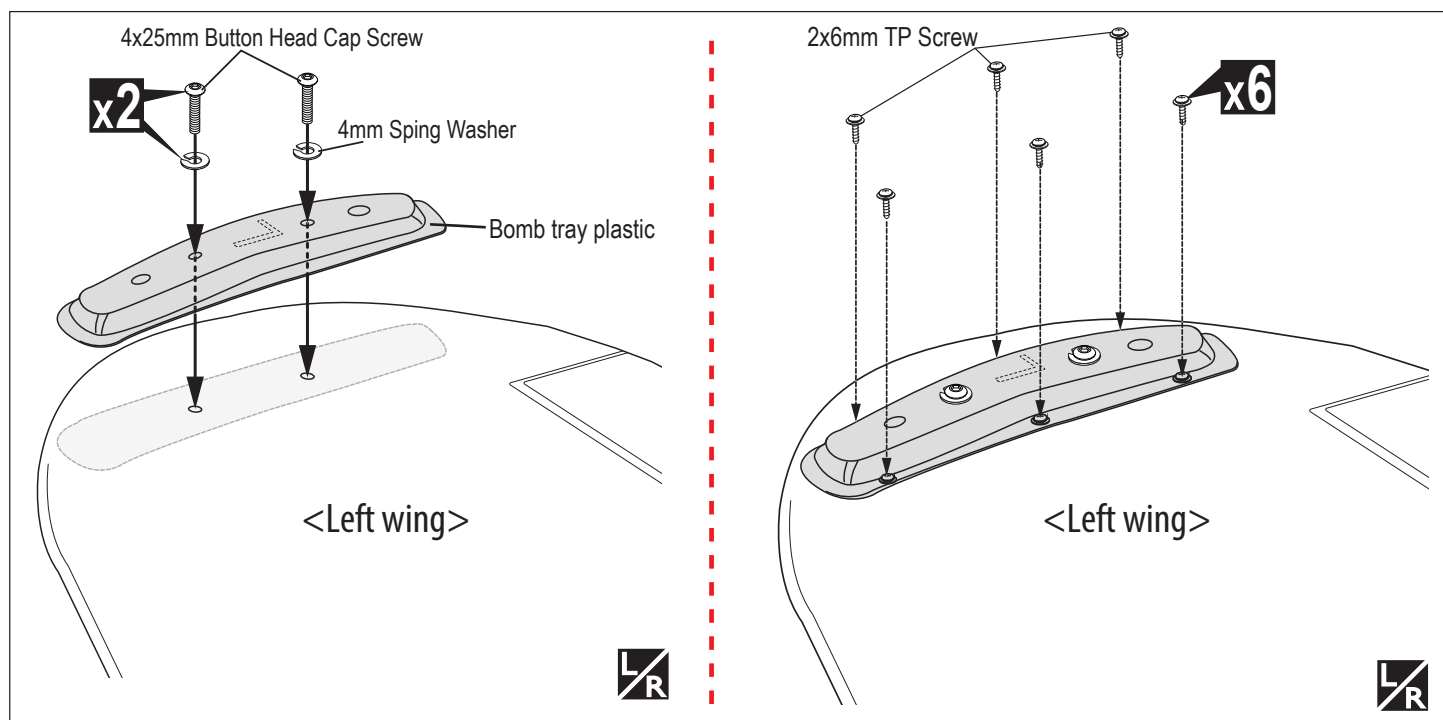

 Assemble left and right sides the same way

x2 The number of times the same way Assembly (in this case twice).

x6 The number of times the same way Assembly (in this case twice).

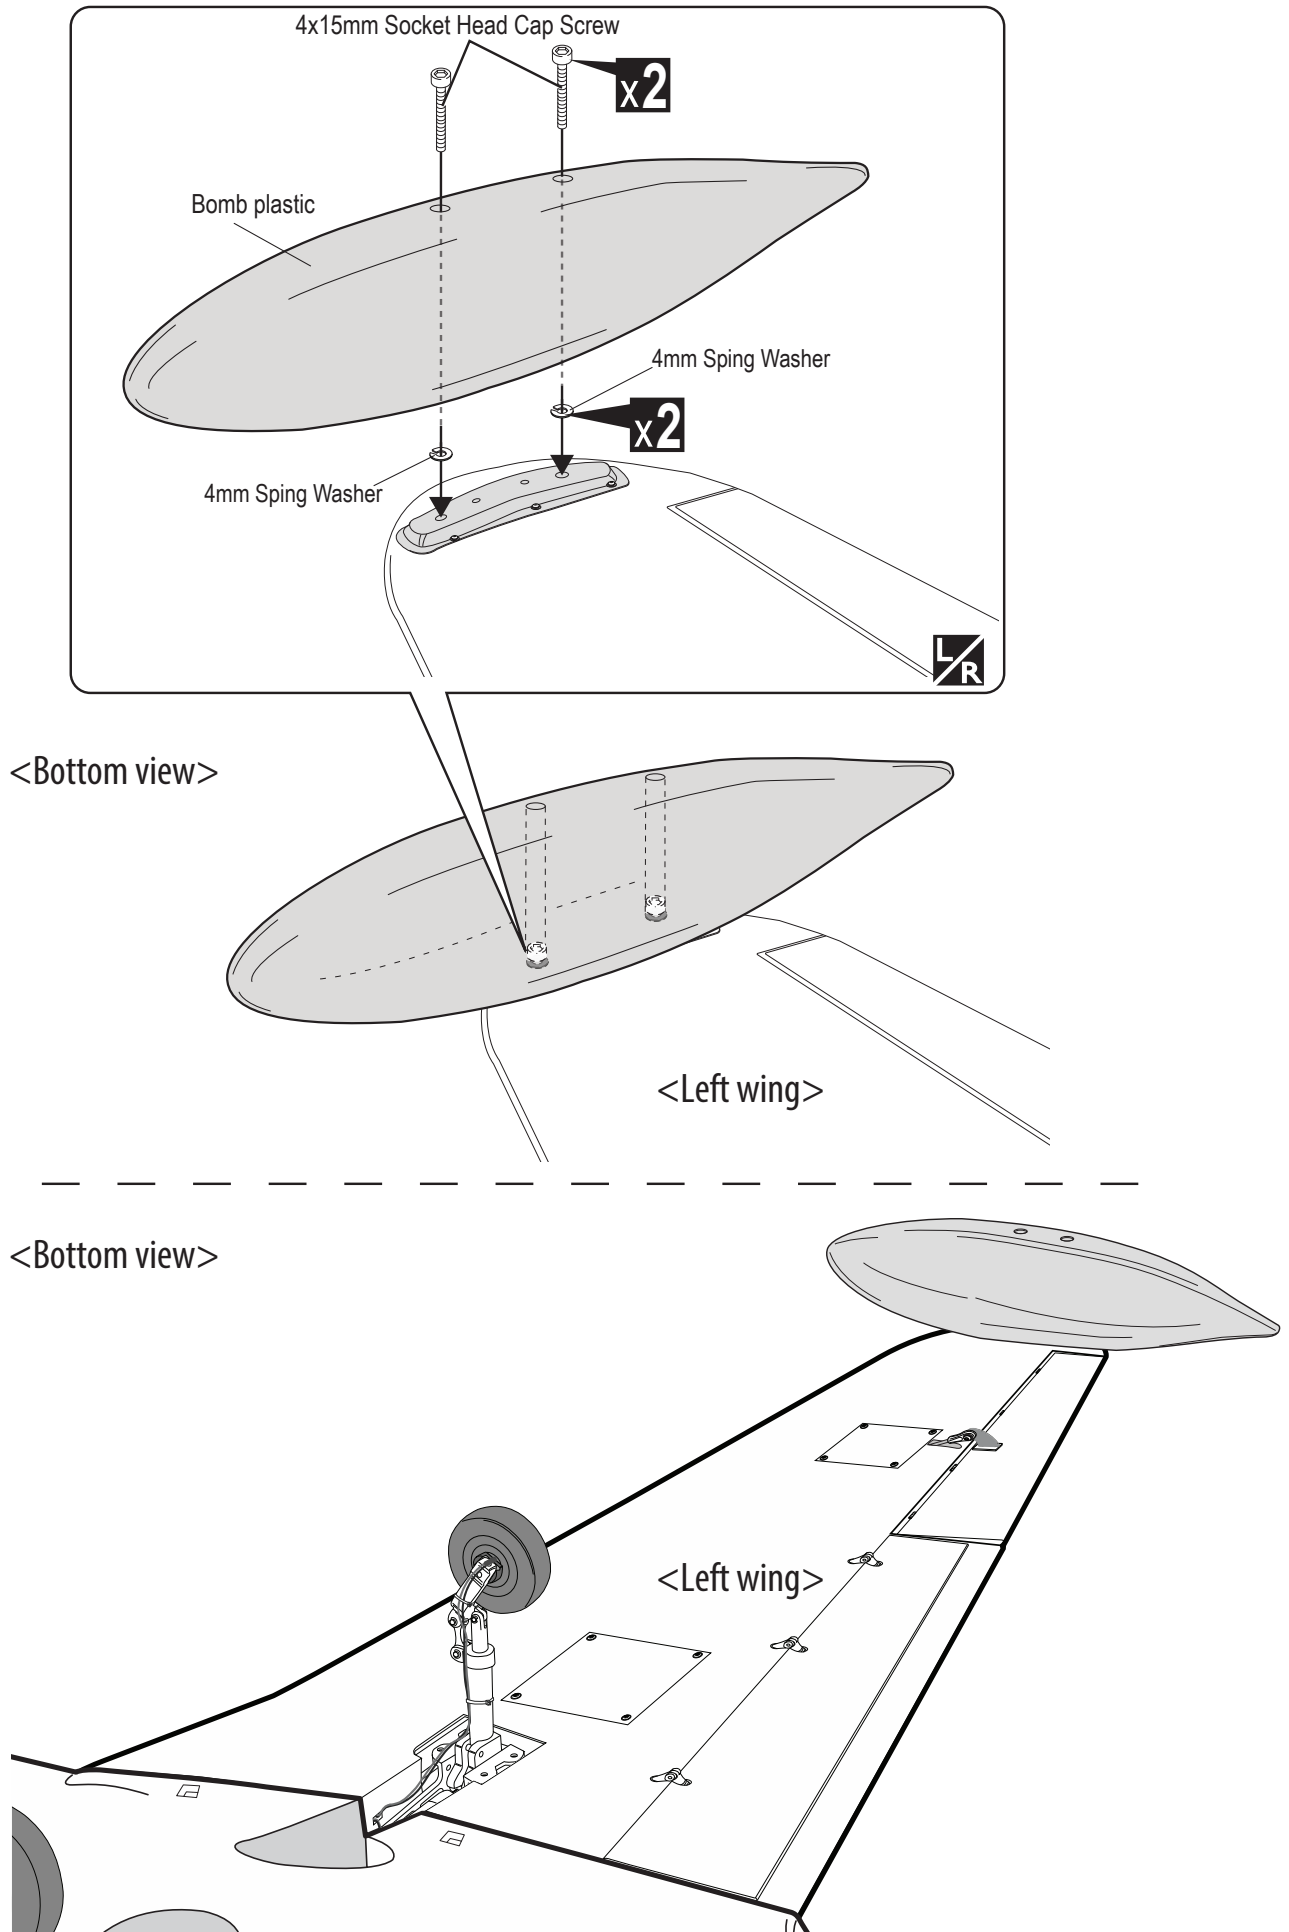

Assemble left and right sides the same way




The number of times the same way Assembly (in this case twice).







Apply epoxy glue.


INSTALLING THE COCKPIT FUSELAGE

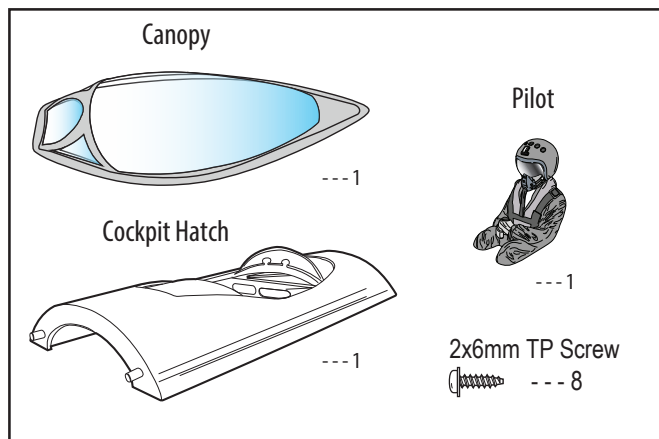


Position the canopy so the rear frame on the canopy is aligned with the rear edge of the cockpit opening. Use canopy glue to secure the canopy to the canopy hatch. Use low-tack tape to hold the canopy in position until the glue fully cures. Wrap the tape completely around the canopy hatch.

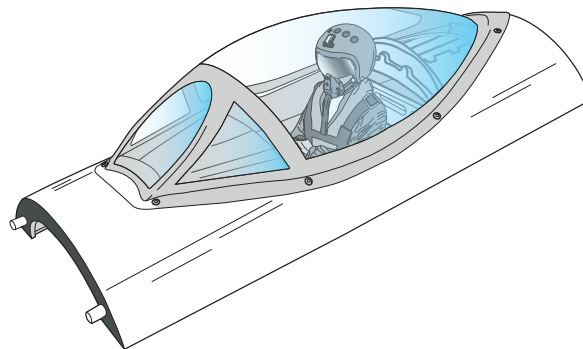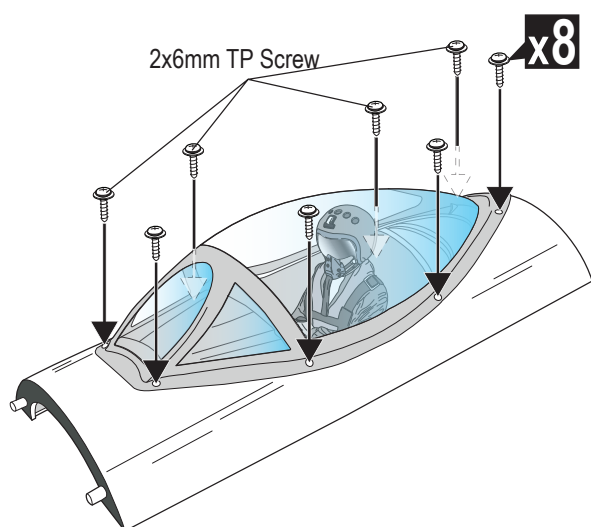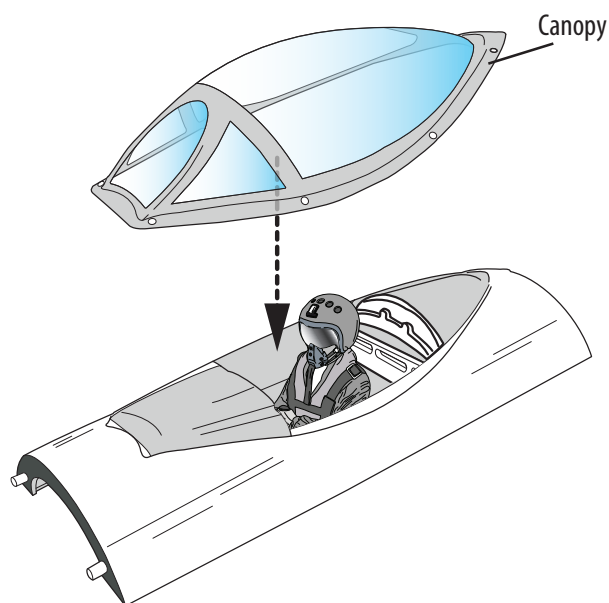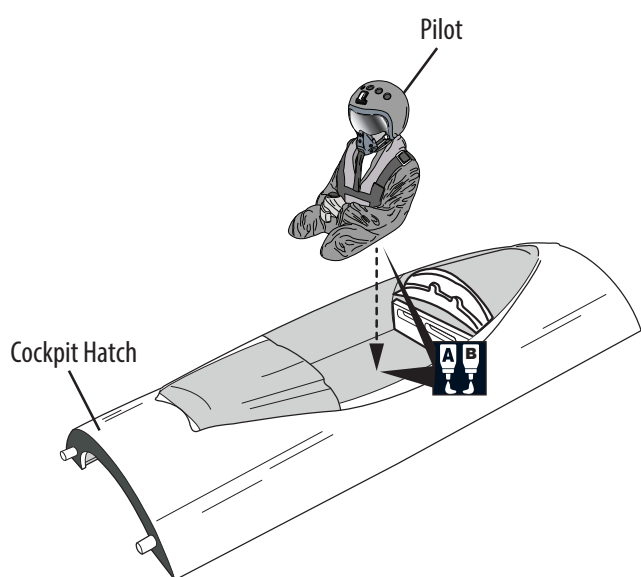

<Top view>

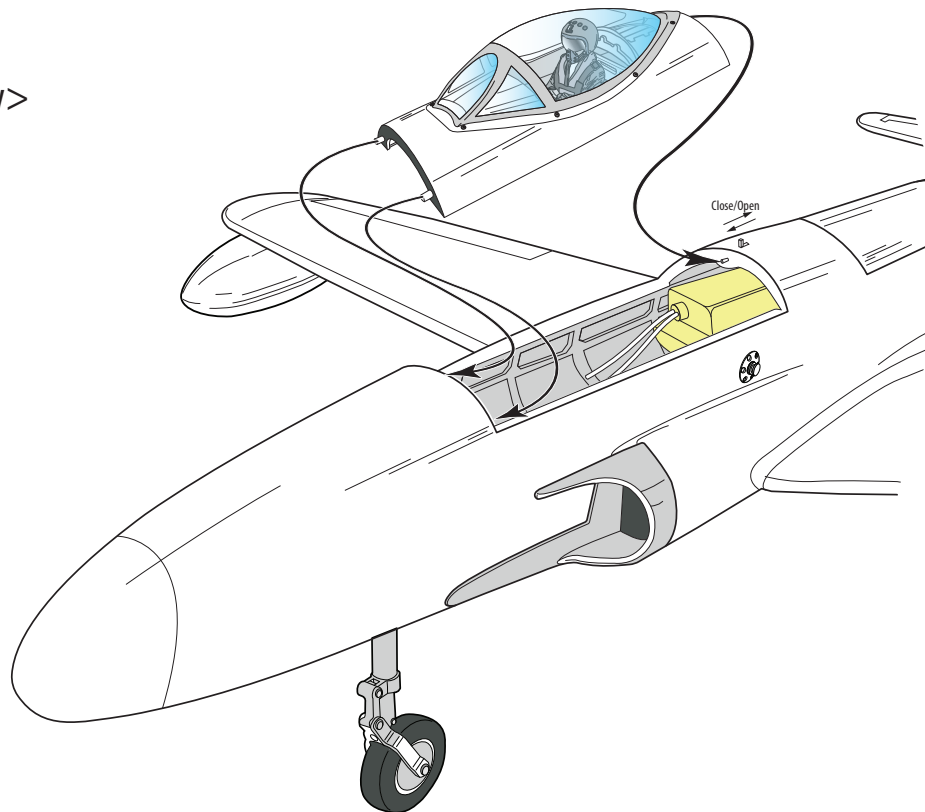

<Top view>

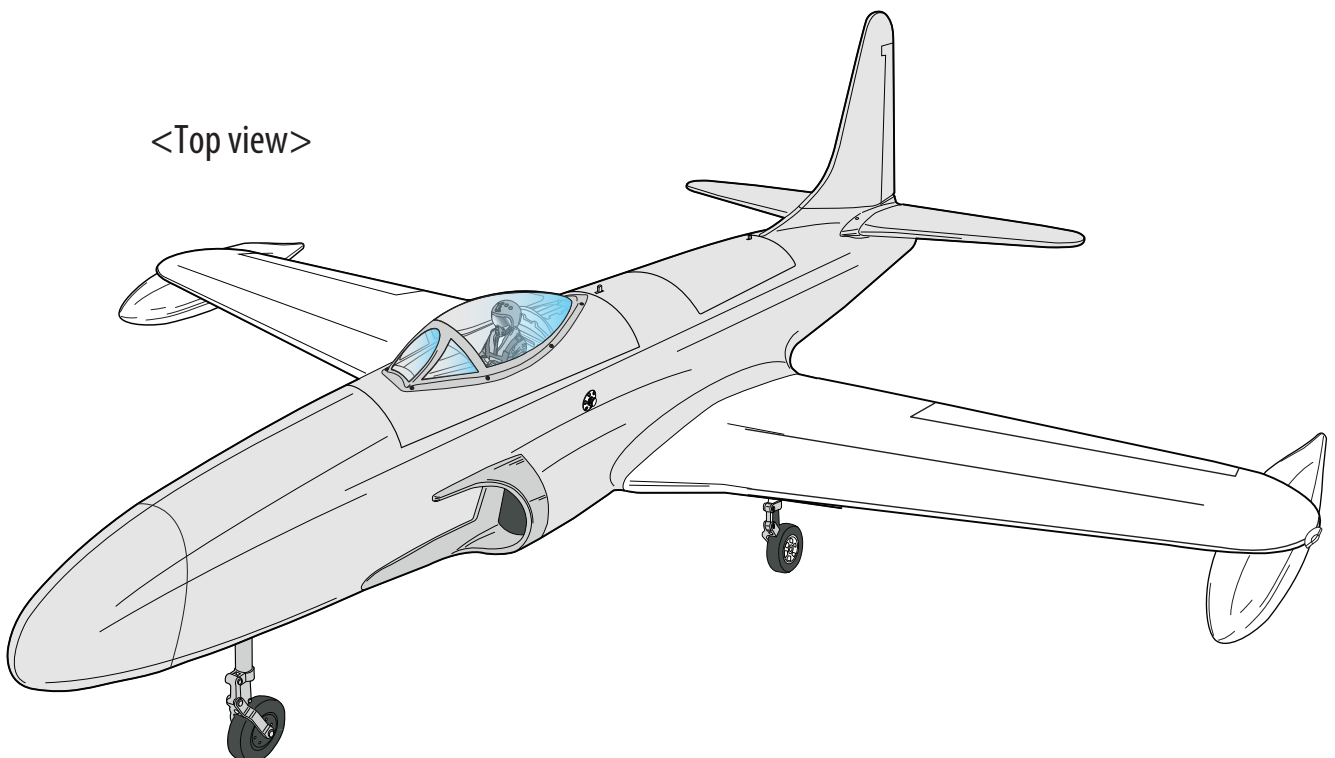


BALANCING

1. It is critical that your airplane be balanced correctly. Improper balance will cause your plane to lose control and crash.

THE CENTER OF GRAVITY IS LOCATED 173mm (6.8in) BACK FROM THE LEADING EDGE OF THE WING, AT THE FUSELAGE. BALANCE A PLANE UPSIDE DOWN WITH THE FUEL TANK EMPTY.

2. If the nose of the plane falls, the plane is nose heavy. To correct this first move the battery pack further back in the fuselage. If this is not possible or does not correct it, stick small amounts of lead weight on the fuselage under the horizontal stabilizer. If the tail of the plane falls, the plane is tail heavy. To correct this, move the battery and receiver forward or if this is not possible, stick weight into the firewall. When balanced correctly, the airplane should sit level or slightly nose down when you lift it up with your fingers.

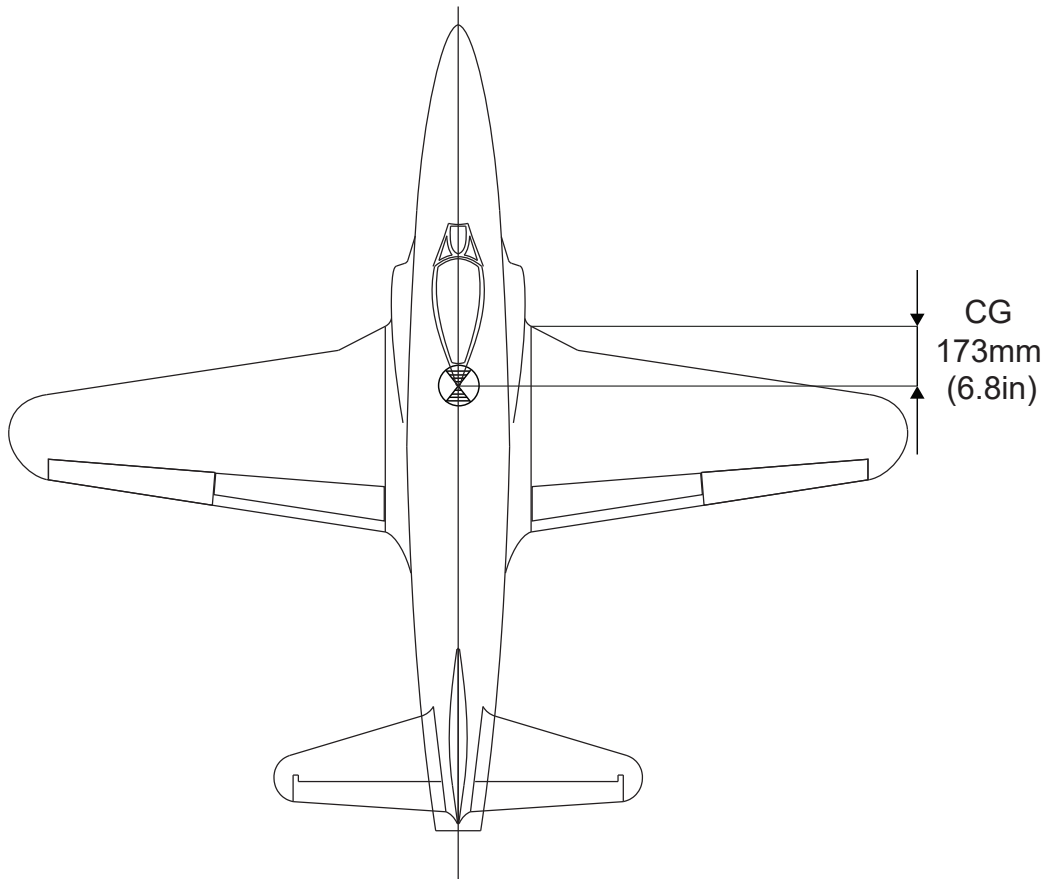


LATERAL BALANCE




After you have balanced a plane on the C.G. You should laterally balance it. Doing this will help the airplane track straighter.

1. Turn the airplane upside down. Attach one loop of heavy string to the engine crankshaft and one to the tail wheel wire. With the wings level, carefully lift the airplane by the string. This may require two people to make it easier.
2. If one side of the wing fall, that side is heavier than the opposite. Add small amounts of lead weight to the bottom side of the lighter wing half's wing tip. Follow this procedure until the wing stays level when you lift the airplane.

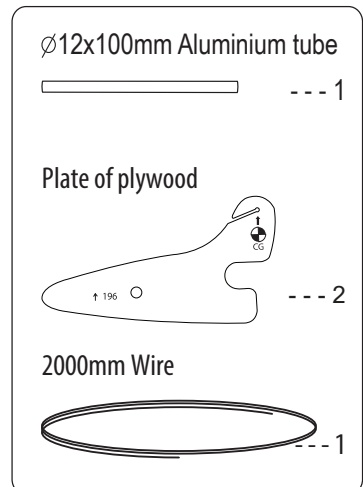

<Top view>

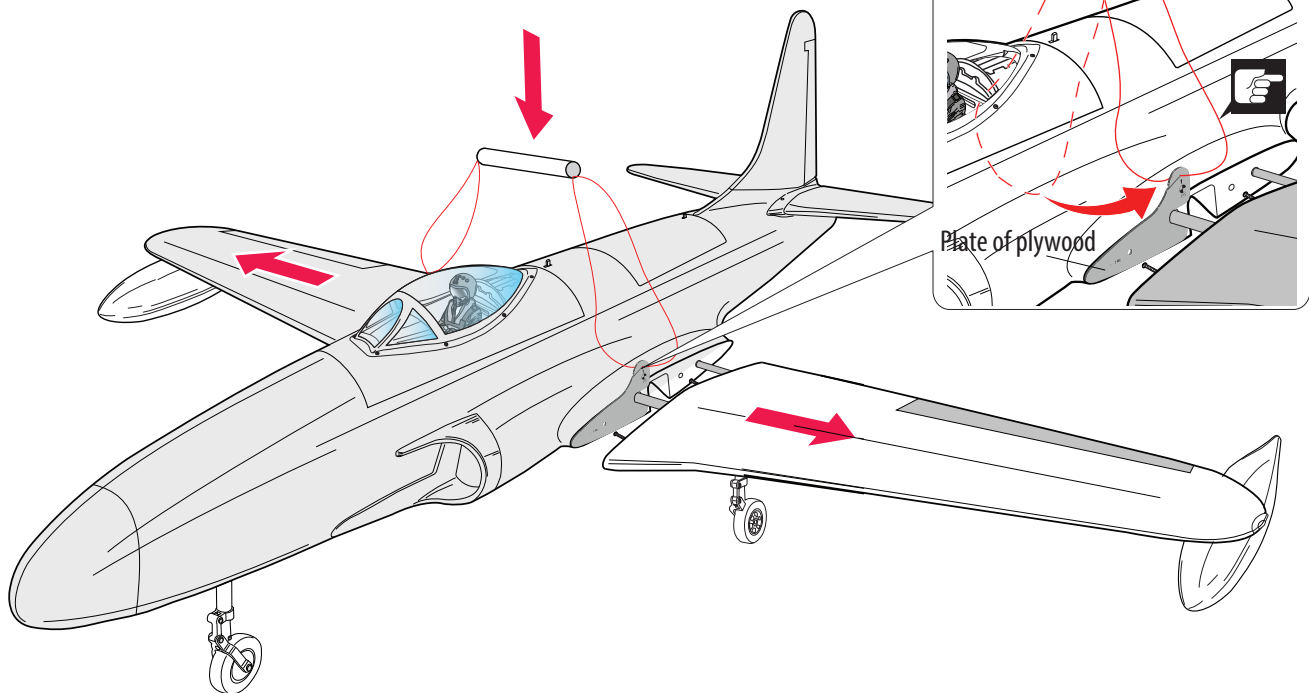


- In order to obtain the CG specified, reposition the receiver and other equipment.
- If not obtain the CG specified, add a weight and adjust.

**Warning!**

- Do not fly before confirming the correct location of the CG. If the CG is incorrect, you lose control of your airplane which leads to accidents.

**CG**

<Top view>

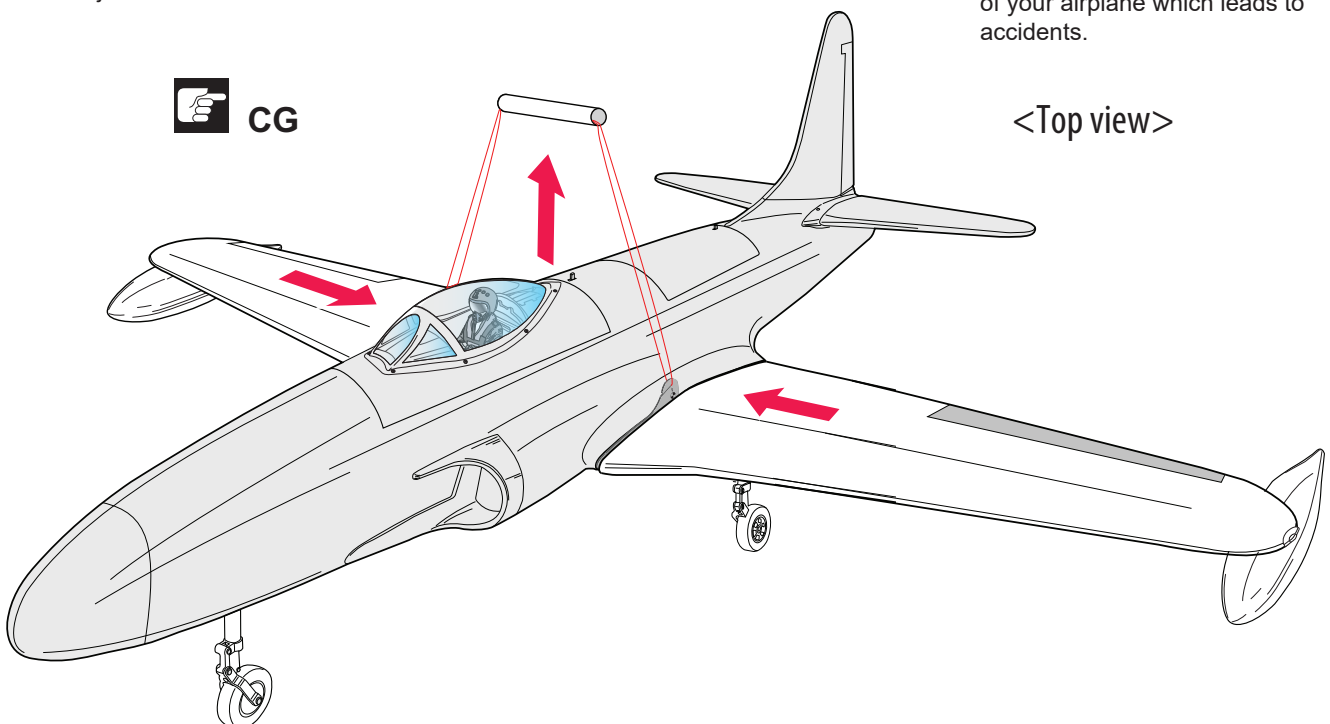

Pay close attention here.

CONTROL THROWS

1. We highly recommend setting up a plane using the control throws listed.
2. The control throws should be measured at the widest point of each control surface.
3. Check to be sure the control surfaces move in the correct directions.

- **LOW RATE**



Ailerons :	14 mm up	14 mm down
Elevator :	14 mm up	14 mm down
Rudder :	16 mm right	16 mm left
Flap :	20mm down for take off	

- **HIGH RATE**


Ailerons :	16 mm up	16 mm down
Elevator :	16 mm up	16 mm down
Rudder :	18 mm right	18 mm left
Flap :	Landing: 30mm down	

FLIGHT PREPARATION PRE FLIGHT CHECK


1. Completely charge your transmitter and receiver batteries before your first day of flying.
2. Check every bolt and every glue joint in your plane to ensure that everything is tight and well bonded.
3. Double check the balance of the airplane
4. Check the control surface
5. Check the receiver antenna . It should be fully extended and not coiled up inside the fuselage.
6. Properly balance the propeller.

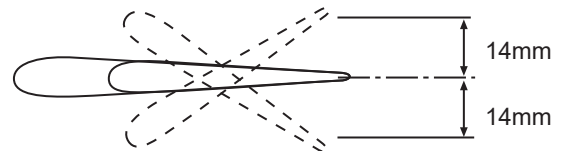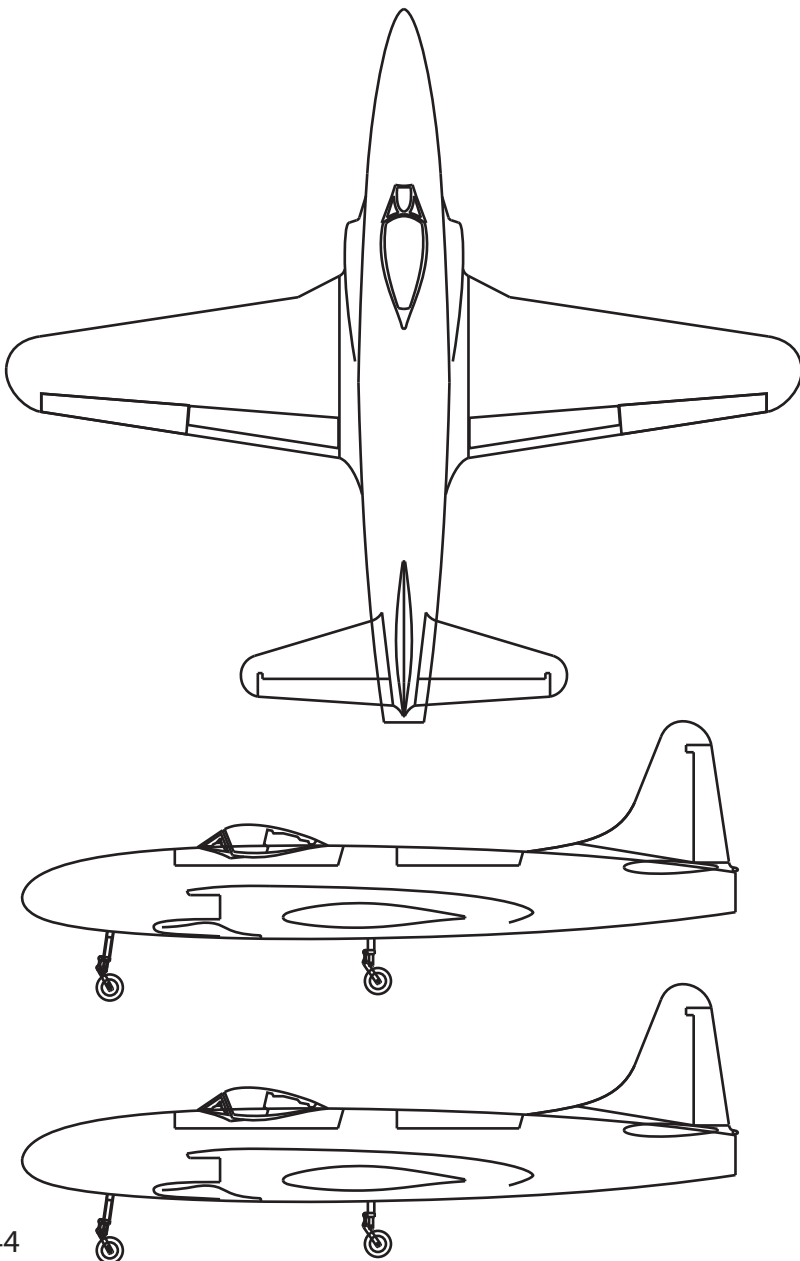


Aileron Control

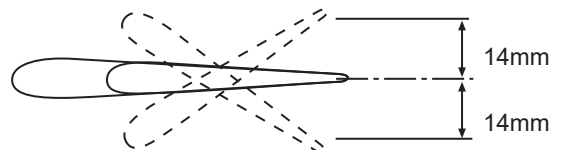


Elevator Control

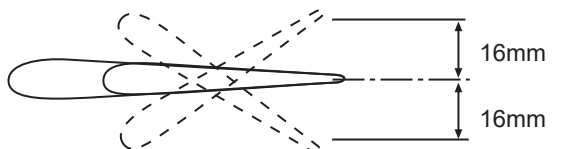

Rudder Control

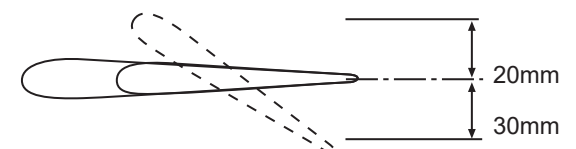

Flap Control

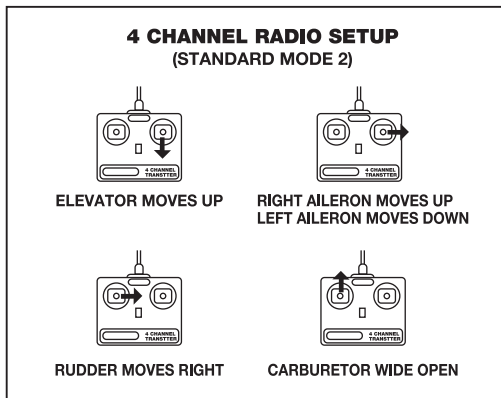

FLIGHT PREPARATION PRE FLIGHT CHECK


1. Completely charge your transmitter and receiver batteries before your first day of flying.
2. Check every bolt and every glue joint in your plane to ensure that everything is tight and well bonded.
3. Double check the balance of the airplane
4. Check the control surface
5. Check the receiver antenna . It should be fully extended and not coiled up inside the fuselage.
6. Properly balance the propeller.



FOR YOUR RADIO INSTALLATION

BASIC CONNECTION FOR AIRPLANE AND ADJUSTMENT OF SERVOS


Example of connection

- For more information, refer to radio system instruction manual.
- Follow instruction manual of Engine and Battery.

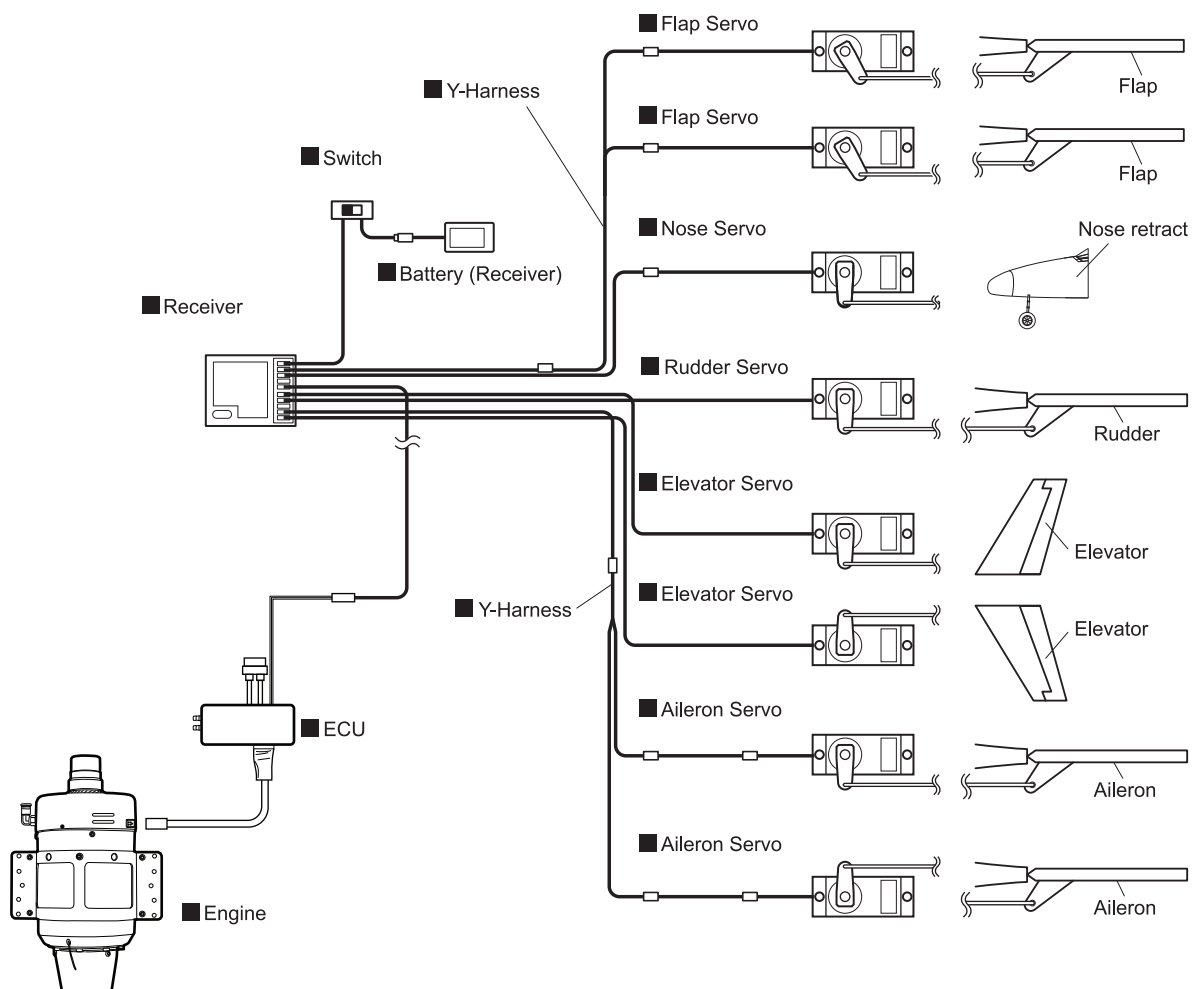

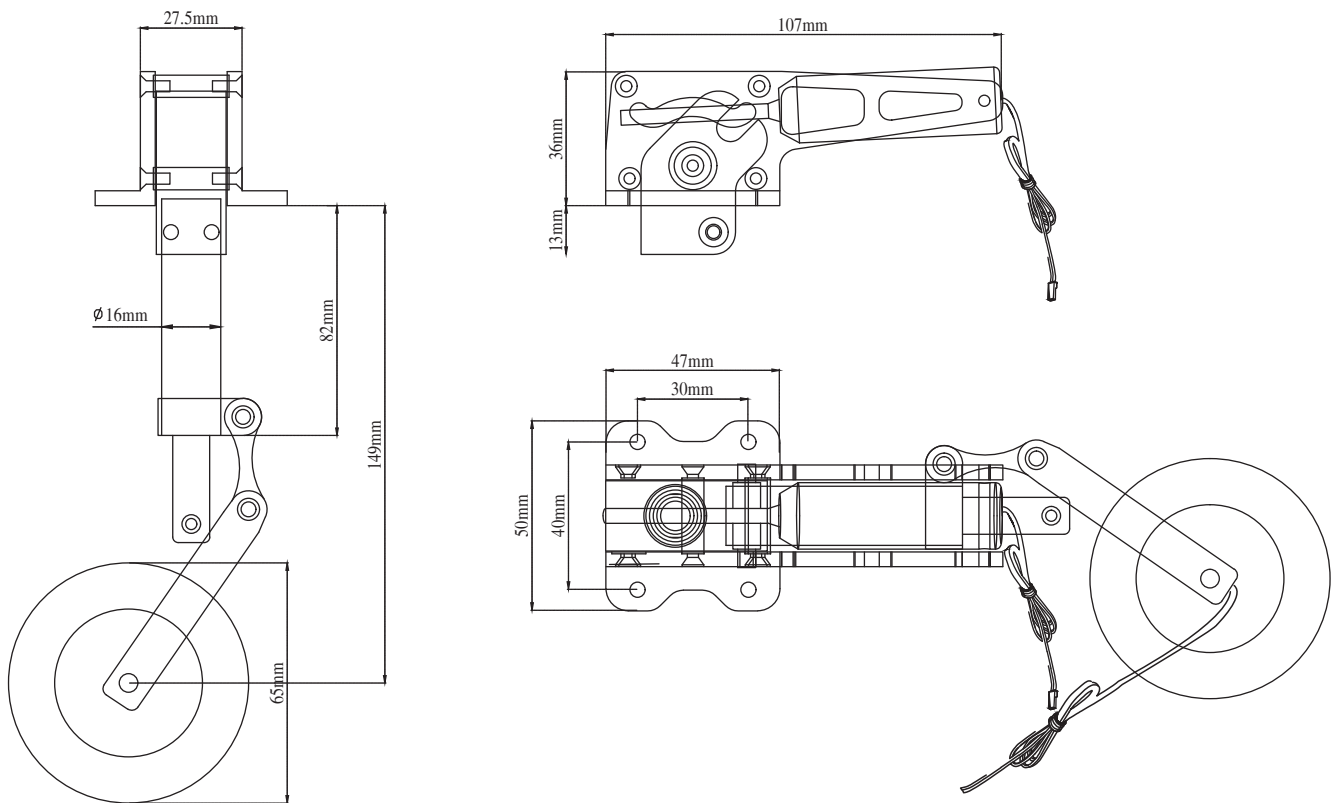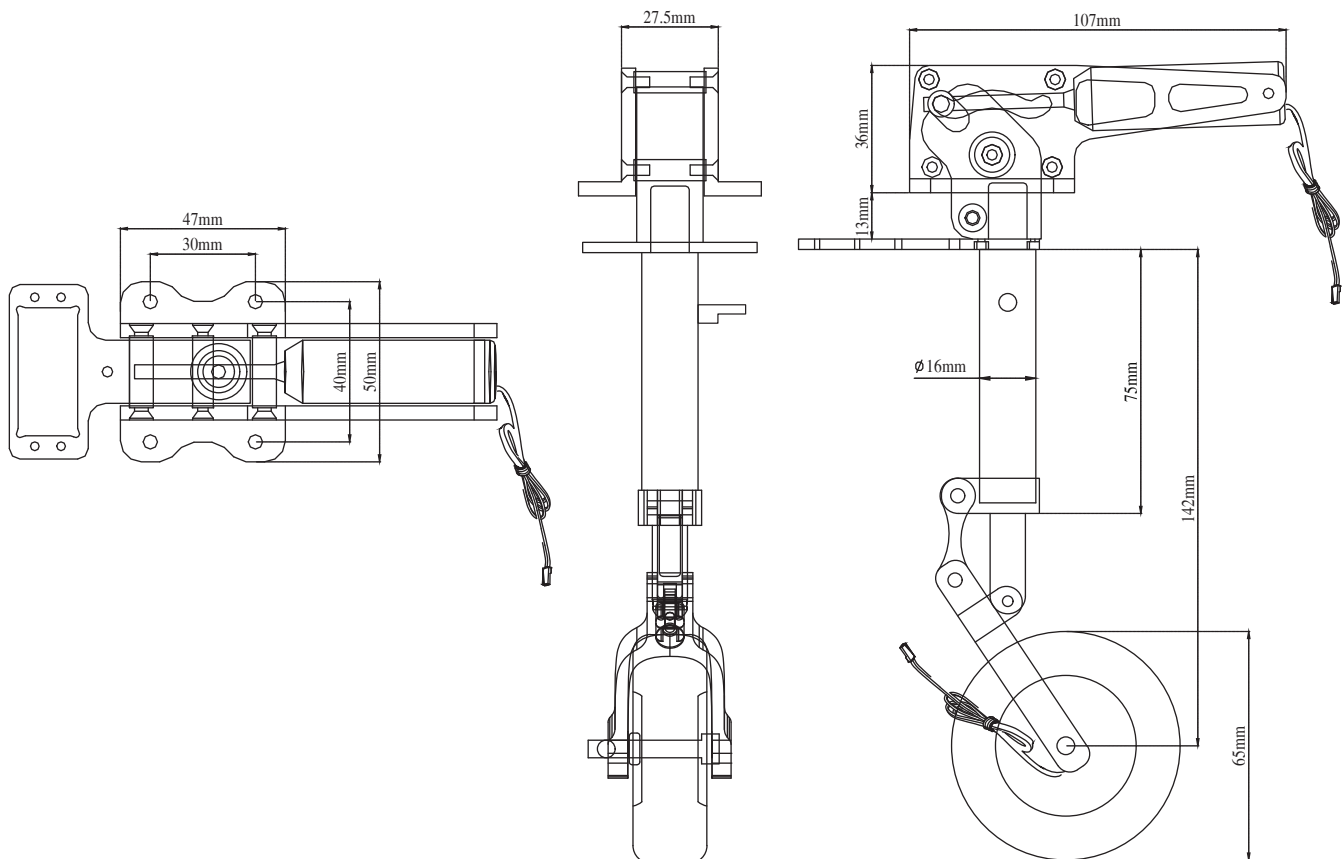
MAIN GEAR DIMENSIONAL DETAIL**NOSE GEAR DIMENSIONAL DETAIL**

EXPLODED VIEW

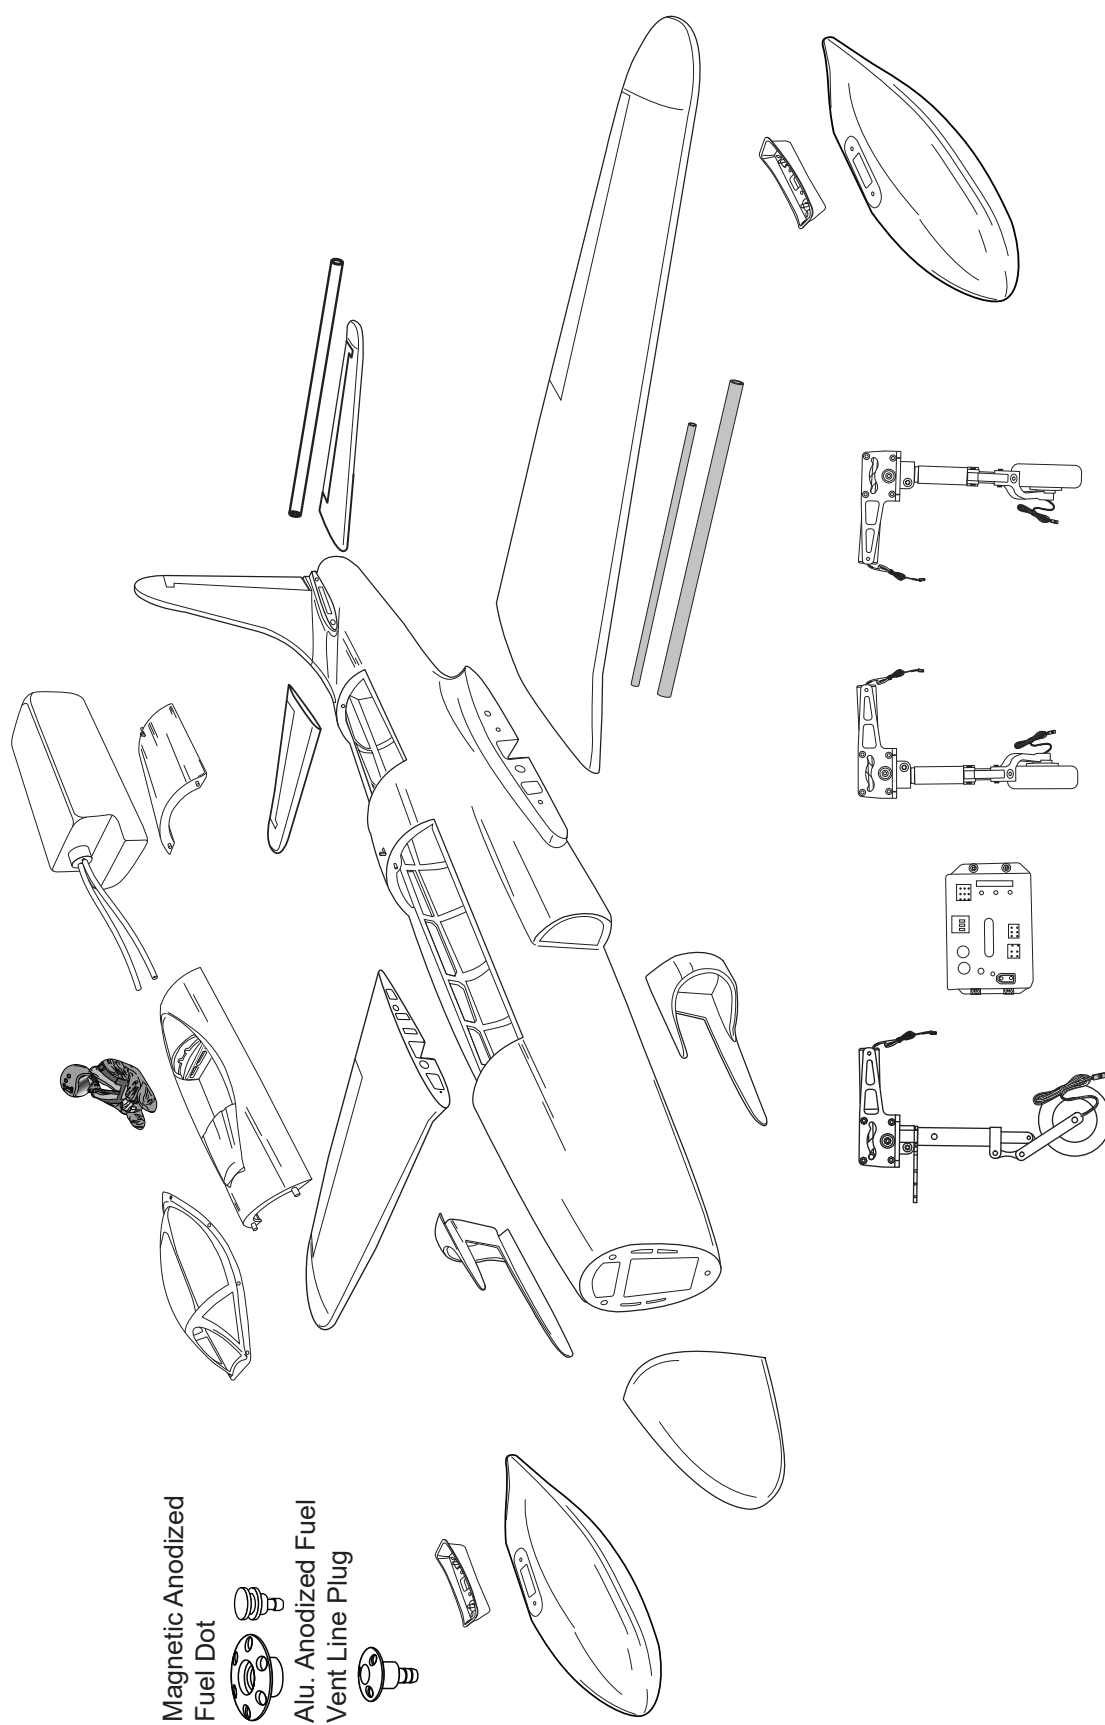


DECORATION


Top view

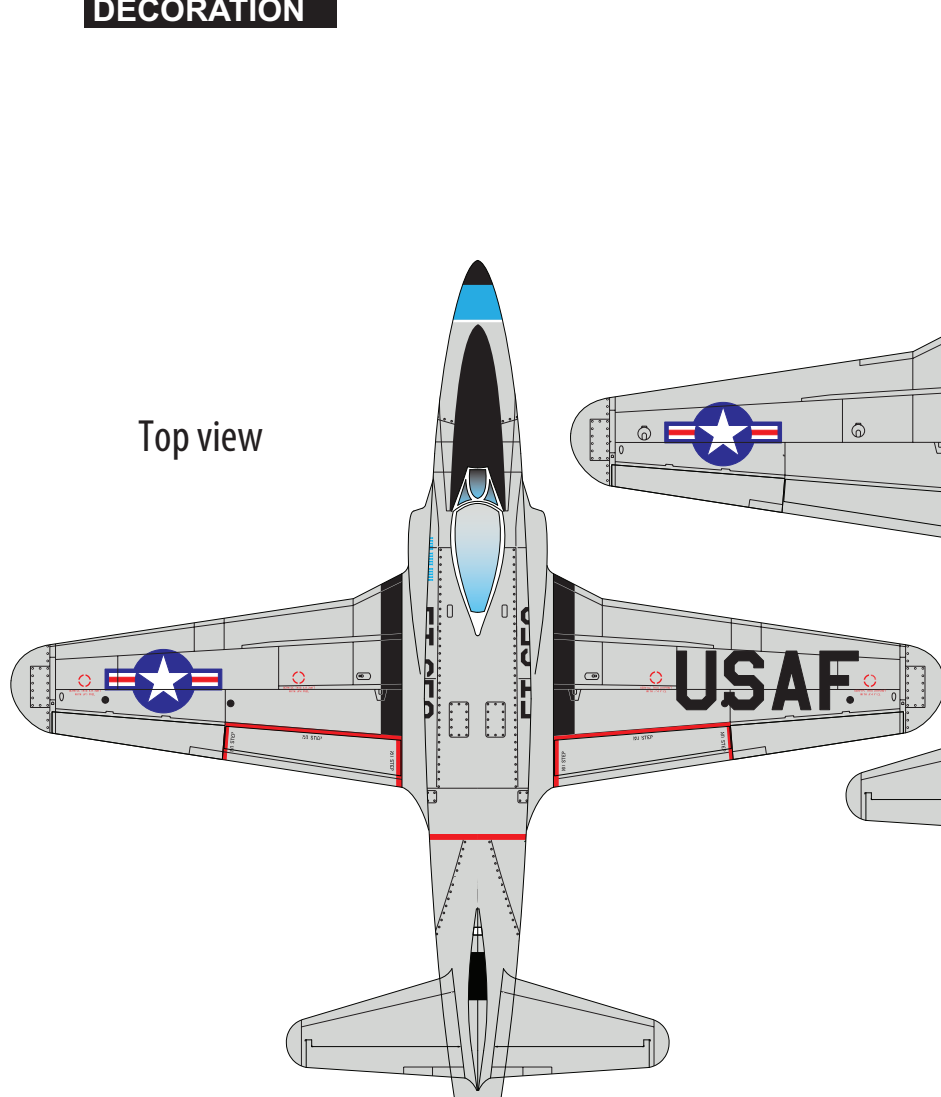


Bottom view

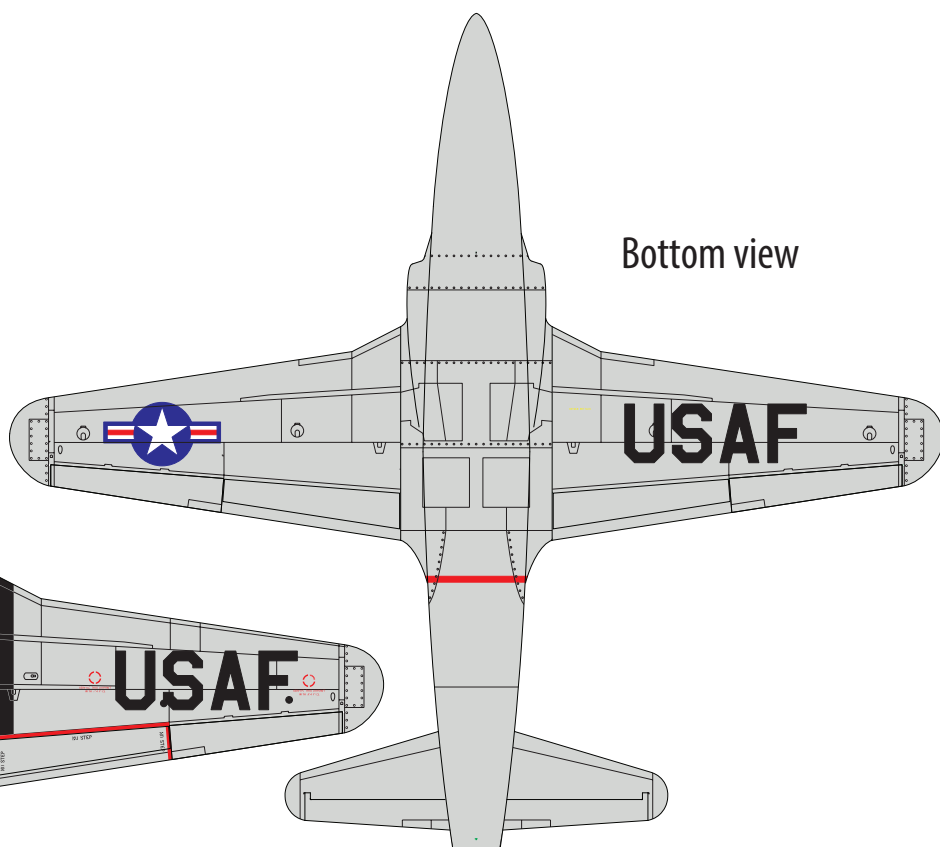

< Side view > Right

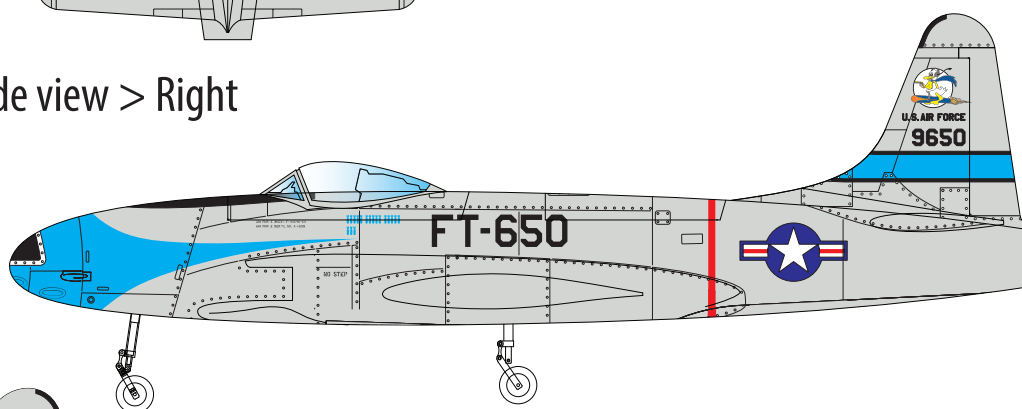

< Side view > Left

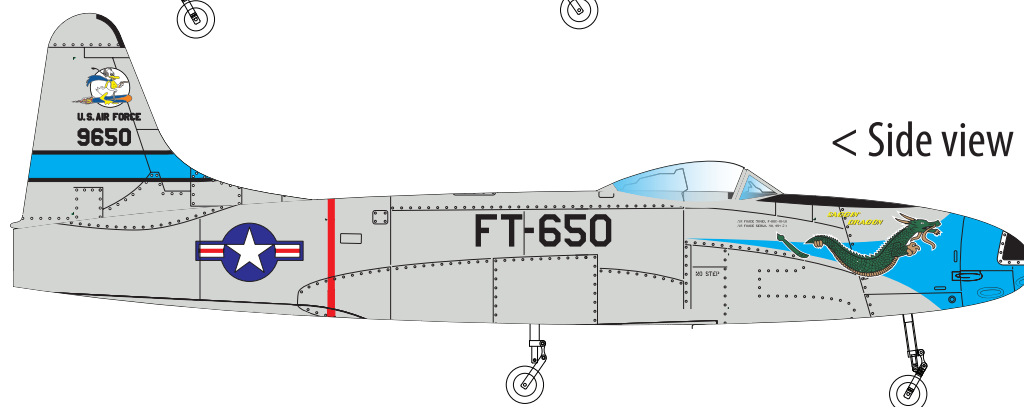

Black



Navy Blue



Light Blue



Dark Green



Yellow



Red




Orange




Silver

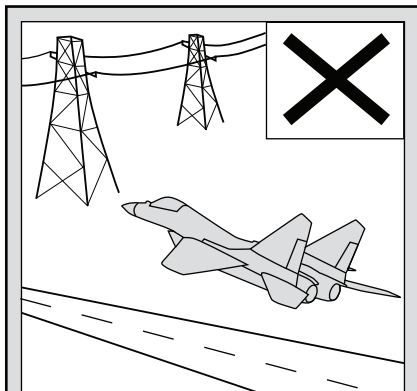


I/C FLINGT WARNINGS


NEVER fly near power lines, aeri-als or other dangerous areas includ-ing airports, motorways etc.

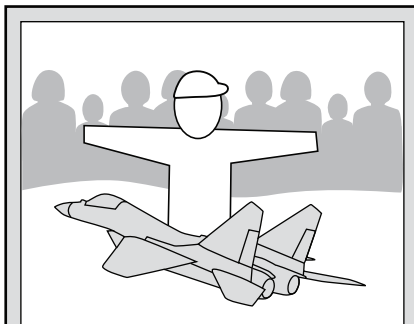


Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.

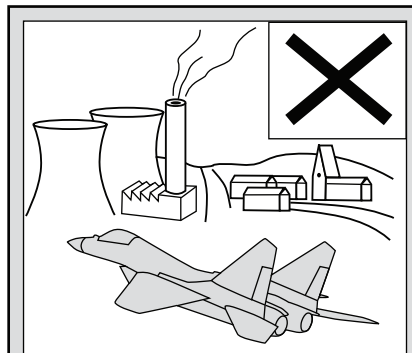

Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc. **NEVER** fly your aircraft close to people or built up areas.

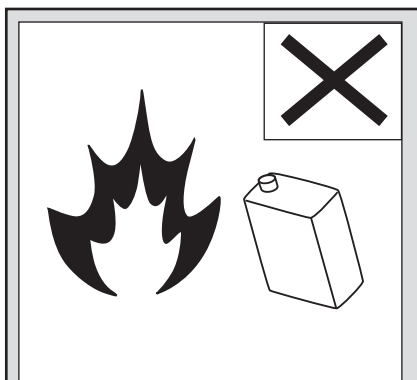

DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

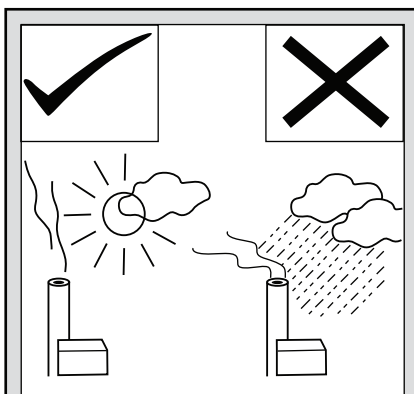

NEVER fly in wet conditions or on windy or stormy days.