

MINT Main Sail Luff Tabling Opening Cutout Tips

Refer to Mint IOM digital manual Below:


Page 12

FITTING THE MAINSAIL TO THE MAST & BOOM

Point 3


Tie the mainsail luff to the mast at the head, tack and the three other points along the luff.

Cut a 150mm length of cord for each fixing. At the head and foot of the sail thread it through the sail eye and around the mast, tie it off to form a loop around the mast leaving a gap of 2-3mm between the back edge of the mast and the front of the sail luff. Repeat for the other three points along the luff ensuring that the cord goes around the mast and the jackstay wire. Again, leave a 2-3mm gap.

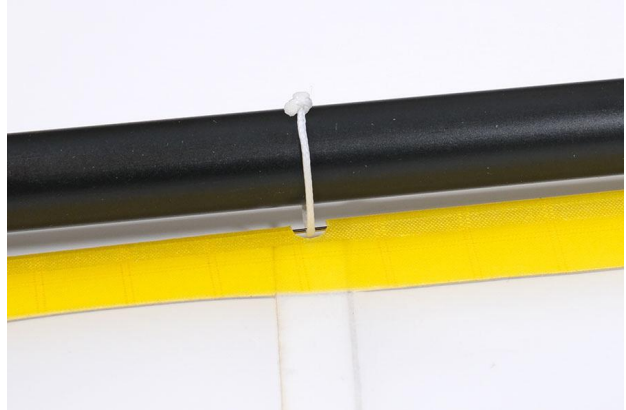

TIPS:

1) For MINT A, B, C main sails, there are three SEAMS on panelled main sails. Use scissor to have three small cutout openings on the middle of the three seams on the luff tabling.

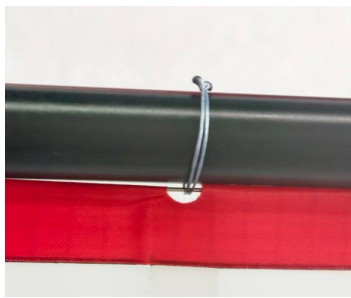

2) Suggest to use a 2.3mm diameter drill bit to help tie the loop cord to have suitable 2-3mm gap.

