

Your Futaba update compatible servo programming can be updated easily online. When functions are improved, the update file can be downloaded from our website.

For more information, check out web site for FAQ regarding updating this product.

*The display screen is an example. The screen depends on the PC.


Required for update

CIU-3
*CIU-2 cannot be used.



Hub
(PC-LINK adapter)


Battery for receiver

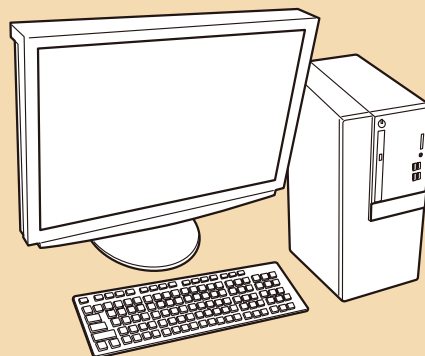

PC
(Access is possible by the web)

Preparations

1. Install the driver for the CIU-3 onto your PC.

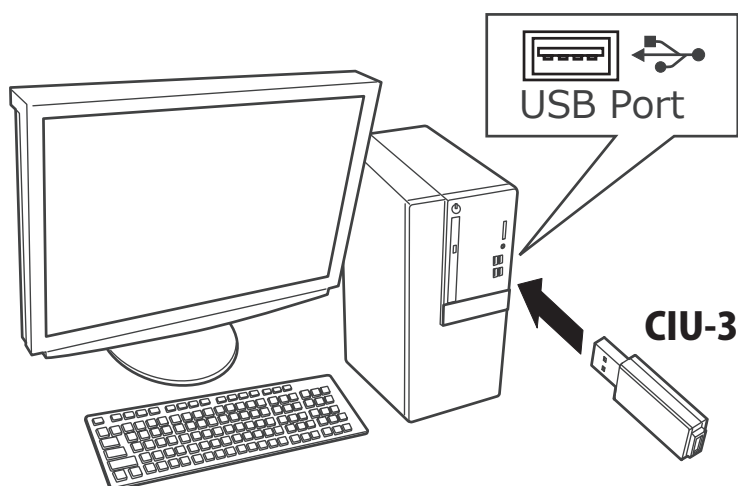


- ◆ When the **CIU-3** is first connected to the PC, once the CIU-3 is connected to the PC, download the recommended driver software Using Windows Vista, the "Found New Hardware Wizard" window appears on the screen. Click "Locate and install driver software".
- ◆ Refer to the manual of the CIU-3 for further information.

Updating procedure


1. Download the zip file of the update data from our website or your local distributor's website.

<https://www.rc.futaba.co.jp/>


<https://futabausa.com>

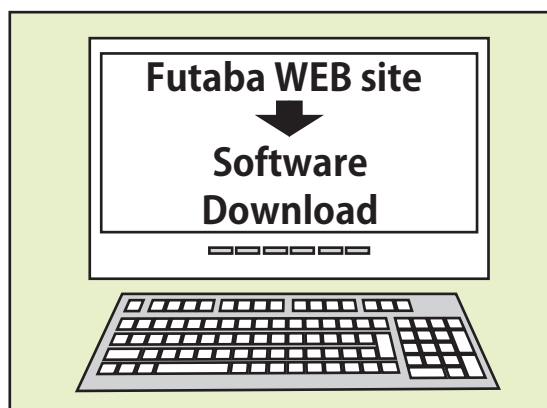



2. Extract the zip file on your computer.

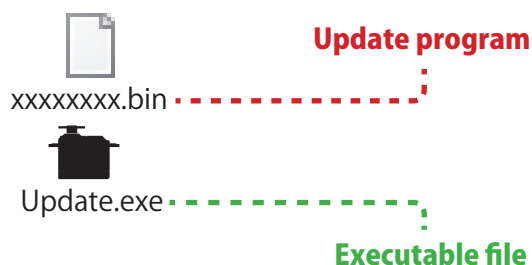


3. Connect as shown in the figure.

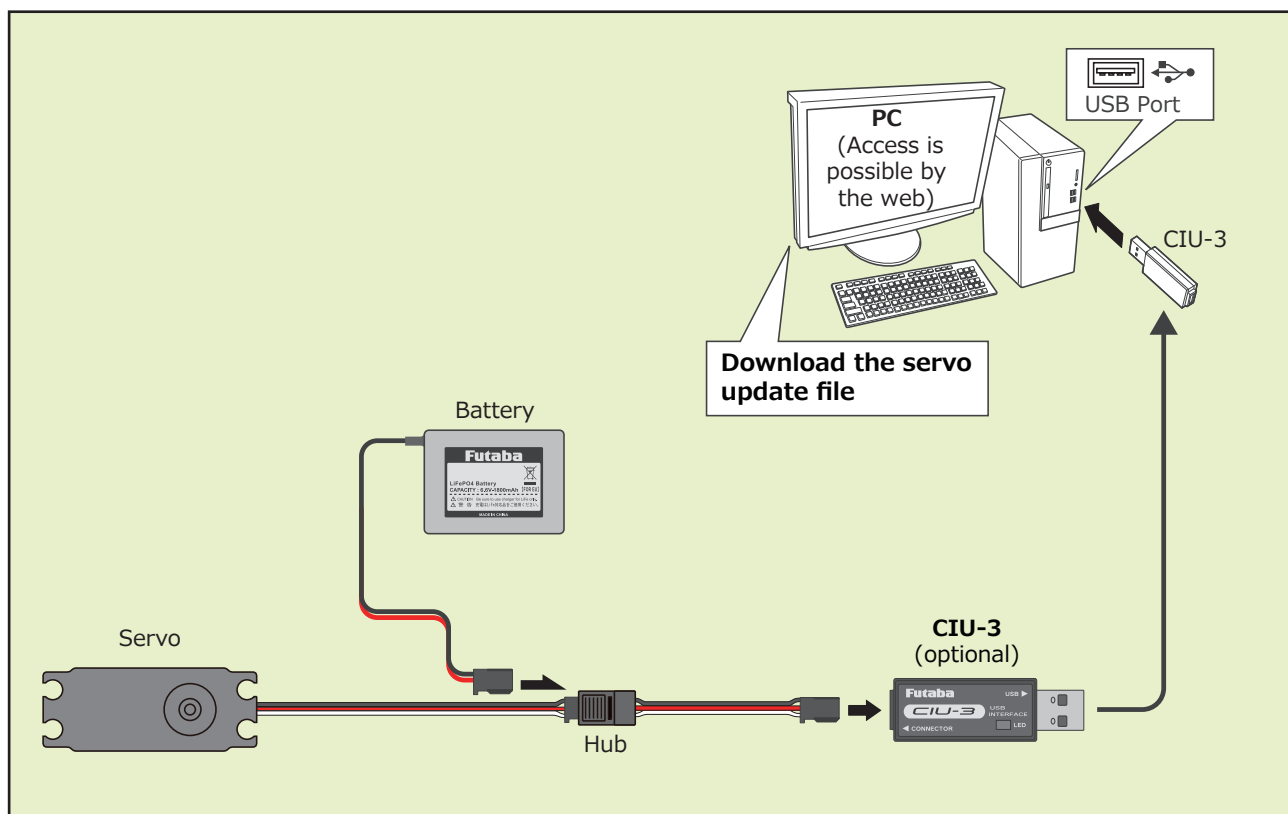

4. Operate the PC update.

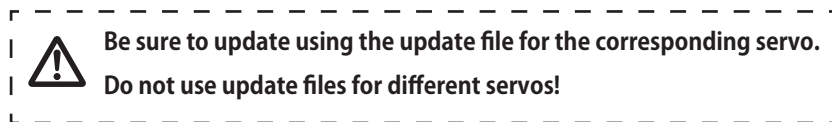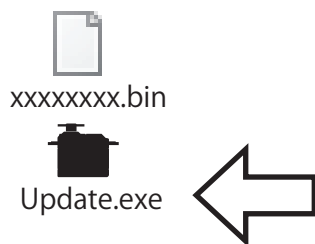

5. Click "WRITE".

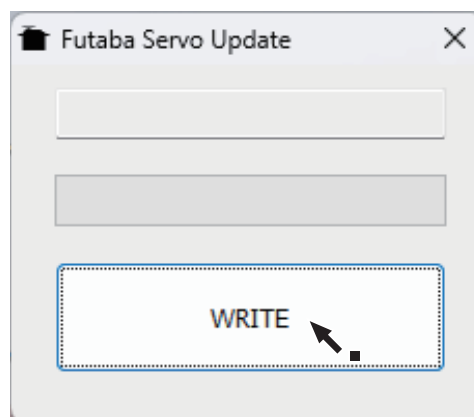


6. Click "OK".




7. Wait for about 40 seconds.

Don't turn off the power !

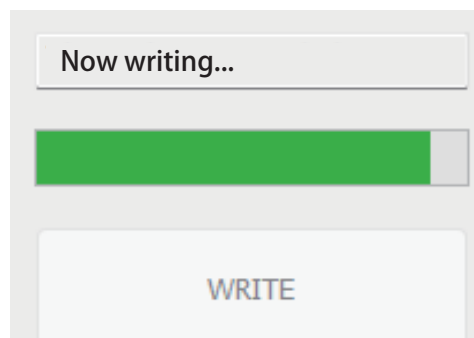

8. A message will be displayed when the update is complete.

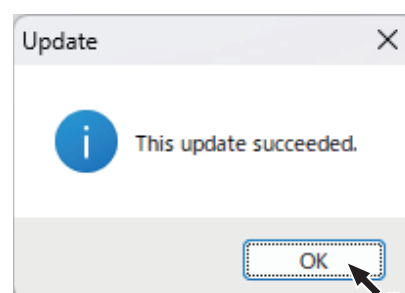

9. This completes the update process.
Click "OK" and then remove the cable.

10. Be sure to check the each function before use.

S-A601 V3.0 UPDATE

1. Improved operational stability when connected via S.BUS.