

T26SZ PRO

Thank you for purchasing a Futaba T26SZ PRO digital proportional R/C system. The main instruction manual is shared with the T26SZ model. This manual includes information on the differences between the T26SZ PRO and the T26SZ, as well as instructions for adjusting the metal gimbal. Be sure to read this manual in conjunction with the T26SZ manual available on the Futaba website before using the product.

Differences between T26SZ and T26SZ PRO




◆ Adjusting the stick stroke



The T26SZ PRO allows you to mechanically restrict the movement range of the stick in all directions (up, down, left, and right).

Stroke adjustment can be performed without opening the rear case. Follow these steps:


Position of the hexagonal screw for each stroke adjustment (EX. Mode 2)

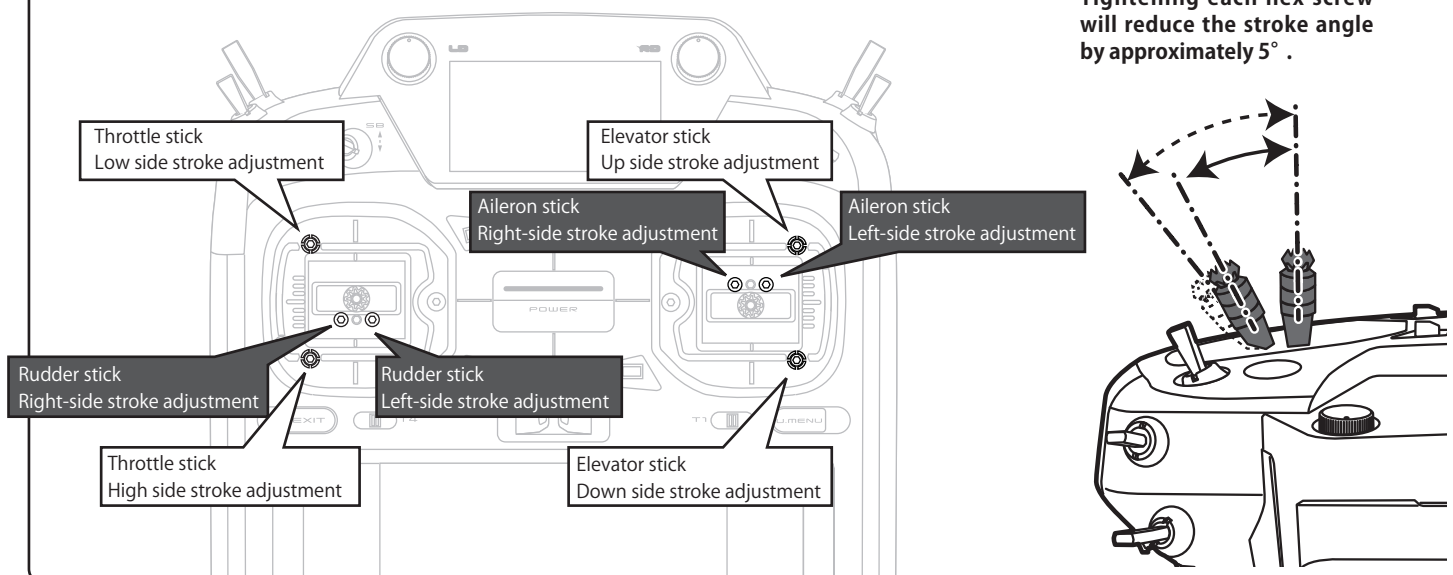

Throttle and elevator (vertical movement) control adjustments

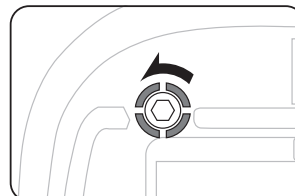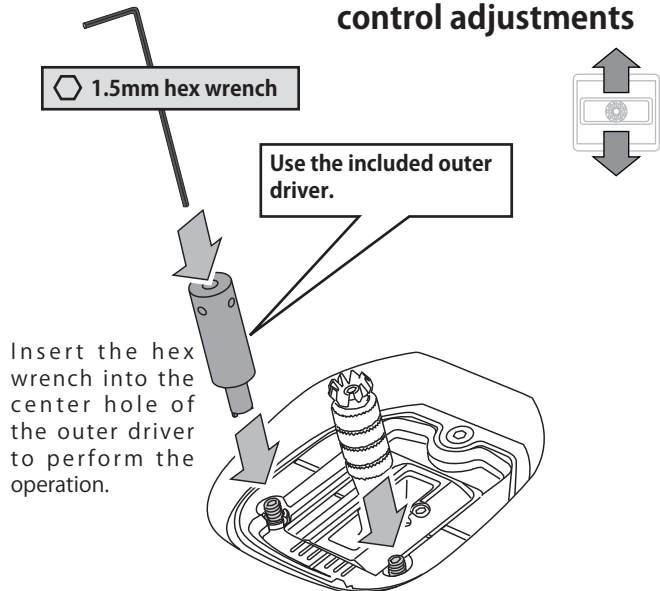


1. Loosen the outer screw slightly using outer driver.

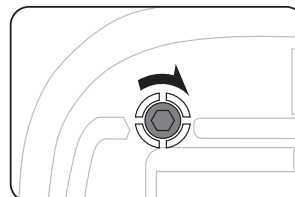

2. Tighten and adjust the inner hex screw using a hex wrench.

Tightening the screw reduces the stroke narrow.

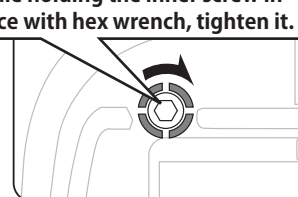

While holding the inner screw in place with hex wrench, tighten it.

3. After completing the adjustment, hold the inner hexagonal screw in place while tightening the outer screw with outer driver.





Vertical movement restrictions

The hexagonal head of the screw must not protrude above this surface.


OK



The stroke width should not be narrower than this line.

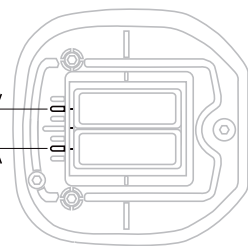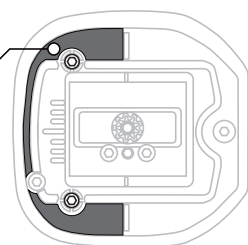


Aileron and rudder (horizontal movement) control adjustments

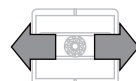

1.5mm hex wrench

Right-side stroke.
Tightening → Narrow

Left-side stroke.
Tightening → Narrow

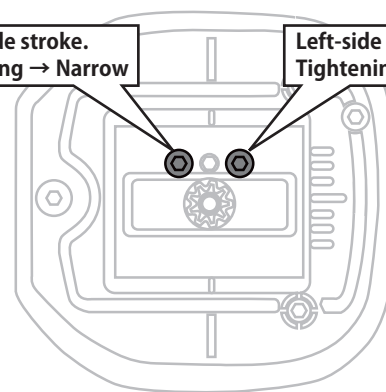

Horizontal movement restrictions

The hexagonal head of the screw must not protrude above this surface.

OK




The hexagonal head of the screw must not extend below this surface.



⚠ After adjusting each stroke, test the stick by moving it up, down, left, and right to ensure it operates smoothly. If you encounter any resistance or sticking, loosen the screw to increase the stroke range.

After adjusting the stroke, open the System menu → H/W Setting → Calibration, and perform stick calibration.

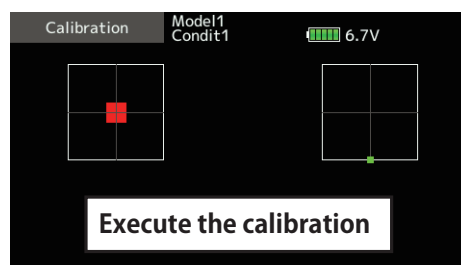

Change the stroke, be sure to perform calibration.

FUTABA CORPORATION

1080 Yabutsuka, Chosei-mura, Chosei-gun, Chiba-ken, 299-4395, Japan
TEL: +81-475-32-6051, FAX: +81-475-32-2915

©FUTABA CORPORATION 2025, 9 (1)