

Software Update

Whenever improvements and new functions are available, the software of your T4PM radio transmitter can be updated easily online free of charge. The zip file of the update data will be shown on our website. You can download it and make a copy on your microSD card.

Below is the procedure for the software update.

Caution: Before you update the software, the battery that is connected to the T4PM should be fully charged.

Update method

- 1 Extract the zip file on your computer. The "FUTABA" folder will be created on your computer and copy the "FUTABA" folder onto your microSD card.


Note: If the microSD card has already had "another FUTABA" folder before you make a copy, the "FUTABA" folder is **OVERWRITTEN**.

- 2 Insert the microSD card with "FUTABA" folder that contained the update software into the SD card slot on your the T4PM.


- 3 Turn on the T4PM power while pressing down the "END" button. The software update is started.



- *Insert the card with the metal terminals side at the bottom.
- *Remove the card by pushing it in and then pulling it out.
- *Install and remove the card by pushing it in until you hear a click.

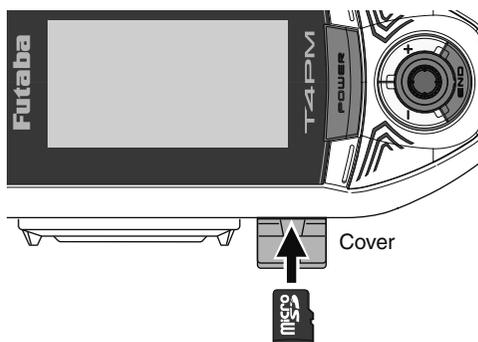

- 4 When the software update is completed, "SUCCESS" message is shown on the LCD display of your T4PM.

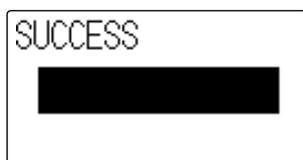

- 5 Turn off the power switch of your T4PM and remove the microSD card from the card slot.

(Commercial product)

SD standard and SDHC standard microSD cards
SD/SDHC format. Maximum size 32GB.
(Some models may not be operated by card.)
SDXC format is not supported.



*The data in the memory card cannot be guaranteed regardless of the contents and cause of trouble or damage. Always back-up the valuable data in the memory card.

Caution

! Always insert and remove the microSD card in the state in which the transmitter power is off.
If the microSD card is removed while being accessed (read or write), the card itself and the data may be destroyed.

⊘ Do not install and remove the microSD card with the microSD card slot facing your face.
If you remove your fingers quickly, the microSD card may fly out and strike your face and is dangerous.

⊘ Since the microSD card is a precision device, do not subject it to unreasonable force or shock.