



LED Lighted Bumper Kit Installation Instructions - Slash® & Slash® VXL Covers Part #5894

Kit contents:



- Front bumper assembly
- Rear bumper assembly
- Power Y-harness
- 3x15mm button-head cap screw (BCS) (2)
- 4x12mm countersunk cap screw (CCS) (4)
- Zip ties (3)

Tools required:


- 2mm hex wrench
- 2.5mm hex wrench
- Silicone grease

A. POWER WIRE HARNESS INSTALLATION

- Remove the receiver box cover by removing the two 3x8mm BCS (Fig. 1).
- Remove the wire clamp by removing the two 2.5x8mm CS (Fig. 1).
- Route the power Y-harness into the receiver box and plug it into any open channel on the receiver. Position the power Y-harness in a wire guide of the receiver box.
- Apply a small bead of silicone grease (*part #1647, sold separately*) to the wire clamp foam. Install the wire clamp and tighten the two 2.5x8mm CS securely. **Note:** Make sure not to pinch the wires in the clamp.
- Make sure the blue O-ring seal is properly seated in the groove in the receiver box so that the cover will not pinch it or damage it in any way.
- Reinstall the cover on the receiver box and tighten the two 3x8mm BCS securely. Inspect the cover to make sure that the O-ring seal is not visible.

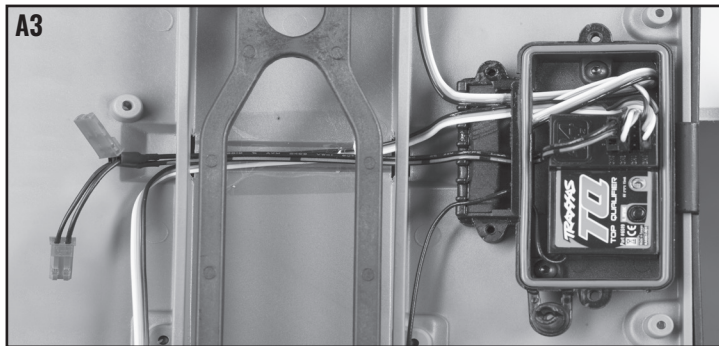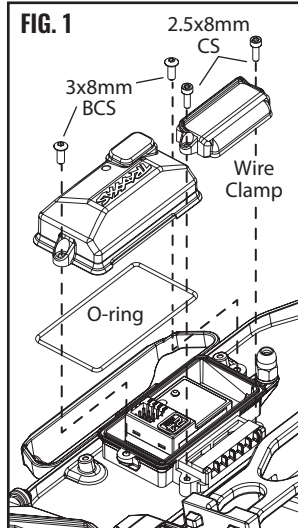

B. FRONT BUMPER AND HEADLIGHTS INSTALLATION

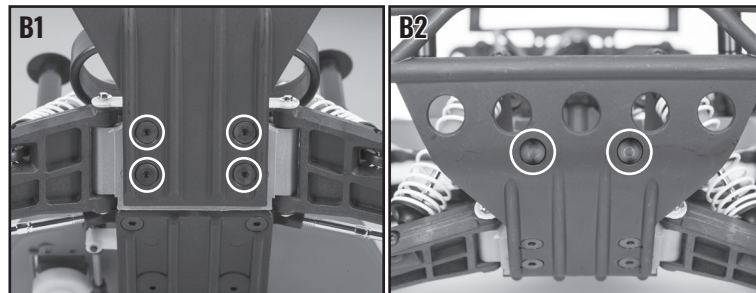

- Remove the existing front bumper from the chassis by removing the 4x12mm CCS (4).
- Remove the 4x12mm BCS (2) securing the front bumper to the bumper mount.
- Attach the new front bumper to the chassis with included four 4x12mm CCS.
- Attach the new front bumper to the bumper mount with the 4x12mm BCS (2) removed in step B2.
- Route the wire harness from the front bumper along the chassis toward the receiver box. Plug the red male connector from the power Y-harness into the red female connector from the headlights harness.
- Use the included zip ties to secure the harness to the chassis (*refer to Fig. 2 Chassis Wiring for more detail*).



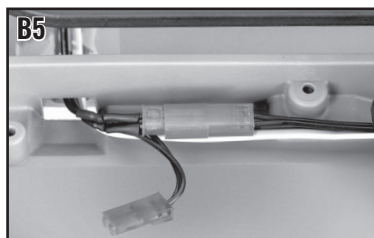



FIG. 2 CHASSIS WIRING

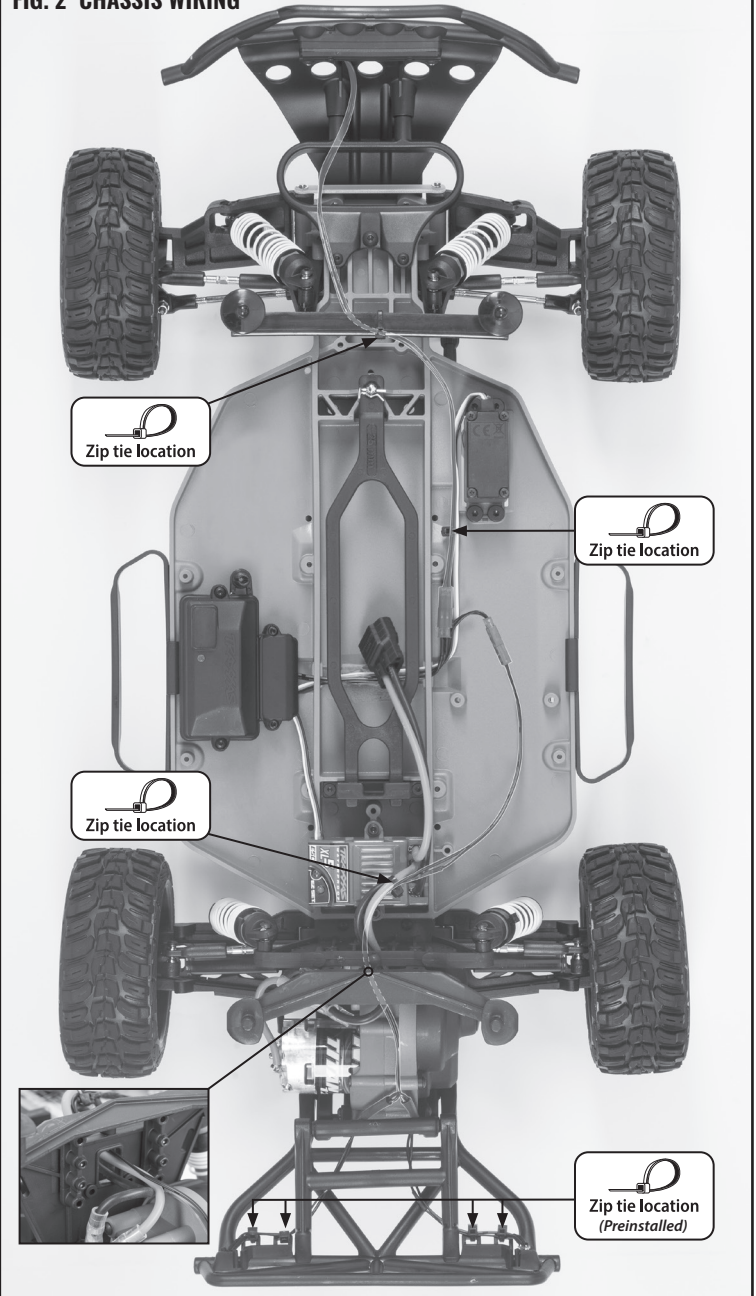

C. REAR BUMPER AND TAIL LIGHTS INSTALLATION

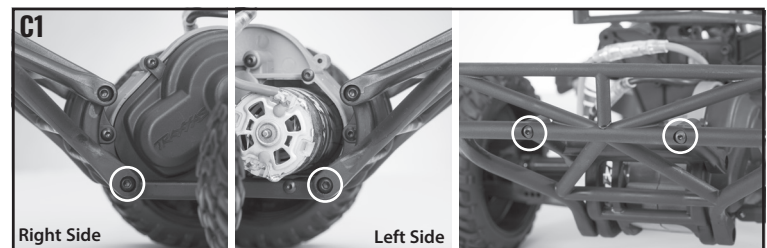

- Remove the 3x15mm BCS (2) and 3x12mm shoulder screws (2) that secure the rear bumper to vehicle.
- Attach the new rear bumper assembly using the included 3x15mm BCS (2) and 3x12mm shoulder screws (2) removed in step C1.
- Route the wire harness from the rear bumper guard along the chassis toward the receiver box. Plug the red male connector from the power Y-harness into the red female connector from the tail lights harness.
- Use the included zip tie (1) to secure the harness to the chassis (*refer to Fig. 2 Chassis Wiring for more detail*).

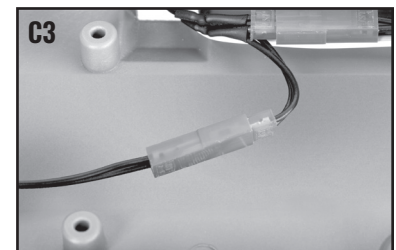

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)