


XRAY XB8

#355472 DRIVE SHAFT BOOT (2)

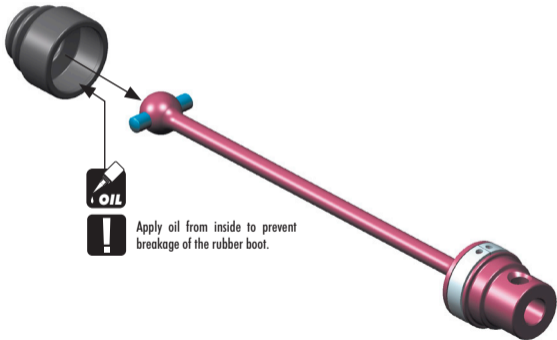

Apply oil from inside to prevent
breakage of the rubber boot.